





MIDI/Audio control surface with motorized faders for production







The lightning flash with arrowhead symbol within an equilateral triangle.is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure, that may be of sufficient magnitude to electric shock to persons. Le symbol.clair avec point de fl che intriteur d un triangle quilat rat est uillis pour alerter lutilisateur de la pr sence i int rieur du coffret de vottage dangereux non isol d ampleur suff

exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servingi) instructions in the literature accompanying the appliance. Le point d exclamation lint rieur dun triangle quilat al est employ pour alerter les utilisateurs de la presence d instructions importantes pour lenotionnement et l entretien (service) dans le livret d instruction accmpagnant l appari l.

Important Safety Instructions

- 1. Read this manual thoroughly before using this unit.
- 2. Keep this manual for future reference.
- Take notice of and comply with all warnings included in the user's manual or indicated on the appliance.
- 4. Follow all instructions included in this manual.
- Do not expose this unit to rain or moisture. Avoid having water or other liquids spilled on this unit.
- 6. When cleaning the cabinet or other parts of this appliance, use only a dry or slightly damp soft cloth.
- 7. Do not block any ventilation openings or interfere with the proper ventilation of this unit. Install in accordance with the manufacturer's instructions.
- 8. Do not use or store near any heat sources such as radiators, heat registers, stoves, or other heatproducing appliances.
- 9. Do not interfere with the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. These are designated for your safety. If the provided plug does not fit into your outlet, consult an electrician.
- Protect the power cord from being walked on or otherwise damaged by items placed on or against them. Particular attention should be given to the plugs, receptacles, and the point where the cord exits the appliance.
- 11. To avoid the risk of electrical shock, do not touch any exposed wiring while the unit is in operation.
- 12. Only use attachments/accessories specified by the manufacturer.
- 13. Unplug this unit and all connected electrical equipment during lightning storms or when left unused a long period of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way or fails to operate normally.

WARNING: To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture

Contents

Introduction	4
What's in the package?	4
Register your ICON ProAudio product to your personal account	5
Features	6
Top Panel Lavout	7
Rear Panel Lavout	9
Bottom Panel Lavout	10
Getting Started (Connected with OconEX G2 (1 - 3units))	11
Connecting Your QconPro G2 Controller	.11
Cubase	14
Logic Pro	16
Pro Tools	18
Getting Started	20
Connecting Your OconEX G2 Controller	20
Cubase	22
Nuendo	23
Logic Pro	24
Samplitude	25
Ritwig	27
Reason	28
Reaner	20
Studio Ope	20
Ableton Live	21
Dro Toole	32
Audition	22
Sonar	24
Download the Mac iMan from your Personal Liser	.54
Download the Mac Imap from your reisonal oser	26
Installing iMan TM Software for Windows	27
iMon TM OconEX C2 offware nanol	20
Connections	10
Eirmware ungrade	40
Participation the feature default acttings	41
Specifications	44
	40
Appandix A	40
	47
Logio Dro V	.47 61
LOGIC PTO A	10.
PIO IOOIS HUI	03
Ableton Live Tu	91
	01
Uubase	01
Logic Pro X1	02
Pro Tools HUI	04
	05
	07
Cubase	07
Logic Pro X	08
Pro loois HUI	110
	a ()

Introduction

Thank you for purchasing the ICON ProAudio QconEX G2 Midi/Audio control surface. We sincerely trust this product will provide years of satisfactory service, but if anything is not to your complete satisfaction, we will endeavor to make things right.

In these pages, you'll find a detailed description of the features of the QconEX G2, as well as a guided tour through its front and rear panels, step-by-step instructions for their setup and use, and full specifications.

Please register the product on our website at the below link **www. iconproaudio. com/registration**:

Please follow the step by step procedures starting from input the device's serial number to your personal information etc. By registering your product online, you will entitle to several different services and after-sales supporting at our ACS help center by visting our website at **www.iconproaudio.com**. Also, all the registered products under your account will be listed on your personal product page where you could get update information such as firmware/driver upgrade, software bundle and user manual download etc for your device.

As with most electronic devices, we strongly recommend you retain the original packaging. In the unlikely event the product must be returned for servicing, the original packaging (or reasonable equivalent) is required.

With proper care and adequate air circulation, your QconEX G2 will operate without any trouble for many years. We recommend that you record your serial number in the space provided below for future reference.

What's in the package?

- QconPro EX G2 USB-MIDI Controller x 1pc
- Quick Start Guide x 1
- USB2.0 Cable x 1
- AC adaptor x 1pc
- Screwdriver x 1

Register your ICON ProAudio product to your personal account

1. Check serial number of your device

Please go to http:// iconproaudio.com/registration or scan the QR code below.



Input your device's serial number and the other information on the screen. Click "Submit".

A message will pop up showing your device information such as model name and its serial number - Click "Register this device to my account" or if you see any other message, please contact our after-sales service team

2. Log in to your personal account page for existing user or sign up for new user

Existing user: Please log into your personal user page by inputing your user name and password.

New user: Please click "Sign Up" and fill in all the information.

3. Download all useful materials

All your registered devices under your account will show on the page. Each product will be listed along with all its available files such as drivers, firmware, user manual in different languages and bundled software etc. for download. Please make sure you have download the necessary files such as driver before you begin device installation.

Features



- 8 touch-sensitive motorized channel faders
- 12-segment LED level metering for channels
- 8 x dual function encoder knobs (Enter & rotate)
- 11-segments LED surrounding the encoders to indicate the rotating position
- Large backlit LCD to display channel name, control values etc. for each channel
- Illuminated buttons for each channel including Rec-enable, Solo, Mute, Select and Monitor
- MackieControl and HUI Universal emulation
- iMap Self midi mapping software is provided for user-defined mode (MIDI Learn)
- Expandable to 32-channel control surface with 3units of QconEX G2 and a QconProG2
- User A & User B 1/4" TRS connectors for connecting with pedals
- Class-compliant with Windows XP, Vista (32-bit), Windows 7/8/10 (32-bit & 64bit), and Mac OS X (IntelMac)
- USB 2.0 high speed connectivity
- Firmware upgrade available simply via USB connection and iMap software
- Robust aluminum and metal casing with Kensington lock port

Top Panel Layout



Note: Function operates slightly difference between DAWs. Please refer to your DAW manual for each function and overlap the provided labeling template according to your currently used DAW. The following description is based on the functions that operate in Apple Logic.

1. LCD backlit display

The two-line backlit LCD display shows the parameter values as you adjust them and also provides feedback about channel selections, operating modes, and more.

2. Channel faders

The eight 100mm motorized faders are generally used for controlling the track volume of your DAW. Depending on your DAW, you may use the "Flip" button to switch the function of these faders to change other settings. They are all touch sensitive to allow override automation the moment you touch a fader. Also, they are motorized; they will automatically move to reflect the current level of the selected channels in your DAW application. Any automation recorded in a project will be reflected by the fader positions. Any parameter adjustments made with these faders will be displayed directly above on the LCD display.

3. Channel level metering

The 12-led meter shows the associated channel level.

4. Dual function encoders

The dual function encoders act as push-button and rotary controls. When an encoder is pressed, it may be used to change modes of operation or to change what appears in the display above the channel strips. When an encoder is rotated, depending on its assigned function, it can be used to adjust a channel's pan, send level, or plug-in parameters.

5. Encoder LED

The 11-LED's surrounding the encoder light up to indicate the relative position of the rotation without having to look at your computer.

6. Control buttons

Recording channel control buttons section

REC buttons - Activate and deactivate the recording state of the associated channel. The switch will light red when the channel is armed.

SOLO buttons - Activate and deactivate the solo state of the associated channel. The switch will light green when the channel solo state is on and other channels will be muted. You can solo multiple channels by pressing SOLO buttons on additional channels.

MUTE buttons - Activate and deactivate the mute state of the associated channel. The switch will light blue when the channel is muted.

SEL buttons - The SEL buttons activate the associated channels in the DAW software in order to perform a specific operation (for example, when adjusting EQ with the ASSIGNABLE ENCODERS, the SEL switch will be used to choose the channel you want to adjust). The switch will light red when the channel is selected.

7. DAW Selector section

QconEX G2 has built-in Mackie Control, LogicPro protocols & HUI for different DAW's such as Cubase[™], Samplitude[™], Ableton Live[™], Logic Pro[™] and Pro Tools[™].By selecting the correct Mackie control (HUI/LogicPro) protocol, QconEX G2 will automatically map the major functions and work seamlessly with that DAW.

<< / >> buttons - These arrow buttons are used to scroll through the mode list. The name of the mode will display on the LCD.

DAW button - Press to enter the mode selection.

To change your QconEX G2 Control mode, turn the power switch off and on to enter the Control selection mode. Select your desired mode from the list with the "<<" / ">>" buttons.

(Note: You have to select the "Unit Number" for QconEX G2 before you select the DAW.)

Tips: The DAW button cannot be activated if DAW software is running.

Tips: QconEX G2 will memorize your last selected DAW mode and re-enter the same mode a few seconds after it has been switched on. (i.e. DAW mode selection is not needed if the last mode is being used.)

Rear Panel Layout



1. User A / User B 1/4" TRS connectors

These 1/4" TRS connectors are able to connect to foot pedals (SPD-01) to activate your selected functions. To set their parameters, select USER A and USER B parameters in Mackie control mode.

2. USB port

Connect your QconEX G2 to your Mac/PC via this USB port.

3. 12V/5A power adapter

Connect the provided power adapter here. (Note: QconEX G2 is not able to work without the provided power adapter connected. The USB bus power is not able to provide sufficient power supply for QconEX G2.)

Bottom Panel Layout



1. LCD contrast adjustment

Rotate the adjustment knob with the provided screwdriver to adjust the contrast of the LCD. Rotate anticlockwise to reduce the contrast and clockwise will increase.

Getting Started (Connected with QconEX G2 (1 - 3units)) Connecting Your QconPro G2 Controller

1. Connect the QconPro G2 to your Mac/PC via the USB port

Choose a USB port on your Mac/PC and insert the wide (flat) end of the USB cable. Connect the cable's other end to the QconPro G2. Your Mac/PC should automatically "detect" the new hardware and notify you that it is ready to use.

(**Tips:** We recommended that you use ICON's OneHub USB hub, which allows you to connect up to 3 units of QconEX G2, if you are not connecting QconEX G2 directly to your computer's USB port.)







2. Select the DAW.

Press <</>> to scroll through the mode list after pressed the "DAW" button to make the selection.









QconEX G2 (3)



4 QconPro G2

0

Press " << " & " >> "to select unit(s) of Qcon Pro X Three Qcon EX G2



Three Qcon EX G2 have installed



3. Setup your DAW

The QconPro G2 has built-in Mackie Control, LogicPro and HUI protocol which will save you considerable trouble in setting up the device at your DAW. Simply add the "Mackie Control" or "HUI" device under the "MIDI Controller" on your software. After the Mackie Control or HUI device has been added, select QconPro G2 controller as your MIDI input and output device in your DAW.

For the software below, please use Mackie Control

Nuendo/Cubase[™], Samplitude[™], Bitwig[™], Reason[™], Reaper[™], Studio One[™] and Ableton Live[™].

The software below, please use logic Pro Mackie Control

or the software below, please use HUI Pro ToolsTM.

(**Tips:** You may also refer to our website at **www.iconproaudio.com**, where you'll find set up illustrations for different DAW's in each controller (QconEX G2) product page's "Setup demo" section.

For DAW's not on our setup demo list, please refer to your software user manual for hardware setup.)

Device Setup + - 14 Mackie Control 2 Devices iCON QCONPRO G2 V1.00 MIDI Input - 🚹 MIDI MIDI Output 3 iCON QCONPRO G2 V1.00 MIDI Port Setup Remote Devices User Commands Reset Mackie Control Button Category Command Mackie Control 2 User A 700m Zoom Tracks Exclusive Mackie Control 3 User B Mackie Control 4 F1 Create Markers from Hi Hitpoints Track Quick Controls VST Quick Controls Shift+F1 Transport F2 Record Time Max Shift+F2 Time Display F3 Video Shift+F3 Video Player F4 🗰 VST Audio System Shift+E4



Cubase

📀 Device Setup				×
+ - K	Mackie Cor	itrol 3		
Devices	8 ICON QCON EX	2 G2 V1.00	- MID	I Input
MIDI		2 G2 V1.00	MID:	I Output
	User Comman	ds	Re	<u>eset</u>
Mackie Control 2	Button	Category	Command	
Mackie Control 3	User A			^
Mackie Control 4	User B			
Track Quick Controls	F1			
VST Quick Controls	Shift+F1			
	F2			
Record Time Max	Shift+F2			
Time Display	F3			
	Shift+F3			

📀 Device Setup			— ×
+ - 14	Mackie Contr	ol 4	
Devices 11	ICON QCON EX1	G2 V1.00	- MIDI Input
MIDI	ICON QCON EX1	G2 V1.00	MIDI Output
Remote Devices	User Commands		Reset
Mackie Control 2	Button	Category	Command
Mackie Control 3	User A		^
10 Mackie Control 4	User B		
Track Quick Controls	F1		
VST Quick Controls	Shift+F1		
Record Time Max	F2 Shift+F2		
Time Display	F3		
	Shift+F3		
Video Player	F4		
VST Audio System	Shift+F4		
ASIO4ALL v2	F5		
WST System Link	Shift+F5		
	F6		
	Shift+F6		⊻
	Short	Smart Switch De	lay
	🗹 Enable Auto	Select	
	Relay Click		
		Rese	et Apply
		13-[OK Cancel

Logic Pro

1	Logic Pro X	File	Edit	Track	Navigate	Record	Mix	View
•	About Logic	Pro X						Landmove
ſ	Preferences	5		•			n	: גחר
2	Control Sur	faces		•	Learn As	signment	for "P	an" 🖁 🖁
	Key Comma	ands		•	Controlle	er Assignr	nents	. <u>\</u>
	Sound Libra Provide Log	ary Jic Pro	Feedb	ack 🕨	Setup Preferen	3		
	Learn Abou	ogic R t Main	emote Stage		Rebuild Bypass /	Defaults All Contro	l Surfa	ces
	Services			•				
	Hide Logic I	Pro X		жн				

Ma Ko Ma Ma Ma Ma	anufacturer A org -Audio (Midiman) ackie Designs	Model microKONTROL iControl Baby HUI	Module
Ko M- Ma Ma Ma	org -Audio (Midiman) ackie Designs ackie Designs	microKONTROL iControl Baby HUI	microKONTROL iControl
Ma Ma Ma Ma	-Audio (Midiman) ackie Designs	iControl Baby HUI	iControl
Ma Ma Ma	ackie Designs	Baby HUI	
	- alvia Daniana		HUI
Ма	ackie Designs	HUI	HUI
	ackie Designs	HUI Channel Strips only	HUI
Ma	ackie Designs	MCU Pro	Logic Control
4 Ma	ackie Designs	Mackie Control	Logic Control
Ma	ackie Designs	Mackie Control C4	Logic Control
Ma	ackie Designs	Mackie Control Extender	Logic Control
Ma	ackie Designs	Mackie Control Extender Pro	Logic Control
Ra	adikal Technologies	SAC-2K	SAC-2K
Ro	bland	SI-24	SI-24
ss	SL	Nucleus (left)	Logic Control
ss	SL	Nucleus (right)	Logic Control
Tea	ac / Tascam	US-2400	US-2400



Edit v New v	8		
Device: Mackie Control	rol #2		
	Output Port: iCON QCON EX2 G2 V1.00		
9	Input Port: iCON QCON EX2 G2 V1.00	100000000	222222222 : 12
	Module: Logic Control		
	Model: Mackie Control		
	Version: (unknown)		
	Color:	O.	
Transport Bi	lutton Click: 🗹		
Touchless move		Mackie Control	Mackie Control
Fader Touch			
Backlight Saver Tim			
CS Group: Control Su	urface Group 1		



_					
Edit v New v 12					
Device: Mackie Control #2					
Outout Port: iCON QCONPRO G2 V1.00					
13 Input Port: ICON QCONPRO G2 V1.00		222222222	22222222	22222222	
Module: Logic Control					
Monies (unlessue)			and the second second		
Color					
Color:					
		Maskie Centrel	Maakia Cantral	- Maakia Cantral	
		Mackie Control		Mackie Control	
CS Group: Control Surface Group 1					
Clock Display: Beats					
Channel Strip View Mode: Arrange					
FO D Provide	- ·				

Pro Tools

		- (1)				×
Synchronization N	lachine Control	MIDI Controllers	Ethernet Controllers	Mic Preamps	Satellites VENU	
c	#1 #2 	Type no JI • Pre JI • CONT	Send Tr sedefined ► iCON QCC JC2106 ✓ iCON QCC	0 # Ch's DNPRO G2 V1.00 DN EX1 G2 V1.00	-4	0
	#3 HI	JI (icono JI (icono		DN EX2 G2 V1.00 DN EX3 G2 V1.00	J	
Is onization Machine Cont	rol MIDI Cont	rollers Ethernet	Controllers Mic Pream	nps Satellites	VENUE	
Is	rol MIDI Cont	rollers Ethernet	Controllers Mic Prean	nps Satellites	VENUE	2:50
Is onization Machine Conf	Type	Receive From	Controllers Mic Prean Send To 5 # none 8	nps Satellites	VENUE	2:50
Is conization Machine Cont #1 #2	Type	Receive From KCONQC1106 * KCONQC2106 *	Controllers Mic Pream Send To 5 # none 8 • Predefined 1 iCC	nps Satellites	VENUE	2:50
Is tonization Machine Cont #1 #2 #3	Type Type HUI HUI	Receive From CONAC1106 * CONAC2106 * CONAC2106 * CONAC2106 *	Controllers Mic Pream Send To 5 # none 8 • Predefined 1 iCC ICONQC3108 V iCC	Ch's Satellites	VENUE	2:50 6
Is tonization Machine Cont #1 #2 #3 #4	Type HUI HUI HUI HUI	Receive From KCONAC1106 KCONAC2106 KCONAC2106 KCONAC2106 KCONAC2106 KCONAC2107	Controllers Mic Pream Send To 5 # none 8 Predefined P iCC ICONQC0112 iCC iCC	Satellites Satell	VENUE V1.00 V1.00 V1.00 V1.00 V1.00 V1.00 V1.00 V1.00	2:50 6





Peripherals		_	_	_	_	_	_		
Synchronization	Machine Control	MIDI Control	llers Eth	ernet (Controllers	Mic	Preamps	Satellites	VENUE
								_	
		Туре	Receive Fr	om	Send To		# Ch's		ľ
	#1 💻 HU		iCONQC1106	•	iCONQC1106	-	8 *		
	#2 HL	л <mark>12</mark> – Г	ICONQC2	3 -	iCONQC2106	•	8 *		
	#3 📕 HU	л 👻	none		iCONQC3106	•	8 *		
-	#4 📕 HU	II 👻	• Predefine	:d ▶	iCON QCO	NPR	D G2 V1.00		
	L				iCON QCO	N EX	1 G2 V1.00		II
					ICON QCO	N EX	2 G2 V1.00		– I I
				_ ķ	ICON QCO	N EX	3 G2 V1.00		14







Getting Started Connecting Your QconEX G2 Controller



Connect the QconEX G2 to your Mac/PC via the USB port. Choose a USB port on your Mac/PC and insert the wide (flat) end of the USB cable. Connect the cable's other end to the QconEX G2. Your Mac/PC should automatically "detect" the new hardware and notify you that it is ready to use.

(Tip: We recommended that you use ICON's OneHub USB hub, which allows you to connect up to 3 units of QconEX G2, if you are not connecting QconEX G2 directly to your computer's USB port)

2 Select the "Unit number"

Press <</>> to scroll through "Unit number 1 to 3" and press the "DAW" button to confirm. You may connect up to a maximum of 3 units of QconEX G2.



Select the DAW

 $\ensuremath{\mathsf{Press}}\xspace <</> >>$ to scroll through the mode list after pressed the "DAW" button to make the selection.



1. Setup your DAW

Activate the ICON ProAudioQconEX G2 controller in your DAW or MIDI software using "MIDI Setup" or "MIDI Devices".

For example: ,Cubase[™] and Nuendo[™], choose Mackie Control at the "Device List".

(Note: Every application does this a little differently, so refer to your software user manual for the settings.)

Cubase



Nuendo





Logic Pro







Edit v New v			
▼ Device: No Device			
CS Group: Control S	urface Group 1	Install	
	Manufacturer A	Model	Module
	Korg	microKONTROL	microKONTROL
22222222	M-Audio	iControl	iControl
	Mackie Designs	Baby HUI	HUI
	Mackie Designs	HUI	HUI
	Mackie Designs	HUI Channel Strips only	HUI
	Mackie Designs	Logic Control	Logic Control
	Mackie Designs	Logic Control XT	Logic Control
12-	Mackie Designs	Mackie Control	Logic Control
	Mackie Designs	Mackie Control C4	Logic Control
	Mackie Designs	Mackie Control Extender	Logic Control
	Radikal Technologies	SAC-2K	SAC-2K
	Roland	SI-24	SI-24
	Tascam	FE-8	FW-1884
	Tascam	FW-1082	FW-1884
	Tascam	FW-1884	FW-1884
			Add Scan

Control Surface Setup

 Edit
 New

 ✓ Device:
 Mackie Control

10 Output Port: ICON OCON EX1 G2 V1.00 15 Input Port: ICON OCON EX1 G2 V1.00 Module: Logic Control Module: Mackie Control Version: (unknown) Color: Transport Button Click: ✓

Samplitude

New Virtual Project (VIP)	E	#	Q 1/8	
Open Import) }	System/Audio Varispeed/Scrub Settings	Ŷ	111
	2021 20223	MIDI Options 3	- <u>-</u>	
<u>S</u> ave Froject Save Project <u>a</u> s Save Project Copy	Ctrl+S Shift+S Ctrl+Alt+S	Synchronization active <u>S</u> ynchronization Setup MMC Setup	G Shift+G	
Save Project as Template		Edit Keyhoard Shortcuts and Menu		
Save Project as EDL Save Object		Edit Toolbars Reset Toolbars	, ,	
Save Session		Font Selection		
Export	•	Font for Manager		
<u>Track Bouncing</u> Range <u>Bouncing</u> (internal Mix MIDI Bouncing	down)	Metronome Options Definition Color Setup	Shift+Tab	-
Export project as AAF/OMF		Undo Definitions		
R <u>e</u> name Project Clean up	•	Dithering Options (Triang.) Advanced Buffer Settings		
Close Project		Resampling Quality Options Lock Definitions		
Project Properties	•	Set Preroll time		
Program Preferences	2	Destructive effect calculation		



System Options Audio System	^	Controller Setup	Customize Controller	Options	Fader Scaling	
- Audio Devices		 Mackie Control 	-9	A del Nam		
MIDI				Add New 8		
Hardware Controller				Remove		
Metronome						M
Record			L S	ave Setup As		
- Playback						
Performance						

Controller Setup Customize Cor	ntroller Options	Fader Scaling]			
- V Mackie Control	Add New Remove Save Setup As.		MIDI In (MIDI Out (ICON QCON EX1	G2 V1.00 🗸 G2 V1.00 🗸]
EUCON				Track count	8	
Activate EUCON		In	Output iternal mode	Send Echo Mackie_Set	• •	C
			C	Apply	1 2 ок с	Cance

Bitwig

		a 🛛	•								
.3		1.4		_		2.1	_	 	2.2		

WEN 3	SETTINGS	PACKAGES	HELP	×		
			- 4			3.
User Interface	Add Controller	Detect available controllers	Add controller ma	anually 🕨	Generic	►
Behavior					Ableton	•
Audio					Akai	►
Recording					Arturia	►
Controllers -2					Behringer	►
Synchronization					СМЕ	►
Locations					Hercules	►
Plug-ins					Keith McMillen	►
Shortsute					Korg	►
Shortcuts					Livid Instruments	►
	6 Control Univer	sal (MCU4Bitwig by Jürgen Mo	ßgraber)		Mackie	•
	Control Univer	sal + 1 Extender (MCU4Bitwig I	oy Jürgen Moßgrabe	er)	Native Instruments	►
	Control Univer	sal + 2 Extenders (MCU4Bitwig	by Jürgen Moßgrab	er)	Nektar	
	Control Univer	sal + 3 Extenders (MCU4Bitwig	by Jürgen Moßgrab	er)	Novation	
	MCU PRO				Open Sound Control	

	SETTINGS			8-X
	Add Controller	Detect available controllers	Add contro	oller manually 🕨
	Mackie / Cont	rol Universal (MCU4Bitwig by Jü	rgen Moßgraber)	
		7		EX1 G2 V1.00*
	¥ Y	Profile		EXT 62 V1.00*
Controllers		Has a display	Off	On
		Has a second display	Off	On
		Has a position/tempo display	Off	On
	Hardware Setup	Has an assignment display	Off	On
Plug-ins		Has motor faders	Off	On
	Di	isplay track names in 1st display	Off	On
	Use	e vertical zoom to change tracks	Off	On
		Use faders like editing knobs	Off	On
		VU Meters	Off	On
		Footswitch 1	New Button	•
		Footswitch 2	New Button	•





Reaper



Studio One



Ableton Live

			1				
<mark>ລ</mark> Ur	ntitled - Live 8						
File	Edit Create View	Opt	tions Help				
TAP	120.00 111 111 4 / 4		Edit MIDI Map	Ctrl+M	 1. 1. 1		/R Ξ+ 18
			Edit Key Map	Ctrl+K			
Q	Library •	1	Computer MIDI Keyboard	Ctrl+Shift+K			
	▷ C Lessons	-	compater milor teyboard	Carronneric	_	_	_
0	▷ Presets		External Sync				
0		✓	Delay Compensation				
٦			Time Ruler Format	+			
0			Smaller Launch Quantization	Ctrl+1			
3			Larger Launch Quantization	Ctrl+2			
			Triplet Launch Quantization	Ctrl+3			
п		1	Launch Quantization Enabled	Ctrl+4			
			Fixed Grid	Ctrl+5			
			Draw Mode	Ctrl+B			
		-	Follow	Ctrl+F			
		./	Solo Switcher				
		Y	Cup Switches				
			Colo in Place				
		<u> </u>	Solo III Place				
			Lock Envelopes				
		✓	MIDI Overdub				
	2		Preferences	Ctrl+,			

Look Control Surface Input Output	
1 Mackie Control V iCON QCON EX1 G2V iCON QCON EX1 G2V	Dump
Audio 2 None v None v D	Dump
3 None ♥ None ♥ None ♥	Dump)
4 None ♥ None ♥ None ♥ O	Dump)
6 None - None - None -	Dump
Record Takeover Mode Pickup v	
Launch Insut MarkieControl Insut (CON OCONIDRO G21/100)	mote
Device the second of the	
CPU Durput: Mackecontrol Output (ICON QCONPRO G2 V1.00) On On OnO	
Output: Microsoft GS Wavetable Synth On On On On	On
User Account	

Pro Tools

0	1	Pro Tools
File Edit View	Track Clip Event AudioSuite Options Set	window Marketplace Help
	<u><u></u></u>	ardware
		layback Engine
SHUFFLE SPOT	N 🗰 🔹 🤸 🗣 🏧 🚽	Disk Allocation Start End
SLIP GRID		/O
	3	
rack C	Peripi	nerals
Synchro	nization Machine Control MIDI Controllers Ethernet Co	Introllers Mic Preamps VENUE
- Pripe	4 5	Grid
1 2	Type Receive From	n Send To # Ch's
	#1 HUI IV none	I V 8 I V
	#2 none I* Predefi	ned 🔰 🖌 iCON QCON EX1 G2 V1.00
CON	#3 none Iv none	I▼ none I▼ 6
CON	#4	
	7	
	Type Receive From Send To	# Ch's
H	UI I Platform B+ V - none	CLIP
no	one I none I Predefined	Automap HUI
na na	one Iv none Iv none Iv	Automap MIDI
n	one Iv none Iv none	Automap Propellerhead
		Microsoft GS Wavetable Synth
		Microsoft MIDI Mapper
rack C	Periph	nerals 🔽
Synchro	nization Machine Control MIDI Controllers Ethernet Co	ntrollers Mic Preamps VENUE
4 100		Grid
1 2	Type Receive From	n Send To # Ch's
	#1 HUI IT ICON QCON	
	#2 none Iv none	It none It It
2	1	Dro Taola
Eile Edit View	Track Clin Funnt AudioSuite Ontine Cu	Pro Tools Window Marketalara Hala
File cont view	Track Cilp Event AudioSuite Options Set	Hardware
		Playback Engine
SHUFFLE SPOT	■ () 	Disk Allocation Start
SLIP GRID		Peripherals Length
6		
		Video Sync Offset
		Current Feet+Frames Position
Bars Beats	COMMENTS 1/0	Current Timecode Position
E. Guitar	For recording Eleven Rig L/R	External Timecode Offset
	your Eleven Main Out L/R + 11	MIDI MIDI Studio
dyn read *	Vol 0.0 4100 100	Connect to MIDI Beat Clock Input Filter
		Click/Countoff 12- Input Devices
Click	no input 🍸	Preterences



Audition

File	Edit	Clip View I	nsert	Effects	Options	Window	Help
44	j	Can't Undo					Ctrl+Z
File		Tools					
رك	Ξ.	Audio Hardware Setup ReWire Setup					
		Keyboard Short	tcuts a	nd MIDI	Triggers		Alt+K
	2	Preferences					F4



Sonar

1						
X3 SONAR X3 F	Producer					
File Edit Uti	ilities Help					
<u>New</u>						
open	Snap Marks					
Name:						
Hame.						
Location:	g:\Cakewalk Projects Cancel					
Audio Path:	g:\Cakewalk Projects\Audio					
	Store Project Audio in its own Folder.					
Template:	 Blank Project Play List Set 16 Channel MIDI 16 Track 4 Bus Console (S-type) 					
	16 Track Audio					
	16 Track Audio (A-Type)					
	Draducar la cum Tracki					
Eile Edit	Wews Insert Process Project Utilities Window Help					
\star 💆						
Smart	listory Ise Snap Marks					
50 -						
44₽ -	View - Options - Tracks					
Untit 🐰	Cut 00:00:00.000					
	Cut Special					
E	Preferences P					
	Copy Special Z 2 🗤 Track 2					





Download the Mac iMap from your Personal User Page at www.iconproaudio.com

After you downloaded the file, please click it to start the installation process.



1. iMap[™] Software for Mac OS X

Please follow the procedures below step-by-step to launch your $iMap^{TM}$ software to Mac OS X.

000 X	S USB Audio 3 items, Zero K8 available	
	Manuals Map Map Map	onExG2 .cmg

Diagram 2

Tip: By "dragging and dropping" the "QconEX G2 iMap" icon into the "Applications" folder, you can create an "iMap" shortcut on your Mac's desktop.
Installing iMap[™] Software for Windows

Please follow the procedures below step-by-step to install your iMap[™] software.

- 1. Turn on your PC.
- 2. Download the Windows iMap from your Personal User Page at www.iconproaudio.com

After you downloaded the file, please click it to start the installation

3. Setup Wizard appear

(Note:Setup wizard appears, please click "Next")



Welcome to the QconProG2 QconExG2 Setup Wizard

This wizard will guide you through the installation of QconProG2 QconExG2.

It is recommended that you close all other applications before starting Setup. This will make it possible to update relevant system files without having to reboot your computer.

Click Next to continue.

Diagram 3

Next > Cancel

1

4. Choose Install Location (Note: Choose your preferred install location for iMap[™] or use the default location and click "Next")



Diagram 4

5. Select shortcut

(Note:Select the start menu folder in which you would like to create the iMap[™] shortcut. Then click "Next".)

೫ QconProG2 Qcor	ExG2 V1.04 Installation	-		>
	Select shortcuts			
	Choose a Start Menu Folder for the shortcuts.	ne QconProG2	QconExt	52
Select the Start Men	u folder in which you would like to create the p	program's sho	rtcuts. Ye	u
can also enter a nan	e to create a new folder.			
iCON Global\QconPr	oG2 QconExG2\			
				^
	h			
				~
Do not create sh	ortcuts			
Copyright (C) iCON Glo	bal			
	< Back	Next >	Car	ncel
				_

Diagram 5

6. Create a shortcut on your desktop

(**Note:** Please uncheck the box if you do not want to place a shortcut icon on your desktop for iMap[™]; otherwise click "Next")

😚 QconProG2 QconExG2 V1	.04 Installation	-		×
1	Select shortcuts Select additional shortcuts.			
Select any like create	additional shortcuts for QconProG2 Q d by the installation:	conExG2 tha	t you wou	Jd
Create a Desktop icon				
Copyright (C) iCON Global ——	< Back	Next >	Can	cel

Diagram 6

7. iMap[™] begins installation

(**Note:** The iMap[™] installation has now started, wait for it to finish. Then click "Finish".)



Diagram 7

8. Installation finished

(**Note:** Click "Finish" to complete the *iMap*[™] software installation.)



Diagram 8

iMap[™] QconEX G2 software panel

1. "Firmware Upgrade" button

Click this button to enter into the firmware upgrade window for QconEX G2. Please refer to P.xx for the firmware upgrade procedure.

Firmware

Control Mode	ICON Fir	rmware Upgrade	00
Firmware Upgrade 6) User Defined h V		Upgrade Progress	
		Step1 Step2 Step3 Step4 Step5 Request MDI Devices Open File Upgrade	∋
	Step1:	Please click the first button "Start" above to select your connected iCON product as the MIDI in/out device.	
	Note :	If your connected iCON product model name does not appear on the pull-down menu, select "USB Audio Device" as the MIDI In/Out device.	
	Step2:	Click the "Request" button to let your iCON product enter into firmware upgrade mode.	
	Step3:	Please wait a few seconds to ensure the unit has recycled completely, then click the third button "MIDI Devices", and select "ICON firmware upgrade V1.00" on both MIDI In and Out pull-down menus.	
	Step4:	Download the latest firmware on "www.icon-global.com", then click the "Open File" button to browse the firmware file such as "QconProG2_QconExG2_V1.??.BIN"	
	Step5:	Click the "Upgrade" button to upgrade the firmware, and wait until its completion.	

Step 1: Connect the ICON product using a USB connection. Press the "MIDI Device" button at the top to select your connected ICON product as the "MIDI In and Out" device in the pull-down menu.

(Note: If your connected ICON product model name does not appear on the pull-down menu, select "USB Audio" as the MIDI In and Out device.)

- Step 2: Click the "Update" button.
- **Step 3:** Press the "MIDI Device" button at the top to select your connected ICON product as the "MIDI In and Out" device at the pull-down menu.
- Step 4: Click the "Open File" button to browse the new firmware file.
- Step 5: Click the "Download" button to upload the firmware

(Warning: The firmware upload process MUST be completed and not be interrupted during the file upload, otherwise the firmware may not be rewritten again.)

Connections



or



Firmware upgrade

QconPro G2 functional firmware upload procedure















A	Step 1	Step 2	Step 3	Step 4	Step 5	
~	Connect	🥑 Choose Your	iCON Device	Colock Marcine	Upgrade	
C#(Step 1:				t"	
A(-	Note:					
F(iCON firmwa	re upgrade v1.	00 🗸		
C#	Step 2:				de mode".	
(2	Step 3:		Connect	Cancel		







Restore the factory default settings

To restore your QconEXG2 settings to factory default, simply launch iMap and import the original settings (i.e. without making any changes) to the device through the following steps.

- 1. Connect QconEX G2 with the provided USB cable and launch iMap software.
- 2. Click the "MIDI Device" button and select "QconEX *G2*" as the MIDI input and output device.

Note: If QconEX G2 does not appear on the pull down menu, select USB audio

as the MIDI I/O device.

- 3. Click "Send Data" to upload the setting to your QconEX G2.
- 4. Close iMap, and then turn the QconEX G2 power of off & on again.

Specifications

Connector:	To computer	USB connector (standard type)
	To extender	USB connector (B-Type)
Power supply:		12V/2.5A DC
Current consumption:		2A or less
Weight:		5.015kg (11lb)
Dimensions		457(L) x 203(W) x 456.6(H)mm
		17.99"(L) x 7.92"(W) x 17.97"(H)

Services

If your QconEX G2 needs servicing, follow these instructions.

Check our online help centre at http://support.iconproaudio.com/hc/en-us, for information, knowledge, and downloads such as:

- 1. FAQ
- 2. Download
- 3. Learn More
- 4. Forum

Very often you will find solutions on these pages. If you don't find a solution, create a support ticket at our online Help Center at the link below, and our technical support team will assist you as soon as we can.

Navigate to http://support.iconproaudio.com/hc/en-us and then sign in to submit a ticket.

As soon as you have submitted an inquiry ticket, our support team will assist you to resolve the problem with your ICON ProAudio device as soon as possible.

To send defective products for service:

- 1. Ensure the problem is not related to operation error or external system devices.
- 2. Keep this owner's manual. We don't need it to repair the unit.
- Pack the unit in its original packaging including end card and box. This is very important. If you have lost the packaging, please make sure you have packed the unit properly. ICON is not responsible for any damage that occurs due to non-factory packing.
- 4. Ship to the ICON tech support center or the local return authorization. See our service centers and distributor service points at the link below:

If you are located in US Send the product to: North America Mixware, LLC – U.S. Distributor 11070 Fleetwood Street – Unit F. Sun Valley, CA 91352; USA Tel.: (818) 578 4030 Contact: www.mixware.net/help

If you are located in Europe Send the product to: Sound Service GmbHEuropean HeadquarterMoriz-Seeler-Straße 3D-12489 Berlin Telephone: +49 (0)30 707 130-0 Fax: +49 (0)30 707 130-189 E-Mail: info@sound-service.eu If you are located in Hong Kong Send the product to: ASIA OFFICE: Unit F, 15/F., Fu Cheung Centre, No. 5-7 Wong Chuk Yueng Street, Fotan, Sha Tin, N.T., Hong Kong. Tel: (852) 2398 2286 Fax: (852) 2789 3947 Email: info.asia@icon-global.com

- 5. For additional update information please visit our website at:
- www.iconproaudio.com

AppendixA

Control Surface Functionality Manual

Cubase

QCon Pro X, QCon Pro XS, QCon Pro G2, QCon EX G2 Platform M+, Platform B+, Platform D2, Platform X+, Platform Nano

Revision v0.71

This is a master manual. Specific device manuals can be built from this material

Congratulations on owning an Icon control surface! This manual documents the full range of potential functions when the device is installed in Cubase.

You can extensively controlCubase with an Icon QCon seriescontrol surface or Icon Platform modular control system using standard MackieControl protocol.Expansion bank units can be addedfor more hands-on controls:QCon expansion units for the QCon series and the Platform X+ channel bank expansion. Platform B+ button module is necessary toaccess all functions in this manual with Platform M+, and the D2 display highly recommended.Icon Metal Fader Caps and Icon Metal Knob Caps are available as an aesthetic and haptic upgrade for the best control experience.

The term Mackie Control is used to refer to the control protocol standardto be used with the QCon and Platform series control surfaces, and is abbreviated as MCP. The terms, Cubase, and all Cubase-specificterminology belong to Steinberg and has no affiliation with Icon Pro Audio.

<<<<< Table of Contents >>>>

Setup	 -
Getting Started	 -
Mix and Transport	 -
View	 -
Automation	 -
Encoder Knob Assignment	 -
Utilities	 -
Advanced Configuration	 -
Troubleshooting	 -

Firmware Update		-
Fader Calibration		-
MCP MIDI Implementation Tabl	e	-
Renamed Buttons		-

<<<<Color Reference Key>>>>

Control Surface Function Control Surface Button DAW Term ButtonA + ButtonB =hold Button A and press Button B Button A - Button B = press Button A and then press Button B

Before you can use your control surface, you will first need to configure it in Cubase. Once the setup is successful, by defaultCubase will remember your settings for future sessions without the need to reconfigure. For maximum stability, first boot the control surface and select the DAW Mode, then start your DAW software.

When your control surface is switched on, it will first prompt for a DAW Mode selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected DAW Mode. If no action is taken after startup, the control surface will select the last used mode after a few seconds.

To configure your Icon control surface in Cubase, go to Devices ->Device Setup. Delete previous Mackie Control configurations, then go to "+"and select Mackie Control. Finally choose your device name for both the Output Port and Input Port, displayed on the right under"Mackie Control".

Repeat this process for any expansion modules. The configuration of each device needs to happen corresponding to the physical position of the control surfaces from left to right. You can now use your lcon control surface for transport, mix, and extended control functions. Next up: An overview of the fundamental elements for controlling Cubase.

Device Setup				_		
		Mackie	Control			
Devices		Platform-M			-	MIDI Input
🛅 MIDI	^	Platform-M				MIDI Output
All MIDI Inputs		-				
Default MIDI Ports		Button	Category	Command	_	
DirectMusic		User A			^	
Windows MIDI		User B			_	
Hemote Devices		F1	-		- 11	
Mackie Londo		Shift+F1			- 11	
9. Dia Davica 1		F2			_	
9.Pin Davice 2		Shift+F2			-11	
Time Base		F3			- 11	
Time Base 9-Pin		Shift+F3			_	
Time Display		F4			- 11	
Cideo		Shift+F4			-6	
Video Player		P5			-11	
		Shift+F5			-11	
ASID Multimedia Driver		P6				
VST Inputs		EShttakk	Andre Calant	and the second		
VST Outputs		Enable /	Auto Select			
VST System Link		Relay C	lick			
	~					
(>	Help		Reset		Apply
					_	
				OK		Cancel

When first opening a blank project inCubase, we are looking at the ProjectWindow. Add channels to your project here, and you will see the motor faders jump into position. Each lcon control surface has one physical bank consisting of 8 channel strip controls. Each channel strip corresponds to controls for one channel in your DAW. The channel name appears on the display above each channel. Touch a fader and adjust the channel's volume. Change a channel's volume in Cubase and the corresponding motor fader will adjust itself. You can balance the volume of multiple faders on the control surface simultaneously – already a huge mixing advantage of using a control surface. Press the Bank up / down buttons to scroll through further channels in the project in fixed blocks of 8.The Channel up / down buttons stepthe currently selected channelone channel at a time.

The 9th fader on your control surface is the Master Faderand always commands the master level, which engages after the output stage of the project, so after any plugins used on the output sum. This is advantageous for several classic mixing techniques and effectively regulates your monitor volume.

The Encoder Knobs edit parameters according to the current Assignment Mode. Turn them to edit a parameter or change a selection.Each knob affects the channel on that channel strip, or in advanced encoder modes, allknobs affect the currently selected channel. Press the knob to reset to the default value, or confirm a selection depending on the Assignment Mode.







Jog Wheel:

Turn the Jog Wheel to quickly adjust the project cursor position on the grid, visible in the Project Windowin Cubase. Press Scrub to scrub audio with the Jog Wheel. (On Platform M+, scrub is activated by pressing down the jog wheel.)

Transport:

The Transport section is used to operate playback.

Play = Begin playback Stop = Stop playback Rec (transport) = Begin recording Audio and MIDI input FastForward= Shuttle the project cursor forwards Rewind =Shuttle the project cursor backwards Stop - Stop = Project cursor jumps to previous play position

Shift + FastForward= Project cursor jumps to end of project

Shift + Rewind = Project cursor jumps to start of project

Left = Project cursor jumps to left locator

Right = Project cursor jumps to right locator

Cycle = Toggle playback loop (set between the left and right locators)

Shift + Left = Set left locator to project cursor

Shift + Right = Set right locator to project cursor

Channel Strip Buttons:

Rec (channel) = Arms the channel strip for recording Solo = Engage Solo for one or multiple channels Mute = Engage Mute for one or multiple channels Select = Focuses and selects the channel, displays the fullchannel name on the LCD display

Solo Defeat = De-solo all channels (default QCon Pro X and B+ only) Shift + Solo Defeat= Un-mute all channels (default QCon Pro X and B+ only)

Shift + ChannelUp/Down= Bank by 1 channel instead of 8 Shift + BankUp/Down= Toggle switch Band/Channel

Monitoring:

In Pan Assignment, press the Encoder Knobs to toggle channel monitoring. This activates input monitoring mixed with audio playback output from Cubase.

Fader Lock:

Press Lock Mix to disable touch sensitive changes to fader position. Automation remains active. This is useful to secure a finished mix.

Press Motorsto disable all motor fader movement. This is useful to silence the control surface. When motors are disabled, the faders are still touch-responsive and can edit the mix.

Listen Mode:

Shift + Project = activate Listen Mode:

Solo = Engage Listen for one or multiple channels

Shift + Project = deactivate Listenfor all channels

There are settings in Cubase for Listen in the Control Room, which is found underOutputs in the Connections Window.

Displays:

The LCD display showschannel names and parameters, plus navigation for Assignment Modes and settings. Press Name/Value to toggleparameter values on the LCD display.

The digital time displayshows the current project cursor position, either in bars and beats or in SMPTE time code format. Press SMPTE/Beatstotoggle the time display format.

Zoom &Cursor Arrows:

The Cursor Arrows (left, right, up, down)share the functions of the computer keyboard arrow keys. In Assignment Modes they change the Encoder Knob parameter selection and scroll through pages of parameters when editing plug-ins.

In the Project Window, the up/down Cursor Arrows select the previous/next channel. In the Mixer Window, the left/right Cursor Arrows select the previous/next channel.

Press Zoom to activate zoom controls. When the Zoom button is illuminated, press the Cursor Arrows to adjust the view zoom in various Cubase windows.(On Platform M+, Zoom is managed by toggling the Zoom buttons and turning the jog wheel.)

Channel Bank Options:

Bank up/down = Scroll through channels in the project in fixed blocks of 8 Channel up/down = Step the current bank by onechannel

If expansion units are connected, bank left/right still scrolls by fixed blocks of 8 channels.

Ease creating and managing automation is a highlight of using a control surface with motor faders. Press the Automation buttons to change the automation behavior of the selected channel. PressShift+ Write and then Playand begin to mix on the knobs and faders in real time with automation.

Read = Set to Read, the channel will respond to existing automation in real time. Any parameters with automation will jump to existing automated values during playback. Write = All channel parameters record automation during playback Shift+ Read orWrite = Apply automation mode to all channels

Remember that with Flip, the parameters assigned to the Encoder Knobs can be edited an automated with the faders.

Press one of the Assignment buttons to select the category of parameters currently assigned to the Encoder Knobs. Assignment modes apply controls to the currently selected channel – with a few exceptions.Use Channelup/down to browse pages of options and parameters.Rotate the Encoder Knobs to adjust parameters or make a selection from a list.

Assignment Modes:

Pan = Activates Pan Assignment.Edit standard pan or front/rear panning. Inserts = Activates Insert Assignment.Open plug-ins and access plug-in parameters. EQ = Activates EQ Assignment.Opens and editsCubase EQonselected channel. FX Aux = Activates FX Aux Assignment. Open and edit the Channel Strip Rack. Instrument = Activates Instrument Assignment.Open and edit plug-in instruments. SendPage Down = Activates FX Send Assignment.Setup and editFX sends. Master FX = Activates Master FX Assignment.Setup and editFX sends. Page Up, Routing= Activates Routing Assignment.Setup and editFX sends.

Fader Flip:

Press Flip to access the current Encoder Knob parameters on the touch sensitive motor faders. This is great for precise adjustments of multiple channels/parameters and managing automation.

<<<< Pan >>>>>

Pan Assignment:(Pan)

Press Pan to adjust stereo panning with the Encoder Knobs on their respective channels. Press Page Up/Down to choose between Left/Right or Front/Rear panning.

Surround Assignment: (Shift+Pan)

Edit multiple surround parameters for the selected channel. Each Encoder Knob is set to a different function depending on the current channel Panner set in Cubase: Stereo Dual Panner, Stereo Combined Panner, Stereo Balanced Panner, or others.

Parameters: L-R Standard, L-R Panner, Mode

<<<<<Inserts>>>>

Insert Assignment Mode: (Plug-In)

Press Insertsto open and edit plug-ins on the selected channel. Assign plug-ins on Page 01, and edit on Page 02. PressChannel up/down to browse pages. Plug-In parameters appear on the LCD display and are assigned across the Encoder Knobs.

To quickly insert and edit a plug-in, press Insert, then turn Encoder Knob 3, press Channel down and then edit parameters on all Encoder Knobs.

Page 01 Insert Slot #

Insert Bypass

SelectPlug-In

Page02+ Insert parameters appear automatically assigned across the Encoder Knobs

<<<< EQ >>>>>

EQ Assignment Mode: (EQ)

Press EQ to open (or add) theCubase EQ. EQ Assignment Modecan only edit a standard Cubase EQ. Press Flip to control EQwith the faders, and Channel up/down to browse parameters. Edit multiple EQ bands at once for the selected channel.Press a Freq knob to change to adjusting Q and press a Gain knob to toggle bypass.

Band 1 Frequency	Band 2 Frequency
Band 1 Gain	Band 2 Gain
Band 3 Frequency	Band 4 Frequency
Band 3 Gain	Band 4 Gain

Advanced EQ Assignment Mode: (Shift + EQ)

Band 1 Gain	Band 2 Gain
Band 1 Frequency	Band 2 Frequency
Band 3 Gain	Band 4 Gain
Band 3 Frequency	Band 4 Frequency
Band 1 Q-Factor	Band 2 Q-Factor
Band 1 Bypass	Band 2 Bypass
Band 3 Q-Factor	Band 4 Q-Factor
Band 3 Bypass	Band 4 Bypass

<<<<FX Aux>>>>

FX Aux Assignment Mode:

In FX Aux Assignment Mode, edit settings for Channel Strip Rack modules. Browse parameters with Channel up/down.

<<<<<Instrument>>>>

Instrument Assignment Mode:

Press Instrument to open and edit instrument plug-ins on the selected channel. Assign plug-ins on Page 01, and edit on Page 02. PressChannel up/down to browse pages. Plug-In parameters appear on the LCD display and are assigned across the Encoder Knobs.

To quickly load and edit an instrument, press Instrument, then turn Encoder Knob 3, press Channel down and then edit parameters on all Encoder Knobs.

Page 01 Instrument Slot#

Instrument Bypass

Select Instrument

Page02+

Insert parameters appear automatically assigned across the Encoder Knobs

<<<< Send >>>>>

FX Send Assignment Mode: (Page Up, FX Send)

Use the FX Send Assignment Mode to adjust send amount, bypass, toggle pre/post fader, and set FX channel insert effects.

To quickly create and edit an FX Send, press FX Send, then turn Encoder Knob 3, press Channel down and then edit parameters on all Encoder Knobs.

Page 01 FX Channel # Send Bypass Select Plug-In

Page02+

Insert parameters appear automatically assigned across the Encoder Knobs

Send Focus Mode: (Select a channel - Send - Page Down)

Edit the send parameters of 8 sends at once for the selected channel. Press Channel up/down to browse parameters:

Send Amount Send Bypass Send Pre/Post Fader Send Bus Destination

Send Mixer Mode: (Send - Select a channel - Shift+ Page Down)

Edit advanced parameters with the Encoder Knobs on their respective channels. Repeatedly press Shift+ Page Down to toggle through FX Send 1-8. Each Encoder Knob is set to a different function. Browse parameters with Channel up/down:

Send Amount Bypass Pre/Post Fader Send Panning Bus Destination Bypass All Sends

Cue Send Mode: (Shift+ Send)

Access settings for Cue sends with the Encoder Knobs on their respective channels. Press Shift+ Send to toggle through Cue Send 1-8. Browse parameters with Channel up/down:

Send Amount Bypass Pre/Post Fader Send Panning Bypass All Sends

Cue Send Mixer Mode: (Shift+ Send - Select a channel - Shift+ Page Down)

Edit advanced parameters for multiple channels. Repeatedly press Shift+ Page Down to toggle through FX Send 1-8. Each Encoder Knob is set to a different function. Browse parameters with Channel up/down:

Send Amount Bypass Pre/Post Fader Send Panning Bus Destination Bypass All Sends

<<<<<Master FX>>>>

Master FX Assignment Mode: (Master FX)

Use the Master FX Assignment Mode to edit and adjust effectsloaded in the master insert slots. To quickly create and edit an FX Send, press Send, then turn Encoder Knob 3, press Channel down and then edit parameters on all Encoder Knobs.

Page 01 Master FX Slot #

FX Bypass

Select Plug-In

Page02+

Insert parameters appear automatically assigned across the Encoder Knobs

<<<<<Routing>>>>

Routing Assignment Mode: (Page Down, Routing)

Edit routing parameters with the Encoder Knobs on their respective channels. Browse parameters with Channel up/down:

Output Bus Monitor Input Bus Input Gain Input Phase

Direct Routing Assignment Mode: (Shift+ Page Up) (Nuendo only, not Cubase)

Edit routing parameters with the Encoder Knobs on their respective channels.Channel up/down to select direct routing slots 1 to 8. Activate a direct routing slot by turning the corresponding Encoder Knob. Enable Summing Mode on parameter page 09/09 (reached with the Channel down button)

<<<<<Utilities>>>>

Project Utilities:

Left= XYZXYZXYZ Right= XYZXYZXYZ Shift+ Left= XYZXYZXYZ Shift+ Right= XYZXYZXYZ

Undo = Cubase Undo function Redo= Cubase Redo function Shift+ Undo = Open Undo History

Save = Save Cubase project Shift+ Save = Save As: Save project with a new name Revert= ?????

Marker:

XYZXYZXYZ

Add = XYZXYZXYZ Prev= XYZXYZXYZ Next = XYZXYZXYZ Shift + Add = XYZXYZXYZ Shift + Prev = XYZXYZXYZ Shift + Next = XYZXYZXYZ

Punch:

Punch is recording which overwrites existing audio or MIDI within a set punch area. Tap Punch to XYZXYZXYZXYZXYZXYZ. This is a key workflow tool because of the time saved by combining channeling and major edits. Without punch, subsequent takes must be individually edited into the final channels. Using Punchkeeps a production moving forward, which boosts creativity and productivity.

Function Buttons:

The Function buttons, labeled F1 through F8, are to be assigned custom user commands in Cubase -> Device Setup.

Recommended custom user commands:

F1	=	С	lick	C)n/Off
F2	=	M	lag	ic/	Ą
F3	=	M	lag	ic/	Ą
F4	=	M	lag	ic/	4
F5	=	M	lag	ic/	Ą
F6	=	M	lag	ic/	4
F7	=	M	lag	ic/	4
F8	=	M	lag	ic/	Ą
Sh	ift	+	F1	=	MagicA
Sh Sh	ift ift	+ +	F1 F2	=	MagicA MagicA
Sh Sh Sh	ift ift ift	+ + +	F1 F2 F3	=	MagicA MagicA MagicA
Sh Sh Sh Sh	ift ift ift	+ + +	F1 F2 F3 F4	= = =	MagicA MagicA MagicA MagicA
Sh Sh Sh Sh Sh	ift ift ift	+ + + +	F1 F2 F3 F4 F5	= = =	MagicA MagicA MagicA MagicA MagicA
Sh Sh Sh Sh Sh	ift ift ift ift	+ + + +	F1 F2 F3 F4 F5 F6	= = = = =	MagicA MagicA MagicA MagicA MagicA MagicA
Sh Sh Sh Sh Sh Sh	ift ift ift ift	+ + + + + + + + +	F1 F2 F3 F4 F5 F6 F7		MagicA MagicA MagicA MagicA MagicA MagicA

Channel Visibility Modes: (default Platform B+ only)

Shift + Visibility Modes 1 to 8 view fixed preset channel types. Buttons 1 to 8 alone recall custom channel visibility configurations previously setup in the MixConsole.

Visibility Modes:

Shift + 1 = All Channels Shift + 2 = Audio Channels Shift + 3 = Groups Shift + 4 = FX Channels Shift + 5 = Instrument Channels Shift + 6 = MIDI Channels Shift + 7 = I/O Busses Shift + 8 = All Channels

Example user visibility modes:

- 1 = Project channels 1-8
- 2 = Project channels 9-16
- 3 = Project channels 17-24
- 4 = Project channels 25-32
- 5 = Project channels 33-40
- 6 = Project channels 41-48
- 7 = Project channels 49-56
- 8= Project channels 57-64

External Controls:

On the units QCon Pro X, QCon Pro G2, and QCon Pro, connect a standard momentary foot switch to User A or User B, and then power on the Icon control surface.

User A = Toggle Play/Stop

Strange behavior in the DAW, unexpected functions, device not recognized, orfreezes:

Disconnect all MIDI-USB devices. In Cubase, delete all control surface configurations(including other MIDI devices) in Controller Assignments and Control Surface Setupand then close Cubase. For testing, connect directly to the computer without a USB hub or USB extension cable. Turn on the Icon control surface and select the MCP Cubase mode.

OSX – Go to Audio-MIDI-Setup, open MIDI Studio, and delete unused configurations and Icon devices. Restart the Icon control surface to automatically reconfigure.

Windows –Open the Device Manager in Windows, select the Icon Control Surface, and delete the device.Now restart the control surface to automaticallyreconfigure. If there remain issues related to the USB connection, a Windows update can repairsome issues.

Windows – If the device does not appear in the Windows Control Panel, you may need to uninstall MIDI devices - you will need a third party utility application to do this easily. Windows has limits on MIDI devices successfully installed in total, and MIDI devices remain installed when disconnected.

Finally, start Cubase and configure the control surface in Devices -> Device Setup. Press "+" and select Mackie Control. Select your device for both Output and Input Port, displayed under "Device: Mackie Control"

Faders are not motorized:

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

Faders makenoise or move improperly:

A fader calibration is needed. Please read the section on Fader Calibration below for details.

I want to control and automate certain parameters:

Access parameters via the Assignment Modes and use Automation Modesto begin creating live automation. Press Flipto control these parameters with the faders. UseMIDI Learnto additionally assign parameters or key commands to controls.

I want to change the behavior of a function:

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

I want to see customvalues on the display:

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Cubase updates.

I want to adda custom function:

To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In Cubase, it is possible to assign Key Commands (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

I want to rescale the faders:

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

I want to change the Jog Wheel resolution:

The behavior of the Jog Wheel is preset in the DAW implementation of MCP. There is variance between different DAWs. There may be some adjustment for this, at least by changing grid settings. Pressing Scrub enables fine movement with the Jog Wheel.

To accommodate future changes to MCP implementation in new DAW versions plus expand on operational features, Icon provides Firmware updates for current production and legacy control surfaces.

Caution:

Please take extra care to follow the correct procedure when performing a firmware update. When performing a firmware upgrade, always connect directly to the computer without a USB Hub or extension, and only connect one device to the computer during update. Also quit all other software which can access MIDI input/output such as your DAW or utility programs.

Verify the power source is well connected to the control surface. You can check by starting the controller with no USB cable connected. If thedevice startup proceeds normally, external power appears to be ok.

To Update:

OSX – Install and open the device-specificiMap, use "Connect" to select your device, click Update and follow the directions on screen.(For an XS or EX unit, first switch iMap mode by clicking the QCon icon in iMap)

Windows / Legacy – Install and open the device-specific iMap, use "MIDI Devices" to select your device, click Update. Newer iMap releases automatically download the correct firmware online.

!After Firmware Update, reinstall the device in your DAW by deleting the previous device configuration and repeating the MCP device setup.

!Never attempt to "downgrade" firmware of an Icon control surface.

! Only use the iMap and Firmware versions specific for your hardware version. Also be sure to get the newest iMap on the Icon Pro Audio website.

! Never unpack a .bin firmware file

We recommend that every QCon owner performs a fader calibration. The best values vary according to the DAW of choice and preference. In the digital domain (in your DAW) valuescan move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B. Fader Calibration allows fine adjustment to the properties of how each motor fader responds when commanded to move.

Press and hold the Rec Button on channel two and start the device. Fader Calibration will display. Turn each Encoder Knob to fine tune the value for each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. Each fader can be fine tuned individually. To adjust the master fader, use the channel select buttons 7 and 8. To save the new changes and exit, press Encoder Knob 8.

For Cubase 10, start with values set at 165, evaluate, then adjust individually to personal preference.

We recommend that every Platform owner performs a fader calibration. The best adjustment varies according to the DAW of choice and preference. In the digital domain (in your DAW) valuescan move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B. Fader Calibration allows adjustment to the properties of how the motor faders respond when commanded to move.

Press and hold the Encoder Knob on channel one and start the device. Turn Encoder Knob 8 to adjust the total fader response. It is also possible to adjust a single fader by now holding down Rec on channel three while adjusting the encoder of each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. To save the new changes and exit, press Encoder Knob 8.

I recommend starting with a slower movement, test in your DAW and evaluate, then adjust individually to personal preference.

Control Surface Functionality Manual

Logic Pro X

QCon Pro X, QCon Pro XS, QCon Pro G2, QCon EX G2 Platform M+, Platform B+, Platform D2, Platform X+, Platform Nano

Revision v1.13

This is a master manual. Specific device manuals can be built from this material.

Congratulations on owning an Icon control surface! This manual documents the full range of potential functions when the device is installed in Logic Pro X.

You can extensively control Logic Pro X with an Icon QCon seriescontrol surface or Icon Platform modular control system using standard MackieControl protocol. Expansion bank units can be addedfor more hands-on controls:QCon expansion units for the QCon series and the Platform X+ channel bank expansion. Platform B+ button module is necessary toaccess all functions in this manual with Platform M+, and the D2 display highly recommended.Icon Metal Fader Caps and Icon Metal Knob Caps are available as an aesthetic and haptic upgrade for the best control experience.

The term Mackie Control is used to refer to the control protocol standardto be used with the QCon and Platform series control surfaces, and is abbreviated as MCP. Logic and its terminology belongs to Apple and has no affiliation with Icon Pro Audio

Setup Getting Started Mix and Transport Group View Encoder Knob Assignment Automation Advanced Encoder Assignment Modes..... -User Assignments Advanced Utilities Advanced Configuration Troubleshooting **Firmware Update** Fader Calibration MCP MIDI Implementation Table **Device Diagnostic**

<<<<< Table of Contents >>>>

<<<<Color Reference Key>>>>

Control Surface Function Control Surface Button DAW Term ButtonA + ButtonB =hold Button A and press Button B Button A - Button B = press Button A and then press Button B

Before you can use your control surface, you will first need to configure it in Logic Pro X.Once setup,Logic Pro X will remember your settings for future sessions without the need to reconfigure. For maximum stability, first boot the control surface and select the DAW Mode, then start your DAW software.

When the control surface is switched on, it will first prompt for a DAW Mode selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected DAW Mode. If no buttons are pressed, the control surface will select the previously used mode after a few seconds.

In the latest device Firmware version (may require Firmware update):

1: MCP General 2: Logic Pro 3: Pro Tools HUI 4: User Defined

In Logic Pro X, advanced configuration needs to be enabled. Open Logic Pro X -> Preferences -> General -> Advanced, select Show Advanced Tools, and verify that all additional options are checked. (Audio, Surround, MIDI, Score, Control Surface, Advanced Edit)

To configure your Icon control surface, go to Logic Pro X -> Control Surfaces -> Setup. Delete previous Mackie Control configurations, then go to New -> Install, select Mackie Control, and click Add. Finally choose your device name for both the Output Port and Input Port, displayed under "Device: Mackie Control".

Repeat this process for any expansion modules, then click and drag the console graphics left/right to match the physical configuration of your control surface fader banks. You can now use your lcon control surface for transport, mix, and extended control functions. Next up: An overview of the fundamental elements for controlling Logic Pro X.



When first opening a blank project in Logic Pro X, we are looking at the Arrange Window. Add tracks to your project here, and you will see the motor faders jump into position. Each lcon control surface has one physical bank consisting of 8 channel strip controls. Each channel strip corresponds to controls for one track in your DAW. The track name appears on the display above each channel. Touch a fader and adjust the track's volume. Change a channel's volume in Logic Pro X and the corresponding motor fader will adjust itself. You can balance the volume of multiple faders on the control surface simultaneously – already a huge mixing advantage of using a control surface. Press the Bank up / down buttons to scroll through further channels in the project in fixed blocks of 8. The Channel up / down buttons stepthe focus of the current bankone channel at a time.

The 9th fader on your control surface is the Master Faderand always commands the master level, which engages after the output stage of the project, so after any plugins used on the output sum. This is advantageous for several classic mixing techniques and effectively regulates your monitor volume.

The Encoder Knobs edit parameters according to the current Assignment Mode. Turn them to edit a parameter or change a selection.Each knob affects the track on that channel strip, or in advanced encoder modes, allknobs affect the currently selected track. Press the knob to reset to the default value, or confirm a selection depending on the Assignment Mode.







Jog Wheel:

Turn the Jog Wheel to quickly adjust the playhead position on the grid, visible in the Arrange Window in Logic Pro X.

Scrub= Toggle Scrub: applies to the Jog Wheel Shift + Scrub = Toggle Shuttle: turn the Jog Wheel to adjust playback speed Play - Scrub = Pause playback

There are options in Logic Pro X for scrubbing: Preferences -> Audio -> Editing To enable audio scrub in Logic Pro X, select "Scrubbing with audio..." (On Platform M+, scrub is activated by pressing down the jog wheel.)

Transport:

The Transportsection is used to operate playback.

Play = Begin playback Stop = Stop playback Rec (transport) = Begin recording Audio and MIDI input FastForward= Shuttle forward. Press again to increase forward speed Rewind =Shuttle reverse. Press again to increase backward speed

Stop - Stop = Playhead jumps to beat 1 bar 1 or active cycle position Play - Play = Playhead jumps back to the nearest bar or active cycle position Shift +Play = Pause playback

Channel Strip Buttons:

Rec(channel) = Arms the channel strip for recording Solo = Engage Solofor one or multiple tracks Mute = Engage Mute for one or multiple tracks Select = Focuses and selects the track, displays the full track name on the LCD display Shift + Select = Set the channel volume fader to 0 dB Option + Select =Add Slave Track: Extra track with shared channel strip – for tracking/editing Shift + Option + Select = Createnew track (Uses track type of selected track)

Option + Rec (channel strip) = Arm/disarm all channel strips Option + Solo (channel strip) =Toggle Solo Scenefor all channel strips: (Press once to disable Solo, press again to restore all previously soloed tracks) Option + Mute = DisableMute for all channel strips

Cycle:

The Cyclebuttontoggles the playback loop cycle on/off. Hold Cycleand turn the Jog Wheel to quickly define the cycle area. Hold Cycle and turn the Jog Wheel backwards to define a skip area.0

Cycle+ Rewind = Set cycle start to the playhead position Cycle+ FastForward= Set cycle end to the playhead position

PressShift+Cycleto display the cycle edit menu. The Encoder Knobs adjust the cycle area:

Press Encoder Knob 2 = Set cycle area to selected regions in Arrange Window Turn Encoder Knob 3 = Move the cycle area by bar Press Encoder Knob 5 = Set cycle start to the playhead position Turn Encoder Knob 5 = Move cycle start in bars Turn Encoder Knob 6 = Move cycle start in beats Press Encoder Knob 7 = Set cycle end to the playhead position Turn Encoder Knob 7 = Move cycle end in bars Turn Encoder Knob 8 = Move cycle end in beats

Fader Lock:

Press Lock Mix to disable touch sensitive changes to fader position. Automation remains active. This is useful to secure a finished mix.

Press Control + Flip to set all faders to zero and disable all motor fader movement. This is useful to silence the control surface. (*Platform B+ only*)

Press Group to manage group membership. Press the channel Select buttons to add tracks to the selectedgroup. Illuminated Select buttons indicate group membership for the selected group. The up/down Cursor Arrows change the currently selected group.

The left/right Cursor Arrows browse the group parameters assigned to the Encoder Knobs. Toggle whether these parameters are linked to the group using the knobs:

Group Active, Editing (Selection), Automation, Volume, Pan, Mute, Solo, Input, Record Arm, Send 1-8, Color, Track Zoom, Hide, Phase-Locked Audio (Quantization), Track Alternatives

Hold Control to make mix changes bypassing group settings. (default Platform B+ only)

Displays:

The LCD display shows tracknames and parameters, plus navigation for Assignment Modes and settings. Press the Name/Value button to toggleparameter titleson the LCD display.

The digital time displayshows the current playhead position, either in bars and beats or in SMPTE time code format. Press SMPTE/Beatstotoggle readoutformats on the time display.

Function Buttons:

The Function buttons, labeled F1 through F8, recall user defined Screensets1 through 8. To setup a useful example, press F1 and then open the Arrange Windowin Logic Pro X. Now press F2 and open the Mixer Window. Now you can switch between these views with F1 and F2.Window configurations plus the view options for each Screenset are saved with the Logic Pro X project. It is advisable to save useful Screensetsinto your template projects.

Recommended Screensets for a studio with two display monitors:

- F1 = Primary display: Arrange Window, Secondary display: Mixer Window
- F2 = Primary display: Mixer Window, Secondary display: Arrange Window
- F3 = Primary display: Audio Editor Window, Secondary display: Arrange Window
- F4 = Primary display:Score Editor, Secondary display: Arrange Window
- F5= Primary display: Piano Roll, Secondary display: Arrange Window
- F6= Primary display: Arrange Window, Secondary display: Piano Roll
- F7= Primary display: Arrange Window (alternate settings), Secondary display: Mixer Window
- F8= Primary display: Arrange Window, Secondary display: Tempo ListEditor

Open Windows:

- Shift + F1 = Open Arrange Window
- Shift + F2 = Open Mixer Window
- Shift + F3 = Open Event Editor
- Shift + F4 = Open Score Editor
- Shift + F5 = Open Step Editor
- Shift + F6 = Open Piano Roll

Shift + F7 = Open Transport Window Shift + F8 = Open List Editors

Zoom &Cursor Arrows:

The Cursor Arrows (left, right, up, down) change selections or modify zoom in the ArrangeWindow. In Assignment Modes they change the Encoder Knob parameter selection and scroll through pages of parameters when editing plug-ins.

Press Zoom to activate zoom controls using the Cursor Arrows. Zoom controls only work in the Arrange Window. When the Zoom button is illuminated, press Option + Cursor Arrows to adjust individual track zoom.

In the Arrange Window, the up/down Cursor Arrows select the previous/next channel. In the Mixer Window, the left/right Cursor Arrows select the previous/next channel. (On Platform M+, Zoom is managed by toggling the Zoom buttons and turning the jog wheel.)

Channel Bank Options:

Bank up/down = Scroll through tracks in the project in fixed blocks of 8 Channel up/down = Step the current bank by onetrack Option +Bank up/down = Scroll bank to first or last track Option +Channel up/down = Scrollbank to first or last track

If expansion units are connected, bank left/right scroll by the total number of fader banks.

Global View:

While in the Mixer Window, press Global View. Now use the Function buttons to display channel strips in the project by category. Hold multiple Function buttons to display multiple types of channel strips. Press Global View to restore normal view. This is useful for mixing or editing large sessions, for example projects with complex signal routing or advanced MIDI setups.

F1 = Midi Tracks F2 = Inputs F3 = Audio Tracks F4 = Instrument Plug-ins F5 = Aux F6 = Bus F7 = Outputs

Press one of the Assignment buttons to select the category of parameters currently assigned to the Encoder Knobs. Use the Cursor Arrows left/right to select a parameter and up/down to navigate the channel strip position. When the Encoder Knobs make a selection from a list, such as plug-in or send destination, press the encoder to confirm the selection.

Assignment Modes:

Track = Activates Track Assignment, view and edit one selected parameter: Volume, Pan, Format, Input, Output, Automation, Group, Custom (Automation Parameter) 68 Pan = Activates Pan Assignment, edit stereo pan, or surround panning parameters Surround Channels: Angle, Diversity, LFE Level, Spread

EQ = Activates EQ Assignment, opens and editsLogic Channel EQonselected channel Parameters: Frequency, Gain, Q-Factor, Band Bypass Cursor Arrows up/down select EQ Band

Send = Activates Send Assignment, adjust bus send levels and routing parameters: Send Destination, Send Level, Pre/Post, Bypass

Plug-in = Activates Plug-in Assignment, open plug-ins and access plug-in parameters

Instrument = Activates Instrument Assignment, open and control instrument plug-ins

Fader Flip:

Press Flip to access the current Encoder Knob parameters on the touch sensitive motor faders. This is great for precise adjustments of multiple channels/parameters and managing automation. Press Shift+ Fliptoswap encoder assignments with the fader assignments.

Cmd+ turnEncoder Knob=Fine parameter adjustment(*only high resolution parameters*) Option + turn Encoder Knob= Toggle min, max, default value Cmd+ Cursor Arrows left/right = Browse pages by single parameters Option + Cursor Arrows = Skip to first/last selection

Ease creating and managing automation is a highlight of using a control surface with motor faders. Press the Automation buttons to change the automation behavior of the selected channel. Press Play and begin to mix on the knobs and faders in real time with automation. Begin adopting automation into your workflow starting with Touch automation.

Option + Read, Write, Touch, or Latch = Apply automation mode to all tracks

Main Automation Modes:

Read = Toggle between Read and Off:

Set to Read, the channel will respond to existing automation in real time. Any parameters with automation will jump to existing automated values during playback. Set to Off, the channel will ignore all automation.

Write = All channel parameters record automation during playback. This overrides and replaces all automation. This is for tracking an unassisted mixdown performance.

Touch = The channel reads existing automation, plus writes automation for specific parameters adjusted during playback. This only creates automation while parameters are being edited.

Latch = Reads existing automation, plus writes automation for specific parameters adjusted during playback. This continues to write automation for any parameters which have been changed during

playback.

Trim Automation:

Trim = Toggle Trim behavior on a channel armed with Touch or Latch automation. When active, Trim allows automation to be modified instead of overwritten. Adjusting knobs and faders during playback will make a change relative to existing automation.

Touch + Trim = T-Touch: Adjust automation momentarily while parameters are being edited Latch + Trim = T-Latch: Adjust automation continuously by changing a parameter

Every Assignment Modehas multiple modes of control. These are specialized control modes advantageous for specific tasks and project styles.

Track Assignment Shortcuts:

Hold Trackto display the shortcut menu. Here you can select which parameter will appear on the LCD displayand can be edited by the Encoder Knobs in Track Assignment Mode.

Encoder Knob 1 or F1= Volume Encoder Knob 2 or F2= Pan Encoder Knob 3 or F3= Input format(Mono, Stereo, L/R, Surround) Encoder Knob 4 or F4= Input assignment Encoder Knob 5 or F5= Output assignment Encoder Knob 6 or F6= Automation mode Encoder Knob 7 or F7= Custom(Select a channel automation parameter in Logic Pro X) Encoder Knob 8 or F8= Activates Setup Focus Mode Track + Group =Group Assignment

Track Focus Mode: (Track- Track)

Press Tracktwice. This allows you to edit multiple channel strip parameters for the selected channel. Parameters appear across the LCD display andeach Encoder Knobis set to a different function. Press a channel Select button to choose that track to edit.

Encoder Knob 1 = Volume Encoder Knob 2 = Pan Encoder Knob 3 = Software Instrument Encoder Knob 4 = Edit Plug-In on slot 1. Press Shift + Mute 4 to toggle bypass. Encoder Knob 5 = Edit Plug-In on slot 2. Press Shift + Mute 5 to toggle bypass. Encoder Knob 6 = Level of Send 1. Press Shift + Mute 6 to toggle bypass. Encoder Knob 7 = Level of Send 2. Press Shift + Mute 7 to toggle bypass. Encoder Knob 8 = Level of Send 1. Press Shift + Mute 8 to toggle bypass.

Setup Focus Mode:(Track+F8)

Encoder Knob 1 = Channel strip format (Mono, Stereo, L/R, Surround) Encoder Knob 2 = Spread parameter (Surround channels only) Encoder Knob 3 = Channel strip input assignment Encoder Knob 4 = Channel strip output assignment Encoder Knob 5 = Automation mode Encoder Knob 6 = Quick-edit group membership. ChooseGroup1 to 32 or Off

Pan Assignment Shortcuts:

Hold Pan to display the shortcut menu. Here you can select which parameter will appear on the LCD display and can be edited by the Encoder Knobs in Pan Assignment Mode.

Encoder Knob 1 or F1 = Angle Encoder Knob 2 or F2 = Diversity Encoder Knob 3 or F3 = LFE Level Encoder Knob 4 or F4 = Spread Encoder Knob 5 or F5 = -Encoder Knob 6 or F6 = ActivatesSurround Focus Mode Encoder Knob 7 or F7 = Activates Angle/DiversityMixer Mode Encoder Knob 8 or F8 = Activates X/Y Mixer Mode

Surround Focus Mode: (Pan - Pan)

Press Pan twice to enter Surround Focus Mode, and edit multiple surround parameters for the selected channel. Each Encoder Knob is set to a different function. Stereo channels are always assigned the parameter Pan.

Encoder Knob 1 = Angle Encoder Knob 2 = Diversity Encoder Knob 3 = LFE Level Encoder Knob 4 = Spread Encoder Knob 5 = Surround X Encoder Knob 6 = Surround Y

Angle/Diversity Mixer Mode:(Pan + F7)

Create dramatic polar-style surround panning for many tracks at once. This style of surround control is best for creating deep immersive surround and automating smooth circular movements. Turning anEncoder Knob changes the surround angle, and the Fadersedit surround diversity.

Angle and Diversity work together to set the virtual position of a sound. Angle is the position of the sound source relative to the listener in 360 degrees. Diversity is like the distance of the source from the listener, where lower values are farther away.

X/Y Mixer Mode:(Pan + F8)

Create dramatic grid-style surround for many tracks at once. This style of surround control is best for placing sounds on a virtual stage, or for automating sound objects that will move on mostly linear paths relative to the listener. Turning anEncoder Knob changes the surround X value, and the Faders edit surround Y.

The X/Y parameters are like the coordinates of a sound source relative to the listener, where 0, 0 is centered and coordinates can be set between +/-1000on the grid.



EQ Assignment Mode:(EQ)

Press EQ to open (or add) theLogic Channel EQ. EQ Assignment Modecan only edit a standard Logic Channel EQ or Logic Linear Phase EQ. Press Shift+Muteto toggle EQ band bypass.Press Flip to control EQwith the faders and toggle band bypass with Mute.

EQ Assignment Shortcuts:

HoldEQto display the shortcut menu. Here you can select which parameter will appear on the LCD display and can be edited by the Encoder Knobs in EQ Assignment Mode.

Encoder Knob 1 or F1 = Frequency Encoder Knob 2 or F2 = Gain Encoder Knob 3 or F3 = Q-Factor Encoder Knob 4 or F4 = Band Bypass Encoder Knob 5 or F5 = --Encoder Knob 6 or F6 = Activates EQ Focus Mode Encoder Knob 7 or F7 = Activates Freq/Gain Mixer Mode Encoder Knob 8 or F8 = Activates Freq/Gain Channel Mode

EQ Focus Mode:(EQ- EQ)

Press EQa second time to open the Logic Channel EQand editmultiple EQ parametersfor the selected channel. The left/right Cursor Arrows browse pages of EQ bands.

Encoder Knob 1 = Band 1 Frequency Encoder Knob 2 = Band 1 Gain Encoder Knob 3 = Band 1 Q-Factor Encoder Knob 4 = Band 1 Bypass Encoder Knob 5 = Band 2 Frequency Encoder Knob 6 = Band 2 Gain Encoder Knob 7 = Band 2 Q-Factor Encoder Knob 8 = Band 2 Bypass

Freq/Gain Mixer Mode:(EQ+ F7)

This is the place to efficiently manage frequency separation between instruments for a mixdown. After the rough mix, use this mode to quickly assign tracks appropriate real estate on the sonic stage. The LCDdisplay shows channel strip names andfrequency of the selected EQ band. The Encoder Knobschange the EQ frequency, and the faders adjust EQ Gain.Mute toggles bypass of the selected EQ band. Cursor Arrows up/down select the EQ band.

Freq/Gain Focus Mode:(EQ+ F8)

Edit frequency and gain for all 8 EQ bands on the selected channel strip. This offers very quick access to powerfully adjust the frequency content of a track, optimal for rough mix. Turning anEncoder Knob changes the EQ frequency, and the faders adjust EQ Gain. Each channel Mute 72toggles bypass of its EQ band. Press channel Select to edit the EQ on that track.


Send Assignment Mode:(Send)

Use the Send Assignment Mode to set send destinations and adjust send amounts for the selected channel.Cursor Arrows up/down change the selected send slot number.Cursor Arrows left/right select a parameter.Press Shift+Mute to toggle send bypass. Press Flip to control the selected parameters on the faders, and while Flip is engaged, pressMute to toggle send bypass. Press Solo (channel) to toggle send Pre/Post.

Send Focus Mode:(Send-Send)

Press Sendtwice to enter Send Focus Mode, and edit multiple parameters for the selected channel. Each Encoder Knob is set to a different function. The left/right Cursor Arrows browse pages of send slots. The first page displays send slot 1 & 2, page 2 displays send slot 3 & 4, and so on.

Send 1: Encoder Knob 1 = Select send destination Encoder Knob 2 = Adjust send amount Encoder Knob 3 = Set send pre/post fader Encoder Knob 4 = Toggle send bypass

Send 2: Encoder Knob 5 = Select send destination Encoder Knob 6 = Adjust send amount Encoder Knob 7 = Set send pre/post fader Encoder Knob 8 = Toggle send bypass

Send Assignment Shortcuts:

Hold Send to display the shortcut menu.Here you can select which parameter will appear on the LCD display and can be edited by the Encoder Knobs in Send Assignment Mode.

Encoder Knob 1 or F1 = Send destination Encoder Knob 2 or F2 = Send amount Encoder Knob 3 or F3 = Send pre/post fader Encoder Knob 4 or F4 = Toggle sendbypass Encoder Knob 5 or F5 = ActivatesSend Focus Mode Encoder Knob 6 or F6 = Activates Multiple SendFocus Mode Encoder Knob 7 or F7 = Activates Destination/Level Mixer Mode Encoder Knob 8 or F8 = Activates Destination/Level Focus Mode

Multiple Send Focus Mode:(Send+ F6)

This mode is forintegrating complex bus routing during the rough mix or production, adjusting bothvolume balance and complex sends at once.

Encoder Knobs 1 to 8 edit the selected send parameter for sends 1 to 8 on the selected track. The left/right Cursor Arrows change the selected parameter:

Send Destination, Send Level, Pre/Post, Bypass

In an analog/digital hybrid setup making use of I/O Utilityon busses, manage signals to outboard gear without touching manual routing. Once prepared, turn a knob on the control surface to send a track through your outboard gear. The template tracks using hardware would be set to no output, only reaching output through bus sends. This requires rendering the final mix through the hardware: Logic Pro X -> Bounce -> Mode:select"Realtime"

Example: Tracks have no output and have sends ready with Bus 10 – 12 assigned.

Bus 10 = Dry output to digital sum

Bus 11 = I/O plugin (with latency offset) to hardware 1, DAW output 1-2

Bus 12 = I/O plugin (with latency offset) to hardware 2, DAW output 1-2

Destination/Level Mixer Mode:(Send+ F7)

Use this mode to mix send amount and select busses for multiple tracks. With prepared effect busses, this is the place to create an entire effects mix for mixdown.

TheEncoder Knobsselect a send destination, and the faders adjust the send amount. Mute toggles send bypass, and Solo toggles pre/post. Cursor Arrows up/down select the send slot.

Destination/Level Focus Mode:(Send+ F8)

Use this mode to mix the bus effects balance for single complex tracks. This is the optimal tool for making a deep effects mix on prominent tracks such as main vocals and lead sounds. With this mode plus automation, you can use the faders to paint with an artistic pallet of 8 effects to create color, size, dynamics, and complexity. Edit send destination and send level for 8 send slots on the selected channel strip. The Encoder Knobsselect a send destination, and the faders adjust the send amount. Each channel Mute toggles send bypass. Press channel Solo to toggle pre/post.

<<<<<Plug-In>>>>

Plug-In Assignment Mode:(Plug-In)

Press Plug-In to open and edit plug-ins on any track. To quickly edit an existing plug-in, press the Encoder Knob to the corresponding plug-in namevisible on the LCD display. Plug-In parameters appear on the LCD display and are assigned across the Encoder Knobs. Press Cursor Arrowsleft/ right to view and edit further pages of parameters. Press Plug-In to exit. Press Shift + Muteto bypass the plug-in. Turn an Encoder Knob to select a plug-in and press to confirm and edit. The up/downCursor Arrows change the selected slot number.

Plug-InFocusMode: (Plug-In -Plug-In)

Press Plug-In again to view and edit plug-ins in the first 8 slots of the selected track. Press Shift + Muteto bypass a plug-in. Turn and press an Encoder Knob to select a plug-in for the corresponding slot number. Adjust parameters with the knobs and use the left/right Cursor Arrows to view and edit further pages of parameters.

<<<<<Instrument>>>>

Instrument Assignment Mode:

Press Instrumentto open and edit instrument plug-ins on MIDI software instrument tracks. Turn and press an Encoder Knob to select an instrument. Parameters appear across the LCD display and can be edited with the Encoder Knobs. Use the left/right Cursor Arrows to view and edit further pages of parameters. Press Plug-In to exit. Press Shift + Muteto bypass the plug-in.

<<<<<User Assignments>>>>

MIDI Learnis to be used on the Encoder KnobswhileUser Assignments are activated. After parameter assignment, press Flip to adjust and automate with the motor faders. Any automatable parameter can be mapped to the control surface using MIDI Learn in Logic Pro X. Fiveindividual User Assignmentsetups can be used for unique sets of MIDI Learn assignments.

Shift +Track= User Assignments 1 Shift +Pan = User Assignments 2 Shift +EQ = User Assignments 3 Shift +Send = User Assignments 4 Shift +Plug-in = User Assignments 5 Shift +Instrument = Smart Controls

To create an assignment in one of the User Modes, useMIDI Learn in Logic Pro X to map parameters to the Encoder Knobs:

- 1. Enter a User Assignment mode -- the LCD display is blank
- 2. Move the parameter you want to assign with the mouse in Logic Pro X
- 3. Press the keyboard shortcut "Command + L", the Controller Assignments Window appears.
- 4. Turnthe Encoder Knob to assign.
- 5. Move the next parameter with the mouse in Logic Pro X.
- 6. Turn the next Encoder Knob to assign.

7. Click the Learn button in the Controller Assignments Window to finish. Now the User Assignment can be used and recalled later.

Parameter names and values set with MIDI Learn in User Assignments appear on the LCD display.Press Flip to access these custom parameters on the faders.This way the motor faders will also follow automation.

<<<<<Advanced Utilities>>>>

The Utilities buttons access additional workflow operations, and many button combinations access extended functionality and options.

Click:

Click = Activate/deactivate metronome click (separate for playback and record) Shift + Click = Activate/deactivate external sync and the transmission of MMC (MMC is for controlling compatible tape machines from the DAW)

The metronome click is a tempo reference for production and recording. There are options and settings in Logic Pro X for the click: File ->Project Settings -> Metronome

Solo:

Solo (transport) = Activate Solo Regions: selected regions in the Arrange Window are solo Shift + Solo = SetSolo Lock: selected regions solo, regardless of subsequent selections

Solo Regions is a useful evaluation tool for production, plus aids in audio editing. This allows efficient techniques exclusive to a digital setup. Use the Solo (channel) buttons to solo by track in the more traditional method.

Marker:

UseMarker to manage markers in the Arrange Window. Press Marker +Nudge to create a marker at the playhead. Use Rewind or FastForwardto move the playhead and the cycle to the previous/ next existing marker.

Press Shift + Marker to displaythe marker menu, or just hold Marker. The Encoder Knobs have the following commands:

Encoder Knob 1 = Jump to marker 1 Encoder Knob 2 = Jump to marker 2 Encoder Knob 3 = Jump to marker 3 Encoder Knob 4 = Jump to marker 4 Encoder Knob 5 = Jump to marker 5 Encoder Knob 6 = Create marker at the playhead Encoder Knob 7 = Create marker at the nearest bar Encoder Knob 8 = Deletes marker at the playhead

Markershortcuts:

Marker+ F1 = Jump to marker 1 Marker+ F2 = Jump to marker 2 Marker+ F3 = Jump to marker 3 Marker+ F4 = Jump to marker 4 Marker+ F5 = Jump to marker 5 Marker+ F6= Jump to marker 6 Marker+ F7= Jump to marker 7 Marker+ F8= Jump to marker 8

Nudge:

Press Nudge to move audio or MIDI regions and events. With nudgeactive, the left/right Cursor Arrowsselect regions. Press Rewind or FastForwardto nudge the selected region. Use nudge to adjust timing, or select multiple regions and organize the arrangement. Press Shift +Nudge to displaythe nudge menu, or just hold Nudge. Each Encoder Knob has a different nudge command for the selected region:

Encoder Knob 1 = Set nudge amount forRewind and FastForward Encoder Knob 2 = Move to the playhead Encoder Knob 3 = Move by bar Encoder Knob 4 = Move by beat Encoder Knob 5 = Move by divisions Encoder Knob 6 = Move by ticks Encoder Knob 7 = Move by 1 frame Encoder Knob 8 = Move by ½ frame

Nudge settings for Rewind and FastForward:

Nudge + F1 = Ticks Nudge + F2 = Divisions Nudge + F3 = Beats Nudge + F4 = Bars Nudge + F5 = Frames Nudge + F6 = Half Frames

Drop – Autopunch:

Drop toggles Autopunch. Autopunch is recording which overwrites existing audio or MIDI within a set punch area. This is a key workflow tool because of the time saved by combining tracking and major edits. Without Autopunch, subsequent takes must be individually edited into the final tracks. Using Drop keeps a production moving forward, which boosts creativity and productivity.

Hold Drop and turn the Jog Wheel to quickly define the punch area.

Drop + Rewind = Set punch-in location to the playhead position Drop + FastForward= Set punch-out location to the playhead position

PressShift+Drop to display the punch edit menu. The Encoder Knobs adjust the punch area:

Turn Encoder Knob 3 = Move the selected punch area by bar Press Encoder Knob 5 = Set punch-in locator to the playhead position Turn Encoder Knob 5 = Move punch-in locator in bars Turn Encoder Knob 6 = Move punch-in locator in beats Press Encoder Knob 7 = Set punch-out locator to the playhead position Turn Encoder Knob 7 = Move punch-out locator in bars Turn Encoder Knob 8 = Move punch-out locator in beats

Replace:

PressReplaceto enable overwriting recordings, like recording on tape. Replace is not destructive, but it does inspire productivity through simplicity and maintain a clean project Arrange Window. When Replace is disabled, recording over existing regions creates a take folder. If enabled, new overlapping audio recordings cut existing regions. Settings forReplaceare in Logic Pro X ->Preferences -> Recording -> Replace: Region Erase = Cut MIDI and audio regions when recording Region Punch = Cut MIDI and audio regions when recording with input Content Erase = Overwrites MIDI and audio inside regions when recording Content Punch = Overwrites MIDI and audio inside regions when recording with input

Region Operations:

Use Cmd+ Function buttons to manage audio and MIDI regions in the Arrange Window.

Cmd +F1 = Cut Cmd +F2 = Copy Cmd +F3 = Paste Cmd +F4 = Clear Cmd +F5 = Select All Cmd +F6 = Select All Following Cmd +F7 = Select Similar Regions/Events Cmd +F8 = Select Inside Locators

Settings Mode:(Cmd+ Name/Value)

Encoder Knob 5 = Toggle track number on the main LCD display = Option +Name/Value Encoder Knob 6 = Engages Channel Focus Lock: in Focus Modes, the selected track remains on the encoder knobs even after subsequent channel selections.

Encoder Knob 7 = Toggle the main LCD display style =Name/Value Encoder Knob 8 = Toggle the digital time display =SMPTE/Beats

Additional Functions: (default QCon Pro X, Platform B+ only)

Save = Save Logic Pro X project Option + Save = Save As: Save project with a new name Cancel = Cancel preselection, Close track folder Enter = Execute, OK, Open selected track folder Undo = Logic Pro X Undofunction Shift +Undo = Redo Option + Undo = Open Undo History

External Controls:

On the units QCon Pro X, QCon Pro G2, and QCon Pro, connect a standard momentary foot switch to User A or User B, and then power on the Icon control surface.

User A = Toggle Play/Stop

User B = Record

After successful control surface setup with your Icon control surface and expansion banks, go to Logic Pro X ->Control Surfaces -> Setup for manual configuration.

Touch Fader to Select Track:

Check "activate touch faders activates track" to enable instant track selection when touching a fader. By default this feature is off, and the <u>Select</u> buttons are used to select a channel.

Fader Touch Sensitivity:

In the setup window under "Mackie Control" is a settingfor fader touch sensitivity. 0 makes the faders slightly less responsive and 5 is the maximum sensitivity.

Control Surface Group Parameters:

These settings impact all fader banks. This is the recommended default setup:

Flip Mode: Off("Mute" disables motor faders. Press Flip to restore) Display Mode: Value Clock Display: SMPTE Channel Strip View Mode: Arrange Fader Bank for Tracks View: 0 Fader Bank for All View: 0 Channel Strip Parameter: Automation Surround Parameter: Angle EQ Band: 3 EQ Parameter: Gain All EQs Parameter Page: 0 Send Slot: 1 Send Parameter: Destination All Sends Parameter Page: 0 Split: no. of upper parameters: 0 Instrument Parameter Page: 0 Inst Param Page (Split Lower): 0 Insert Type: Audio ("MIDI" changes Plug-In Assignment to instead access MIDI FX) Insert Slot: 1 Insert Type (Split Lower): Audio Plug-in Parameter Page: 0 Channel Strip Track: 262145 Channel Strip Track (Split Lower): 262145 Track Lock: (No) Track Name Format: Name Parameter Page Shift Mode: By Page ("By Parameter" changes Cursor Arrows menu style) Relative Change Mode: Coarse ("Full", "Fine" changes Encoder Knobs edit style) Mix Group: 1 Group Parameter Page: 0

Strange behavior in the DAW, unexpected functions, device not recognized, orfreezes:

Disconnect all MIDI-USB devices. In Logic, delete all control surface configurations and zones (including other MIDI devices) in Controller Assignments and Control Surface Setupand then close Logic. For testing, connect directly to the computer without a USB hub or USB extension cable. Turn on the Icon control surface and select the MCP Logic Pro X mode.

OSX – Go to Audio-MIDI-Setup, open MIDI Studio, and delete unused configurations and all Icon devices. Restart the Icon control surface to automatically reconfigure.

Finally, start Logic Pro X and configure the control surface in Control Surfaces -> Setup. Go to New -> Install – select Mackie Control – click Add Select your device for both Output and Input Port, displayed under "Device: Mackie Control"

Faders are not motorized:

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

Faders makenoise or move improperly:

A fader calibration is needed. Please read the section on Fader Calibration below for details.

I want to control and automate certain parameters:

Use the User Assignments 1-5 and MIDI Learnto assign parameters to controls. PressShift +Track to activate User Assignment 1, and use MIDI Learnin Logic Pro X to map parameters to the Encoder Knobs. Now, pressFlipto control these parameters with the faders.

Scrubplays no Audio:

In Logic Pro X, by default scrub does not play audio. To enable audio scrub go toPreferences -> Audio -> Editing, and select "Scrubbing with audio..."

I want to change the behavior of a function:

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

I want to see customvalues on the display:

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Logic Pro X updates.

I want to adda custom function:

It is possible to use User Assignment Modes with MIDI Learn to freely assign parameters to the encoder knobs, and pressFlip to apply these controls to the faders. To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In many DAWs, it is possible to assign Key Commands (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

I want to rescale the faders:

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

I want to change the Jog Wheelresolution:

The behavior of the Jog Wheel is preset in the DAW implementation of MCP. In Logic Pro X, its movement resolution is linked to the grid in the Arrange Window. There is variance between different DAWs. There may be some adjustment for this, at least by changing grid settings. Pressing Scrub enables fine movement with the Jog Wheel.

To accommodate future changes to MCP implementation in new DAW versions plus expand on operational features, Icon provides Firmware updates for current production and legacy control surfaces.

Caution:

Please take extra care to follow the correct procedure when performing a firmware update. When performing a firmware upgrade, always connect directly to the computer without a USB Hub or extension, and only connect one device to the computer during update. Also quit all other software which can access MIDI input/output such as your DAW or utility programs.

Verify the power source is well connected to the control surface. You can check by starting the controller with no USB cable connected. If thedevice startup proceeds normally, external power appears to be ok.

To Update:

OSX – Install and open the device-specificiMap, use "Connect" to select your device, click Update and follow the directions on screen.(For an XS or EX unit, first switch iMap mode by clicking the QCon icon in iMap)

Windows / Legacy – Install and open the device-specific iMap, use "MIDI Devices" to select your device, click Update. Newer iMap releases automatically download the correct firmware online.

!After Firmware Update, reinstall the device in your DAW by deleting the previous device configuration and repeating the MCP device setup.

!Never attempt to "downgrade" firmware of an Icon control surface.

! Only use the iMap and Firmware versions specific for your hardware version. Also be sure to get the newest iMap on the Icon Pro Audio website.

! Never unpack a .bin firmware file

We recommend that every QCon owner performs a fader calibration. The best values vary according to the DAW of choice and preference. In the digital domain (in your DAW) valuescan move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B.Fader Calibration allows fine adjustment to the properties of how each motor fader responds when commanded to move.

Press and hold the Rec Button on channel two and start the device. Fader Calibration will display. Turn each Encoder Knob to fine tune the value for each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. Each fader can be fine tuned individually. To adjust the master fader, use the channel select buttons 7 and 8. To save the new changes and exit, press Encoder Knob 8.

For Logic Pro X, start with values set at 190, evaluate, then adjust individually to personal preference.

We recommend that every Platform owner performs a fader calibration. The best adjustment varies according to the DAW of choice and preference. In the digital domain (in your DAW) valuescan move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B. Fader Calibration allows adjustment to the properties of how the motor faders respond when commanded to move.

Press and hold the Encoder Knob on channel one and start the device. Turn Encoder Knob 8 to adjust the total fader response. It is also possible to adjust a single fader by now holding down Rec on channel three while adjusting the encoder of each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. To save the new changes and exit, press Encoder Knob 8.

Start with a slower movement, test in your DAW and evaluate, then adjust individually to personal preference.

Control Surface Functionality Manual

Pro Tools HUI

QCon Pro X, QCon Pro XS, QCon Pro G2, QCon EX G2 Platform M+, Platform B+, Platform D2, Platform X+, Platform Nano

Revision v1.00

This is a master manual. Specific device manuals can be built from this material.

Congratulations on owning an Icon control surface! This manual documents the full range of potential functions when the device is installed in Pro Tools.

You can extensively controlPro Tools with an Icon QCon seriescontrol surface or Icon Platform modular control system using standard MackieControl protocol.Expansion bank units can be addedfor more hands-on controls:QCon expansion units for the QCon series and the Platform X+ channel bank expansion. Platform B+ button module is necessary toaccess all functions in this manual with Platform M+, and the D2 display highly recommended.Icon Metal Fader Caps and Icon Metal Knob Caps are available as an aesthetic and haptic upgrade for the best control experience.

The terms Mackie Control and HUlare used to refer to the control protocol standard to be used with the QCon and Platform series control surfaces. Pro Tools and all DAWspecific terminology belong to their copyright holders and has no affiliation with Icon Pro Audio.

Setup Getting Started Mix and Transport View Encoder Knob Assignment Utilities UserFunctions Troubleshooting Firmware Update Fader Calibration **MIDI Implementation Table** Renamed Buttons

<<<<< Table of Contents >>>>

<<<<Color Reference Key>>>>

Control Surface Function Control Surface Button DAW Term ButtonA + ButtonB =hold Button A and press Button B Button A - Button B = press Button A and then press Button B

Before you can use your control surface, you will first need to configure it in Pro Tools. Once setup,Pro Tools will remember your settings for future sessions without the need to reconfigure. For maximum stability, first boot the control surface and select the DAW Mode, then start your DAW software.

When your control surface is switched on, it will first prompt for a DAW Mode selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected DAW Mode. If no buttons are pressed, the control surface will select the previously used mode after a few seconds.

In the latest device Firmware version (may require Firmware update):

1: MCP General 2: Logic Pro **3: Pro Tools HUI** 4: User Defined

In Pro Tools, go to Setup ->Peripherals ->MIDI Controllers. In row #1, select Type:HUI, and choose your device name for both Receive From and Send To, and select # Ch's: 8.

In addition, go to Setup -> MIDI, Input Devices. Set a check mark next to the Icon control surface and click OK.

When first opening a blank project inPro Tools, we are looking at the Edit Window. Add Tracks to your project here, and you will see the motor faders jump into position. Each Icon control surface has one physical bank consisting of 8 channel strip controls. Each channel strip corresponds to controls for one track in your DAW. The track name appears on the display above each channel strip. Touch a fader and adjust the track's volume. Change a track's volume in Pro Tools and the corresponding motor fader will adjust itself. You can balance the volume of multiple faders on the control surface simultaneously – already a huge mixing advantage of using a control surface. Press the Bank up / down buttons to scroll through further tracks in the project in fixed blocks of 848.The Channel up / down buttons stepthe focus of the current bankone track at a time. The 9th fader on your control surface is the Master Fader. Pro Tools does not support any use of the master fader or master meter with HUI.

The Encoder Knobs edit parameters according to the current Assignment Mode. Turn them to edit a parameter or change a selection.Each knob affects the track on that channel strip, or in advanced encoder modes, allknobs affect the currently selected Track. Press the knob to reset to the default value, or confirm a selection depending on the Assignment Mode.







Transport:

Play = Begin playback Stop = Stop playback Rec (transport) =Arm recording FastForward = Shuttle forward in Edit Window Rewind =Shuttle backwards in Edit Window Cycle = Toggle the playback loop on/off

Channel Bank Options:

Channel up/down = Step the current bank by one track Bank up/down = Scroll through tracks in blocks of 8

Channel Strip Buttons:

Rec (channel) = Arms thetrack for recording. Solo = Engage Solo for one or multiple tracks Mute = Engage Mute for one or multiple tracks Select = Focuses and selects the track

Jog Wheel:

Press Scrubto toggle the Jog Wheel function between scrub and off. Then turn the Jog Wheel to adjust the playhead position, visible in the Edit Windowin Pro Tools.(*On Platform M+, scrub is accessed by pressing down the jog wheel.*)

Fader Lock:

Press Lock Mix to disable touch sensitive changes to fader position.

Time Display:

Thedigitaltime displayshows the current play position in Bars|Beats, Min:Secs, SMPTE Timecode, Feet+Frames, or Samples, depending on the current selection in the Pro Tools transport window.

Window Shortcuts:

Edit= Toggle Edit Window Mix= Toggle Mix View Transport= Show/hide Transport Window Mem Lock= Show/hide Memory Locations Window

Zoom &Cursor Arrows:

The Cursor Arrows (left, right, up, down) change selections in both Mix View and Edit Window, or modify zoom in the Edit Window.Press Zoom to activate zoom controls using the Cursor Arrows. Zoom controls only work in the Edit Window.

(On Platform M+, Zoom is managed by toggling the Zoom buttons and turning the jog wheel.)

Press the Assignment buttons to select the category of parameters currently assigned to the Encoder Knobs. Press or turn the Encoder Knobs to edit parameters.

Pan Assignment:

Pan = Activates Pan Assignment, view and edit routingfor each track. Press Panagain to toggle panning left/right on stereo tracks.

Routing Assignment: (QCon Pro X and Platform B+ only)

Assign + Input = Activates I/ORouting, edit inputrouting for each track with the Encoder Knobs. Press Assign to confirm.

Assign + Output = Activates I/ORouting, edit outputrouting for each track with the Encoder Knobs. Press Assign to confirm.

Plug-In Assignment:

Plug-In = Select a channel, then press Plug-In. Next press Plug-In Assign to view the selected channel's inserts 1-4 on the LCD Display.Turn the Encoder Knobs to add/select plug-in effects. Press Plug-In Assign to confirm. Turn Encoder Knob 5 to access insert 5 on knob 1. Press an Encoder Knob 1-4 to edit the selected plugin. Parametersappear on the LCD Display above track 1-4. Turn the Encoder Knobs to edit the lower parameter, press the Encoder Knobs to toggle the upper parameter. Turn Encoder Knob 5 to access further pages of parameters on knobs 1-4. Press Encoder Knob 5 to return to viewing inserts for the selected channel.

While a plugin is open: Bypass = Toggle Plug-In Bypass Compare = Toggle previous plugin parameter settings

Send Assignment:

Assign + Send A-E = Activates Send Routing, edit send destination for each track with the Encoder Knobs. Press Assign to confirm.

Send A-E = Activates Send Assignment, Turn the Encoder Knobs to adjust the send level to the corresponding send destination for eachtrack.

Press Flip to access the currentSend Faders on themotor faders.

Ease creating and managing automation is a highlight of using a control surface with motor faders. Press the Automation buttons to change the automation behavior of the selected track.

Automation Modes:

Read = Toggle between Read and Off:

Set to Read, the channel will respond to existing automation in real time. Any parameters with automation will jump to existing automated values during playback. Set to Off, the channel will ignore all automation.

Write = All channel parameters record automation during playback. This overrides and replaces all automation. This is for tracking an unassisted mixdown performance.

Touch = The channel reads existing automation, plus writes automation for specific parameters adjusted during playback. This only creates automation while parameters are being edited.

Latch = Reads existing automation, plus writes automation for specific parameters adjusted during playback. This continues to write automation for any parameters which have been changed during playback.

Trim = Trim allows automation to be modified instead of overwritten. Adjusting knobs and faders during playback will make a change relative to existing automation.

Off= Disable track automation. Set to Off, the channel will ignore all automation.

In=Set the left locator at the playhead position Out= Set the right locator at the playhead position Punch= Activate Quick Punch: during playback, tap Record to track and Play to punch out

Undo = Pro ToolsUndo function Shift +Cmd + Undo = Pro ToolsRedofunction Save= Pro ToolsSaveproject Enter= Pro ToolsEnterfunction Esc/Cancel= Pro ToolsCancelfunction

Thefour Modifier buttons can be held to alter the function of other commands as defined with Pro Tools keyboard shortcuts. Some applications for the four modifier buttons:

Option + Cursor Arrows =Scrollwindow view in Edit Windowor Mix View Shift + Cursor Arrows = Extend selection in Edit Window Control= Clutch: hold bypass grouping for track levels (faders) Option+ Cursor Arrows(left/right) =Centersselection in Edit Window Option + Cursor Arrows(up/down) =Subtract track selection in Edit Window

Strange behavior in the DAW, unexpected functions, device not recognized, orfreezes:

Disconnect all MIDI-USB devices. In Pro Tools, remove all control surface configurationsin Setups -> Peripherals -> MIDI Controllers and close Pro Tools. For testing, connect directly to the computer without a USB hub or USB extension cable. Turn on the Icon control surface and select the HUIPro Tools mode.

First check that the specified USB cable is in good condition and well connected. For testing, connect directly to the computer without a USB hub or USB extension cable.

OSX – Go to Audio-MIDI-Setup, open MIDI Studio, and delete unused configurations and Icon devices. Restart the Icon control surface to automatically reconfigure.

Windows –Open the Device Manager in Windows, select the Icon Control Surface, and delete the device.Now restart the control surface to automaticallyreconfigure. If there remain issues related to the USB connection, a Windows update can repairsome issues.

Windows – If the device does not appear in the Windows Control Panel, you may need to uninstall MIDI devices - you will need a third party utility application to do this easily. Windows has limits on MIDI devices successfully installed in total, and MIDI devices remain installed when disconnected.

Finally, start Pro Tools and reconfigure the control surface in Setups -> Peripherals -> MIDI

Controllers.

Faders are not motorized:

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

Faders make noise or move improperly:

A fader calibration is needed. Please read the section on Fader Calibration below for details.

I want to control and automate certain parameters:

Access parameters via the Assignment Modesand use Automation Modesto begin creating live automation.PressFlipto control these parameters with the faders.

I want to change the behavior of a function:

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

I want to see customvalues on the display:

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Pro Tools updates.

I want to adda custom function:

To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In some DAWs, it is possible to assign Key Commands (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

I want to rescale the faders:

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

I want to change the Jog Wheel resolution:

The behavior of the Jog Wheel is preset in the DAW implementation of MCP. There is variance between different DAWs. There may be some adjustment for this, at least by changing grid settings. Pressing Scrub enables fine movement with the Jog Wheel.

To accommodate future changes to MCP implementation in new DAW versions plus expand on operational features, Icon provides Firmware updates for current production and legacy control surfaces.

Caution:

Please take extra care to follow the correct procedure when performing a firmware update. When performing a firmware upgrade, always connect directly to the computer without a USB Hub or extension, and only connect one device to the computer during update. Also quit all other software which can access MIDI input/output such as your DAW or utility programs.

Verify the power source is well connected to the control surface. You can check by starting the controller with no USB cable connected. If thedevice startup proceeds normally, external power appears to be ok.

To Update:

OSX – Install and open the device-specific iMap, use "Connect" to select your device, click Update and follow the directions on screen.(For an XS or EX unit, first switch iMap mode by clicking the QCon icon in iMap)

Windows / Legacy – Install and open the device-specific iMap, use "MIDI Devices" to select your device, click Update. Newer iMap releases automatically download the correct firmware online.

After Firmware Update, reinstall the device in your DAW by deleting the previous device configuration and repeating the MCP device setup.

!Never attempt to "downgrade" firmware of an Icon control surface.

! Only use the iMap and Firmware versions specific for your hardware version. Also be sure to get the newest iMap on the Icon Pro Audio website.

! Never unpack a .bin firmware file

We recommend that every QCon owner performs a fader calibration. The best values vary according to the DAW of choice and preference. In the digital domain (in your DAW) valuescan move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B. Fader Calibration allows fine adjustment to the properties of how each motor fader responds when commanded to move.

Press and hold the Rec Button on channel two and start the device. Fader Calibration will display. Turn each Encoder Knob to fine tune the value for each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. Each fader can be fine tuned individually. To adjust the master fader, use the channel select buttons 7 and 8. To save the new changes and exit, press Encoder Knob 8.

Start with values set at 185, evaluate, then adjust individually to personal preference.

We recommend that every Platform owner performs a fader calibration. The best adjustment varies according to the DAW of choice and preference. In the digital domain (in your DAW) valuescan move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B. Fader Calibration allows adjustment to the properties of how the motor faders respond when commanded to move.

Press and hold the Encoder Knob on channel one and start the device. Turn Encoder Knob 8 to adjust the total fader response. It is also possible to adjust a single fader by now holding down Rec on channel three while adjusting the encoder of each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. To save the new changes and exit, press Encoder Knob 8.

Start with a slower movement, test in your DAW and evaluate, then adjust individually to personal preference.

Control Surface Functionality Manual

Ableton Live 10

QCon Pro X, QCon Pro XS, QCon Pro G2, QCon EX G2 Platform M+, Platform B+, Platform D2, Platform X+, Platform Nano

Revision v0.81

This is a master manual. Specific device manuals can be built from this material.

Congratulations on owning an Icon control surface! This manual documents the full range of potential functions when the device is installed in Ableton Live.

You can extensively controlAbleton Live with an Icon QCon seriescontrol surface or Icon Platform modular control system using standard MackieControl protocol.Expansion bank units can be addedfor more hands-on controls:QCon expansion units for the QCon series and the Platform X+ channel bank expansion. Platform B+ button module is necessary toaccess all functions in this manual with Platform M+, and the D2 display highly recommended.Icon Metal Fader Caps and Icon Metal Knob Caps are available as an aesthetic and haptic upgrade for the best control experience.

The term Mackie Control is used to refer to the control protocol standard to be used with the QCon and Platform series control surfaces, and is abbreviated as MCP. Ableton Live and all DAW-specific terminology belong to their copyright holders and has no affiliation with Icon Pro Audio.

<<<<< Table of Contents >>>>>

Setup	 -
Getting Started	 -
Mix and Transport	 -
Group	 -
View	 -
Encoder Knob Assignment	 -
Utilities	 -
UserFunctions	 -
Troubleshooting	 -
Firmware Update	 -
Fader Calibration	 -
MCP MIDI Implementation Table	 -
Renamed Buttons	 -

<<<<Color Reference Key>>>>

Control Surface Function Control Surface Button DAW Term ButtonA + ButtonB =hold Button A and press Button B Button A - Button B = press Button A and then press Button B

Before you can use your control surface, you will first need to configure it in Ableton Live. 92Once setup, Ableton Live will remember your settings for future sessions without the need to reconfigure. For maximum stability, first boot the control surface and select the DAW Mode, then start your DAW software.

When your control surface is switched on, it will first prompt for a DAW Mode selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected DAW Mode. If no buttons are pressed, the control surface will select the previously used mode after a few seconds.

In the latest device Firmware version (may require Firmware update):

1: MCP General 2: Logic Pro 3: Pro Tools HUI 4: User Defined

In Ableton Live, advanced configuration needs to be enabled. Open Ableton Live -> Preferences -> General -> Advanced, select Show Advanced Tools, and verify that all additional options are checked. (Audio, Surround, MIDI, Score, Control Surface, Advanced Edit)

To configure your Icon control surface, go to Ableton Live -> Control Surfaces -> Setup. Delete previous Mackie Control configurations, then go to New -> Install, select Mackie Control, and click Add. Finally choose your device name for both the Output Port and Input Port, displayed under "Device: Mackie Control".

Repeat this process for any expansion modules but us Mackie Control XT. You can now use your Icon control surface for transport, mix, and extended control functions. Next up: An overview of the fundamental elements for controlling Ableton Live.

When first opening a blank project inAbleton Live, we are looking at the Session View. Add tracks to your project here, and you will see the motor faders jump into position. Each loon control surface has one physical bank consisting of 8 channel strip controls. Each channel strip corresponds to controls for one track in your DAW. The track name appears on the display above each channel. Touch a fader and adjust the track's volume. Change a channel's volume in Ableton Live and the corresponding motor fader will adjust itself. You can balance the volume of multiple faders on the control surface simultaneously – already a huge mixing advantage of using a control surface. Press the Bank up / down buttons to scroll through further channels in the project in fixed blocks of 8.The Channel up / down buttons stepthe focus of the current bankone channel at a time.

The 9th fader on your control surface is the Master Faderand always commands the master level, which engages after the output stage of the project, so after any plugins used on the output sum. This is advantageous for several classic mixing techniques and effectively regulates your monitor volume.

The Encoder Knobs edit parameters according to the current Assignment Mode. Turn them

to edit a parameter or change a selection.Each knob affects the track on that channel strip, or in advanced encoder modes, allknobs affect the currently selected track. Press the knob to reset to the default value, or confirm a selection depending on the Assignment Mode.



Jog Wheel:

Turn the Jog Wheel to quickly adjust the play position on the grid, visible in the ArrangementViewin Ableton Live.Scrubtoggles the Jog Wheelbehavior. (On Platform M+, scrub is activated by pressing down the jog wheel.)

II By default in Ableton Live, scrub is disabled in the arrangement. To enable Scrub in Arrangement View, in Ableton Live go to Preferences -> Look/Feel and activate "Permanent Scrub Areas".

Transport:

Play = Begin playback

Stop = Stop playback

Rec (transport) = Begin recording Audio and MIDI input

FastForward= Shuttle forward in Arrangement View

Rewind =Shuttle backwards in Arrangement View

Cycle = Toggle the playback loop cycle on/off

Channel Bank Options:

Bank up/down = Scroll through tracks in the project in fixed blocks of 8

Channel up/down = Step the current bank by one track

Shift + Bank up/down = Scroll bank to first or last track

Shift + Channel up/down = Scroll bank to first or last track

Channel Strip Buttons:

Rec (channel) = Arms a singletrack for recording.

!! To allow multiple track recording, in Ableton Live go to Preferences ->Misc and deactivate "Exclusive Track Arming"

Solo = Engage Solo for a singletrack

!! To allow multiple tracks insolo, in Ableton Live go to Preferences ->Misc and deactivate "Exclusive Track Soloing"

Mute = Engage Mute for one or multiple tracks

Select = Focuses and selects the track

Fader Lock:

Press Lock Mix to disable touch sensitive changes to fader position. Automation remains active. This is useful to secure a finished mix.

Time Display:

The digital time displayshows the current play position, either in bars and beats or in SMPTE time code format. Press SMPTE/Beatstotoggle readout formats on the time display.

View Shortcuts:

Session/Arrange= Toggle Arrangement View and Session View

Track/Clip = Toggle Clip View and Track View

Browser = Show/hide the Browser

Clip Detail = Show/hide the Clip/Track View

Follow = Activate Follow Mode to auto-scroll during playback in Arrangement View

Zoom &Cursor Arrows:

The Cursor Arrows (left, right, up, down) change selections or modify zoom in the Arrangement View.In Assignment Modes they change the Encoder Knob parameter selection and scroll through pages of parameters when editing plug-ins.

Press Zoom to activate zoom controls using the Cursor Arrows. Zoom controls only work in the Arrangement View. When the Zoom button is illuminated, press Option + Cursor Arrows to adjust individual track zoom.

(On Platform M+, Zoom is managed by toggling the Zoom buttons and turning the jog wheel.)

Show Return Tracks: (Returns)

Activate showingReturn Tracks to display and control return tracks on the channel strips.

(On QCon Pro G2: Shift + F8)

Press one of the Assignment buttons to select the category of parameters currently assigned to the Encoder Knobs. Turn the Encoder Knobs to edit parameters, and press to toggle selection from a list. Pressing a knob when editing a parameter restores the default value. Use Previous / Next to browse pages of parameters.

Assignment Mode s:

I/O = Activates Routing Assignment, view and edit routing for each track. Press I/O to toggle viewing Input Type, Input Channel, Output Type, Output Channel

Send = Activates Send Assignment, adjust multiple send levels for the selected track

Pan = Activates Pan Assignment, edit stereo pan for each track

Rack = Activates Rack Assignment, create and adjust plug-in effects and instruments: Press Rack to display devices for the currently selected track. Use Page up/down to browse pages of devices and press an Encoder Knobs to select a device. Parameters appear across the LCD display over the Encoder Knobs to be edited.

Fader Flip :

Press Flip to access the current Encoder Knob parameters on the touch sensitive motor faders. Channel volume can then be adjusted using the Encoder Knobs. This is great for precise parameter adjustments and managing automation.

Use Marker to create a locator at the play position. Press Stop, then Marker to delete a currently selected locator. Press Next / Previous to jump between set locators.

Press Draw Mode to create automation in Arrangement View. Use the Faders to automate volume and the Encoder Knobs to automate the parameters currently assigned to.

Undo = Ableton Live Undo function

- Redo = Ableton Live Redo function
- Shift + Session/Arrange = Set focus to Arrangement View or Session View
- Shift + Track/Clip = Set focus to Track View or Clip View
- Shift + Browser = Set focus to Browser

The eight Function buttons, F1 through F8, are to be assigned custom user commands using MIDI map mode in Ableton Live. MIDI mappings are saved in projects and your favorite setup should best be saved in your template project.

Recommended custom user commands:

F1 = Play all clips in Scene 1 (Master, Session View)

- F2 = Play all clips in Scene 2
- F3 = Play all clips in Scene 3
- F4 = Play all clips in Scene 4
- F5 = Play all clips in Scene 5
- F6 = Play all clips in Scene 6
- F7 = Play all clips in Scene 7
- F8 = Play all clips in Scene 8

In Ableton Live, assigning MIDI mappings overrides control surface functions. This allows that in addition to the Function buttons, other buttons can be assigned useful functions as well. MIDI mappings are saved in projects and you favorite setup should best be saved in your template project.

Additional recommended user commands:

(Name/Value) = Tap Tempo- Press repeatedly to set project BPM (DAWmode1) = Punch In- start recording at the loop start position (DAWmode2) = Punch Out - stop recording at the loop end position (DAWmode3) = Capture- Create a clip from the last given MIDI input (2ndBot-Left) = Metronome-(On/Off)

Additional for Pro X

(AssignmentRight) = MIDI Arrangement Overdub- Recording MIDI adds to existing clips

(MarkerFarRight1) = NEW - Opens new scene for all record armed tracks

(MarkerFarRight2) = Automation Arm - enables automation recording

Shift + F1 to F8 = User Functions F9 to F16(Verify in new firmware)

External Controls:

On the units QCon Pro X, QCon Pro G2, and QCon Pro, connect a standard momentary foot switch to User A or User B, and then power on the Icon control surface.

User A and User B = Can be assigned a function with MIDI Mapping

Strange behavior in the DAW, unexpected functions, device not recognized, orfreezes:

Disconnect all MIDI-USB devices. In Logic, delete all control surface configurations and zones (including other MIDI devices) in Controller Assignments and Control Surface Setupand then close Logic. For testing, connect directly to the computer without a USB hub or USB extension cable. Turn on the Icon control surface and select the MCP Ableton Live mode.

First check that the specified USB cable is in good condition and well connected. For testing, connect directly to the computer without a USB hub or USB extension cable.

OSX – Go to Audio-MIDI-Setup, open MIDI Studio, and delete unused configurations and Icon devices. Restart the Icon control surface to automatically reconfigure.

Windows –Open the Device Manager in Windows, select the Icon Control Surface, and delete the device.Now restart the control surface to automaticallyreconfigure. If there remain issues related to the USB connection, a Windows update can repairsome issues.

Windows – If the device does not appear in the Windows Control Panel, you may need to uninstall MIDI devices - you will need a third party utility application to do this easily.Windows has limits on MIDI devices successfully installed in total, and MIDI devices remain installed when disconnected.

Finally, start Ableton Live and configure the control surface in Control Surfaces -> Setup.

Go to New -> Install - select Mackie Control - click Add

Select your device for both Output and Input Port, displayed under "Device: Mackie Control"

Repeat the process for extensions, but instead select Mackie Control XT.

Faders are not motorized:

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

Faders make noise or move improperly:

A fader calibration is needed. Please read the section on Fader Calibration below for details.

I want to control and automate certain parameters:

Access parameters via the Assignment Modes and use Automation Modes to begin creating live automation. Press Flipto control these parameters with the faders. Additionally, useMIDI Learnto assign parameters to free user controls.

I want to change the behavior of a function:

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

I want to see customvalues on the display:

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Ableton Live updates.

I want to adda custom function:

To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In some DAWs, it is possible to assign Key Commands (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

I want to rescale the faders:

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

I want to change the Jog Wheel resolution:

The behavior of the Jog Wheel is preset in the DAW implementation of MCP. There is variance between different DAWs. There may be some adjustment for this, at least by changing grid settings. Pressing Scrub enables fine movement with the Jog Wheel.

To accommodate future changes to MCP implementation in new DAW versions plus expand on operational features, Icon provides Firmware updates for current production and legacy control surfaces.

Caution:

Please take extra care to follow the correct procedure when performing a firmware update. When performing a firmware upgrade, always connect directly to the computer without a USB Hub or extension, and only connect one device to the computer during update. Also quit all other software which can access MIDI input/output such as your DAW or utility programs.

Verify the power source is well connected to the control surface. You can check by starting the controller with no USB cable connected. If thedevice startup proceeds normally, external power appears to be ok.

To Update:

OSX – Install and open the device-specificiMap, use "Connect" to select your device, click Update and follow the directions on screen. (For an XS or EX unit, first switch iMap mode by clicking the QCon icon in iMap)

Windows / Legacy – Install and open the device-specific iMap, use "MIDI Devices" to select your device, click Update. Newer iMap releases automatically download the correct firmware online.

!After Firmware Update, reinstall the device in your DAW by deleting the previous device configuration and repeating the MCP device setup.

!Never attempt to "downgrade" firmware of an Icon control surface.

! Only use the iMap and Firmware versions specific for your hardware version. Also be sure to get the newest iMap on the Icon Pro Audio website.

! Never unpack a .bin firmware file

We recommend that every QCon owner performs a fader calibration. The best values vary according to the DAW of choice and preference. In the digital domain (in your DAW) valuescan move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B. Fader Calibration allows fine adjustment to the properties of how each motor fader responds when commanded to move.

Press and hold the Rec Button on channel two and start the device. Fader Calibration will display. Turn each Encoder Knob to fine tune the value for each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. Each fader can be fine tuned individually. To adjust the master fader, use the channel select buttons 7 and 8. To save the new changes and exit, press Encoder Knob 8.

For Live 10, I recommend starting with values set at 185, evaluate, then adjust individually to personal preference.

We recommend that every Platform owner performs a fader calibration. The best adjustment varies according to the DAW of choice and preference. In the digital domain (in your DAW) valuescan move from 0 to 100 in an instant, but physical faders need to actually travel from point A to point B. Fader Calibration allows adjustment to the properties of how the motor faders respond 100when commanded to move.

Press and hold the Encoder Knob on channel one and start the device. Turn Encoder Knob 8 to adjust the total fader response. It is also possible to adjust a single fader by now holding down Rec on channel three while adjusting the encoder of each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. To save the new changes and exit, press Encoder Knob 8.

I recommend starting with a slower movement, test in your DAW and evaluate, then adjust individually to personal preference.

AppendixB

Cubase

This is a list of standard MCP functions in Cubase and their MIDI CC control values.

MIDI Ch1	FunctionI <u>Cubas</u> e	nfo	FunctionI Ch1 <u>Cubas</u> e	nfo
C1	Select 1	Channel Select	G#1Encoder 1	Press Encoder
C#1	Select 2	Channel Select	A1 Encoder 2	Press Encoder
D1	Select 3	Channel Select	A#1 Encoder 3	Press Encoder
D#1	Select 4	Channel Select	B1 Encoder 4	Press Encoder
E1	Select 5	Channel Select	C2 Encoder 5	Press Encoder
F1	Select 6	Channel Select	C#2Encoder 6	Press Encoder
F#1	Select 7	Channel Select	D2 Encoder 7	Press Encoder
G1	Select 8	Channel Select	D#2Encoder 8	Press Encoder
C-1	Rec 1	Channel Rec	E2 Page Up	
C#-1	Rec 2	Channel Rec	F2 Page Down	
D-1	Rec 3	Channel Rec	F#2 Pan	Assignment
D#-1	Rec 4	Channel Rec	G2 Plugin	Assignment
E-1	Rec 5	Channel Rec	G#2EQ	Assignment
F-1	Rec 6	Channel Rec	A2 FX Send	Assignment
F#-1	Rec 7	Channel Rec	A#2 Bank Up	Bank 8 Channels
G-1	Rec 8	Channel Rec	B2 Bank Down	Bank 8 Channels
G#-1	Solo 1	Channel Solo	C3 Channel Up	Bank One Channel
A-1	Solo 2	Channel Solo	C#3Channel Down	Bank One Channel
A#-1	Solo 3	Channel Solo	D3 Flip	Fader Flip Mode
B-1	Solo 4	Channel Solo	D#3-	
C0	Solo 5	Channel Solo	A#4 Undo	
C#0	Solo 6	Channel Solo	B4 Redo	
D0	Solo 7	Channel Solo	C5 Save	
D#0	Solo 8	Channel Solo	C#5-	
E0	Mute 1	Channel Mute	C6 Left	
F0	Mute 2	Channel Mute	C#6Right	
F#0	Mute 3	Channel Mute	D6 Loop	

MIDI Ch1	FunctionI Cubase	nfo	ا Ch1	⁻ unctionI <u>Cubas</u> e	nfo
G0 G#0 A0 A#0 B0	Mute 4 Mute 5 Mute 6 Mute 7 Mute 8	Channel Mute Channel Mute Channel Mute Channel Mute Channel Mute	D#6- E6 F F6 / F#6 F	Previous Add Next Scrub	(Layer 2) (Layer 2) (Layer 2)
A6 A#6 B6 C7 D7 E7 D#7 C#7	Stop Play Record Cursor Up Cursor Left Zoom Cursor Right Cursor Down	Main record ^ < > V	D5 D#5 F5 F5 G5 E3 F3	Read Write Sends Project Mixer Motors Name/Value SMPTE/Beat	Automation Automation Automation Automation Automation Display s Display
G6 G#6 G#5 A5 A#5 B5	Rewind FastForward Instrument Master Solo Defeat Write	<< >>	F#3 G3 G#3 A3 A#3 B3 C4 C#4	F1 F2 F3 F4 F5 F6 F7 F8	Function Function Function Function Function Function Function Function
D4 D#4 E4 F4	Group 1 <i>Lay</i> Group 2 <i>Lay</i> Group 3 <i>Lay</i> Group 4 <i>Lay</i>	er 2 (Fader Groups) er 2 (Fader Groups) er 2 (Fader Groups) er 2 (Fader Groups)	F#4 (G4 (G#4(A4 (Group 5 Group 6 Group 7 Group 8	Layer 2 (Fader Groups) Layer 2 (Fader Groups) Layer 2 (Fader Groups) Layer 2 (Fader Groups)

Logic Pro X

This is a list of supported standard MCP functions in Logic Pro X and their MIDI CC control values. Each CCtriggers the indicated function when the device is configured as an MCP device in the DAW. Buttons can be assigned a custom CC value usingiMap software.

MIDI Ch1	FunctionI Logic Pro X	nfoM	MIDI Ch1	FunctionI Logic Pro X	nfo
C1	Select 1	Channel Select	G#1	Encoder 1	Press Encoder
C#1	Select 2	Channel Select	A1	Encoder 2	Press Encoder
D1	Select 3	Channel Select	A#1	Encoder 3	Press Encoder
D#1	Select 4	Channel Select	B1	Encoder 4	Press Encoder
E1	Select 5	Channel Select	C2	Encoder 5	Press Encoder
F1	Select 6	Channel Select	C#2	Encoder 6	Press Encoder

MIDI Ch1	FunctionI Logic Pro X	nfoM	MIDI Ch1	FunctionI Logic Pro X	nfo
F#-1	Rec 7	Channel Rec	A#2	Bank Up	Bank 8 Channels
G-1	Rec 8	Channel Rec	B2	Bank Down	Bank 8 Channels
G#-1	Solo 1	Channel Solo	C3	Channel Up	Bank One Channel
A-1	Solo 2	Channel Solo	C#3	Channel Down	Bank One Channel
A#-1	Solo 3	Channel Solo	D3	Flip	Fader Flip Mode
B-1	Solo 4	Channel Solo	D#3	Global View	
C0	Solo 5	Channel Solo	A#4	Shift	
C#0	Solo 6	Channel Solo	B4	Option	
D0	Solo 7	Channel Solo	C5	Control	B+ Only
D#0	Solo 8	Channel Solo	C#5	Cmd	DAW Mode
E0	Mute 1	Channel Mute	C6	Marker	
F0	Mute 2	Channel Mute	C#6	Nudge	
F#0	Mute 3	Channel Mute	D6	Cycle	
G0	Mute 4	Channel Mute	D#6	Drop	
G#0	Mute 5	Channel Mute	E6	Replace	
A0	Mute 6	Channel Mute	F6	Click	
A#0	Mute 7	Channel Mute	F#6	Solo	Region Solo Mode
B0	Mute 8	Channel Mute	D7	Scrub	
A6	Stop		D5	Read	Automation
A#6	Play		D#5	Write	Automation
B6	Record	Main record	E5	Trim	Automation
C7	Cursor Up	Λ	F5	Touch	Automation
C#7	Cursor Left	<	F#5	Latch	Automation
D#7	Zoom		G5	Group	
E7	Cursor Right	>	E3	Name/Value	Display
F7	Cursor Down	V	F3	SMPTE/Beats	Display
G6	Rewind	<<	F#3	F1	Function
G#6	Fast Forward	>>	G3	F2	Function
G#5	Save	QCon Pro X, B+ only	G#3	F3	Function
A5	Undo	QCon Pro X, B+ only	A3	F4	Function
A#5	Cancel	QCon Pro X, B+ only	A#3	F5	Function
B5	Enter	QCon Pro X, B+ only	B3	F6	Function
			C4	F7	Function
	. .		C#4	F8	Function
D4	Global Tracks	! Not mapped	F#4	Global Aux	! Not mapped
D#4	Global Inputs	! Not mapped	G4	Global Bus	! Not mapped
E4	Global Audio	! Not mapped	G#4	Global Output	! Not mapped
F4	Global Instrum	nent <i>! Not mapped</i>	A4	Global User	! Not mapped

Pro Tools HUI

This is a list of supported standard MCP functions in Pro Tools and their MIDI CC control values. Each CCtriggers the indicated function when the device is configured as an MCP device in the DAW. Buttons can be assigned a custom CC value usingiMap software.

MIDI Ch1	Functionl Pro Tools	nfoM	MIDI Ch1	FunctionI Pro Tools	nfo	
C1	Select 1	Channel Select	G#1	Encoder 1		Press Encoder
C#1	Select 2	Channel Select	A1	Encoder 2		Press Encoder
D1	Select 3	Channel Select	A#1	Encoder 3		Press Encoder
D#1	Select 4	Channel Select	B1	Encoder 4		Press Encoder
E1	Select 5	Channel Select	C2	Encoder 5		Press Encoder
F1	Select 6	Channel Select	C#2	Encoder 6		Press Encoder
F#1	Select 7	Channel Select	D2	Encoder 7		Press Encoder
G1	Select 8	Channel Select	D#2	Encoder 8		Press Encoder
C-1	Rec 1	Channel Rec	E2	Pan		Assignment
C#-1	Rec 2	Channel Rec	F2	Plugin		Assignment
D-1	Rec 3	Channel Rec	F#2	Assign		Assignment
D#-1	Rec 4	Channel Rec	G2	Send		Assignment
E-1	Rec 5	Channel Rec	G#2	Input		
F-1	Rec 6	Channel Rec	A2	Output		
F#-1	Rec 7	Channel Rec	A#2	Bank Up		Bank 8 Channels
G-1	Rec 8	Channel Rec	B2	Bank Down		Bank 8 Channels
G#-1	Solo 1	Channel Solo	C3	Channel Up		Bank One Channel
A-1	Solo 2	Channel Solo	C#3	Channel Down		Bank One Channel
A#-1	Solo 3	Channel Solo	D3	V-sel		
B-1	Solo 4	Channel Solo	D#3	Insert		
C0	Solo 5	Channel Solo	A#4	Shift		Add
C#0	Solo 6	Channel Solo	B4	Option		All
D0	Solo 7	Channel Solo	C5	Control		Clutch
D#0	Solo 8	Channel Solo	C#5	Cmd		Alt
E0	Mute 1	Channel Mute	C6	In		RTZ
F0	Mute 2	Channel Mute	C#6	Out		End
F#0	Mute 3	Channel Mute	D6	Cycle		Pre
G0	Mute 4	Channel Mute	D#6	Online		Post
G#0	Mute 5	Channel Mute	E6	QPunch		
A0	Mute 6	Channel Mute	F6	Cue		Mgr
A#0	Mute 7	Channel Mute	F#6	Suspend		
B0	Mute 8	Channel Mute	D7	Scrub		
A6	Stop		F#3	F1	F	unction
A#6	Play		G3	F2	F	unction
B6	Record	Main record	G#3	F3	F	unction
C7	Cursor Up	Λ	A3	F4	F	unction

MIDI Ch1	FunctionI r Pro Tools	IfoM	MIDI Ch1	Functionl Pro Tools	nfo	
D7	Cursor Left	<	A#3	F5	FL	Inction
E7	Zoom		B3	F6	FL	Inction
D#7	Cursor Right	>	C4	F7	FL	Inction
C#7	Cursor Down	V	C#4	F8	FL	Inction
D4	Read	Send A	G6	Rewind	<<	
D#4	Write	Send B	G#6	FastForward	>>	•
E4	Touch	Send C				
F4	Latch	Send D	G#5	Save		
F#4	Trim	Send E	A5	Undo		
G4	Off	Shift	A#5	Escape	Ca	ancel
E3	Name/Value	Display	B5	Enter		
F3	SMPTE/Beats	Display				
D5	Auto Enable	Fader	F#5	Auto Enable		Send
D#5	Auto Enable	Mute	G5	Auto Enable		Send Mute
E5	Auto Enable	Plugin	G#4	Blank		Mute
F5	Auto Enable	Pan	A4	Default		Bypass

Ableton Live 10

This is a list of supported standard MCP functions in Ableton Live and their MIDI CC control values. Each CCtriggers the indicated function when the device is configured as an MCP device in the DAW. Buttons can be assigned a custom CC value usingiMap software.

MIDI Ch1	Function Ableton	Info	MIDI Ch1	Function Ableton	Info
C1 C#1 D1 E1 F1 F#1 G1	Select 1 Select 2 Select 3 Select 4 Select 5 Select 6 Select 7 Select 8	Channel Select Channel Select Channel Select Channel Select Channel Select Channel Select Channel Select Channel Select	G#1 A1 B1 C2 C#2 D2 D#2	Encoder 1 Encoder 2 Encoder 3 Encoder 4 Encoder 5 Encoder 6 Encoder 7 Encoder 8	Press Encoder Press Encoder Press Encoder Press Encoder Press Encoder Press Encoder Press Encoder Press Encoder
C-1 C#-1 D-1 D#-1 E-1 F-1 F#-1	Rec 1 Rec 2 Rec 3 Rec 4 Rec 5 Rec 6 Rec 7	Channel Rec Channel Rec Channel Rec Channel Rec Channel Rec Channel Rec Channel Rec	E2 F2 F#2 G2 G#2 A2 A#2	I/O Send Pan Plugin Page Up Page Down Bank Up	Assignment Assignment Assignment Assignment Assignment Bank 8 Channels

MIDI Ch1	Function Ableton	Info	MIDI Ch1	Function Ableton	Info
G-1	Rec 8	Channel Rec	B2	Bank Down	Bank 8 Channels
G#-1 A+1 B-1 C0 C#0 D0 D#0	Solo 1 Solo 2 Solo 3 Solo 4 Solo 5 Solo 6 Solo 7 Solo 8	Channel Solo Channel Solo Channel Solo Channel Solo Channel Solo Channel Solo Channel Solo	C3 C#3 D3 D#3 A#4 B4 C5 C#5	Channel Up Channel Down Flip Returns Shift - -	Bank One Channel Bank One Channel Fader Flip Mode Option Control Alt
E0 F0 G0 G#0 A0 A#0 B0	Mute 1 Mute 2 Mute 3 Mute 4 Mute 5 Mute 6 Mute 7 Mute 8	Channel Mute Channel Mute Channel Mute Channel Mute Channel Mute Channel Mute Channel Mute Channel Mute	C6 C#6 D6 D#6 E6 F6 F#6 F#6	Previous Next Cycle Punch In Punch Out Start End Scrub	Marker Marker
A6 A#6 B6 C7 D7 E7 D#7 C#7	Stop Play Record Cursor Up Cursor Left Zoom Cursor Right Cursor Down	Main record ^ < > V	F#3 G3 G#3 A3 A#3 B3 C4 C#4	F1 F2 F3 F4 F5 F6 F7 F8	User Function User Function User Function User Function User Function User Function User Function
D5 D#5 E5 F5 F#5 G5 E3 F3	Session/Arrange Track/Clip Undo Browser Clip Detail Redo Meter SMPTE/Beats	Automation Automation Automation Automation Automation Display Display	G6 G#6 G#5 A5 A#5 B5	Rewind FastForward Back To Arrange Draw Marker Follow	<< >> Automation Automation
D4 D#4 E4 F4	F9 F10 F11 F12	Layer 2 (Function) Layer 2 (Function) Layer 2 (Function) Layer 2 (Function)	F#4 G4 G#4 A4	F13 F14 F15 F16	Layer 2 (Function) Layer 2 (Function) Layer 2 (Function) Layer 2 (Function)

AppendixC

Cubase

Mackie Control mode function table (Nuendo/Cubase - PVC Overlay)

Controller	Function
Channel Strip	
Encoder 1 - 8 (Rotate) Use with button Pan, EQ, Inserts, Master, EX Sen & Por drive III	Adjust parameters of channel 1-8 according to selected function (Pan, EQ, Inserts, Master, FX Send & Por drive III) Press the desired function and rotate the channel knob
Encoder 1 - 8 (Enter) Use with button Pan, EQ, Inserts, Master, FX Sen & Por drive III	Adjust parameters of channel 1-8 according to selected function (Pan, EQ, Inserts, Master, FX Sen & Por drive III) Press the desired function and press the channel knob
Fader 1-8	Adjusting correspodance channel volume
Fader M	Adjusting Master channel volume
Button "(Explorer)" 1-8	Select track correspondently
Button "M" 1-8	Activate/inactivate "Mute" function of the correspondance track
Button "S" 1-8	Activate/inactivate "Solo" function of the correspondance track
Button "(dot)" 1-8	Activate/inactivate "Record" function of the correspondance track
Channel and fader control	
Button "Motor"	
Button "Lock"	Lock all the faders
Button "Flip"	Swap the control for the faders and the rotary encoder knobs
Button "Track <"	Shift one channel up for all the faders except the master fader
Button "Track >"	Shift one channel down for all the faders except the master fader
Button "Bank <"	Shift eight channel up for all the faders except the master fader
Button "Bank >"	Shift eight channel down for all the faders except the master fader
Transport	
Button "(Loop)"	Activate the loop function
Button "<<"	Activate the rewind function
Button ">>"	Activate the fast forward function
Button "(Stop)"	Activate the stop function
Button "(Play)"	Activate the play function
Button "(Rec)"	Activate the record function
User define function	
Button "Shift" (Use with F1-F8 buttons)	Press to use F1-F8 buttons as F9-F16 correspondently
Button "F1-F8"	Self define function
Assignment	
Button "Pan" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "EQ" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "Inserts" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "Master" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "FX Send" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "Por drive III i" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"

Button"Page Up <<"	Flip page backward for the above functions
Button "Page Down>>"	Flip page forward for the above functions
Window control	
Button "Mixer"	Switch to mixer window
Utilities	
Button "Edit"	Activate the edit function to edit the track
Button "Undo"	Activate the undo function to undo the last command
Button "Redo"	Activate the redo function to redo the last command
Button "Save"	Activate the save function
Button "Punch"	Activate the punch function
Button "Left"	Jump to the left most of a loop
Button "Right"	Jump to the far right of a loop
Marker controls	
Button "Prev."	Jump to previous marker point from the current position
Button "Add"	Add a marker point at the current position
Button "Next"	Jump to next marker point from the current position
Automation	
Button "Read"	Activate the read function for automation
Button "Write"	Activate the write function to write a automation track
Navigation	
Jog wheel (Rotate)	Scrolling the play-line forward & backward
Button L/R	Selecting between tracks
Button Up/Down	Selecting track vertically
Buttons "Zoom" + "L/R"	Zoom in/out track horizontally
Buttons "Zoom" + "Up/Down"	Zoom in/out track vertically

Logic Pro X

Mackie Control mode function table (Logic Pro)

Controller	Function
Channel Strip	
"Encoder 1 - 8 (Rotate) Use with button Track, Pan/Surround, EQ, Send, Plug-in & Inst."	Adjust parameters of channel 1-8 according to selected function (Track, Pan/Surround, EQ, Send, Plug-in & Inst)
"Encoder 1 - 8 (Enter) Use with button Track, Pan/Surround, EQ, Send, Plug-in & Inst."	Adjust parameters of channel 1-8 according to selected function (Track, Pan/Surround, EQ, Send, Plug-in & Inst)
Fader 1-8	Adjusting correspodance channel volume
Fader M	Adjusting Master channel volume
Button "(Explorer)" 1-8	Select track correspondently
Button "M" 1-8	Activate/inactivate "Mute" function of the correspondance track
Button "S" 1-8	Activate/inactivate "Solo" function of the correspondance track
Button "(dot)" 1-8	Activate/inactivate "Record" function of the correspondance track
Channel and fader control	
Button "Lock"	Lock all the faders
Button "Flip"	Swap the control for the faders and the rotary encoder knobs
Button "Track <"	Shift one channel up for all the faders except the master fader
Button "Track >"	Shift one channel down for all the faders except the master fader
Button "Bank <"	Shift eight channel up for all the faders except the master fader
------------------------	--
Button "Bank >"	Shift eight channel down for all the faders except the master fader
Transport	
Button "(Loop)"	Activate the loop function of the DAW
Button "<<"	Activate the rewind function of the DAW
Button ">>"	Activate the fast forward function of the DAW
Button "(Stop)"	Activate the stop function of the DAW
Button "(Play)"	Activate the play function of the DAW
Button "(Rec)"	Activate the record function of the DAW
User define function	
Button "Shift"	Additional function for different controls
Button "F1-F8"	Self define functions at Logic
View controls	
Button "Global View"	Activate to enter into Global View mode. Use in conjuction with the below 8 different views buttons to swicth between different window views
Button "MIDI Tracks"	Press to lauch the MIDI tracks window view
Button "Inputs"	Press to lauch the Inputs window view
Button "Audio Tracks"	Press to lauch the Audio tracks window view
Button "Audio Inst"	Press to lauch the Audio Inst window view
Button "Aux"	Press to lauch the Aux window view
Button "Busses"	Press to lauch the Busses window view
Button "Outputs"	Press to lauch the Outputs window view
Button "User"	Press to lauch the User window view
Effect/Channel control	
Button "Track"	Activate the "Track" function and use in conjuction with all the knobs
Button "Pan/Surround"	"Press button: Activate Pan/Surround function Rotate knob: Adjust pan/surround parameters Press knob (enter): Center value"
Button "EQ"	"Press button: Lauch selected channel's EQ function panel Rotate knob: Adjust EQ parameters Press knob (enter): Reset to default value"
Button "Send"	"Press button: Activate Send function Rotate knob: Adjust sending bus Press knob (enter): Confirm selected bus "
Button "Plug-in"	"Press button: Lauch selected channel's Plug-in function panel Rotate knob: Adjust plug-in parameters Press knob (enter): Reset to default value"
Button "Instrument"	"Press button: Lauch selected channel's Instrument function panel Rotate knob: Adjust Instructment parameters Press knob (enter): Reset to default value"
Automation	
Button "Group"	Activate the group function of the selected channel
Button "Read/Off"	Activate the read function of the selected channel
Button "Write"	Activate the write function of the selected channel
Button "Touch"	Activate the touch function of the selected channel
Button "Latch"	Activate the latch function of the selected channel

Activate the trim function of the selected channel
Make a marker point along a project
Activate the nudge function
Activate the metronome click sound
Activate the drop function
Activate the replace mode (A type of overwrite recording mode where the existing audio regions in a section of the Tracks area are replaced by a new recording
Activate the solo tool that allow you to play a region or event in isolation
Activate the save function to save your project
Activate the undo function to undo the last command
Activate the cancel function to cancel the current command
Activate the enter function
Scrolling the play-line forward & backward
Selecting between tracks
Selecting track vertically
Zoom in and out of the track

ProTools HUI

HUI mode function table (Pro Tool - PVC Overlay)

Function	Control sequency [xxxx] = Button (xxxx) = Knob
Navigation	
Page up (Shift 8 channels up)	Press [Bank <<869]
Page down (Shift 8 channel down)	Press [Bank 8>>6)]
Track up (Shift one channel up)	Press [Channel <@]
Track up (Shift one channel down)	Press [Channel >@]
Assign a Send	
Assign Send A (e.g. Send A on channel 1)	Press [Assign ⁽)] - Press [Send A ⁽)] - Rotate (Channel 1 Knob)
Assign Send B (e.g. Send B on channel 2)	Press [Assign ⁽)] - Press [Send B ⁽)] - Rotate (Channel 2 Knob)
Assign Send C (e.g. Send C on channel 3)	Press [Assign ⁽)] - Press [Send C ⁽)] - Rotate [Channel 3 Knob)
Assign Send D (e.g. Send D on channel 4)	Press [Assign ⁽³⁾] - Press [Send D ⁽²⁾] - Rotate [Channel 4 Knob)
Assign Send E (e.g. Send E on channel 5)	Press [Assign ⁽)] - Press [Send E ⁽)] - Rotate [Channel 5 Knob)
Adjust the send level (e.g. Send A level on Ch. 1)	Press [Assign③] - Press [Send A ②] - Rotate (Channel 1 Knob) to adjust the level
Assign Plug-in	
Adding a plug-in to a track's slot1-4 (e.g. xx to Ch.1 / Plug-in slot 1)	Press [Sel] on Ch.1 - Press [Plug-in ⁽)] - Press (Knob 1-4) to select the slot 1-4 - Press [Plug-in Assign] - Rotate (Knob) to select plug-in - Press [Plug-in Assign] to exit { <i>Tip: Press (Knob 5) to exit in any state</i>)

Adding a plug-in to a track's slot 5 (e.g. to Ch.1 / Plug-in slot 5)	Press [Sel] on Ch.1 - Press [Plug-in()] - Rotate (the 5th Knob) to turn page - Press (Knob 1-4) to select the slot 1-4 - Press [Plug-in Assign] - Rotate (Knob) to select plug-in - Press [Plug- in Assign] to exit {Tip: Press (Knob 5) to exit in any state)
Edit a plug-in (e.g. Plug-in on Ch. 1 / Plug-in slot 2)	Press [Sel] on Ch.1 - Press [Plug-in] - Press (Knob 2) - Rotate (Knob) to adjust parameters - Press (Knob 5) to exit
Automation	
Activate the Read function of the automation on the selected channel (e.g. Ch.1 Read function)	Press and hold [Read⑦] - Press (Channel 1 Knob)
Activate the Write function of the automation on the selected channel (e.g. Ch.1 Write function)	Press and hold [Write ③] - Press (Channel 1 Knob)
Activate the Touch function of the automation on the selected channel (e.g. Ch.1 Touch function)	Press and hold [Touch] - Press (Channel 1 Knob)
Activate the Latch function of the automation on the selected channel (e.g. Ch.1 Latch function)	Press and hold [Write <a>[Write]] - Press (Channel 1 Knob)
Activate the Trim function of the automation on the selected channel (e.g. Ch.1 Trim function)	Press and hold [Trim ⁽¹⁾] - Press (Channel 1 Knob)
Turn Off the automation of the selected channel (e.g. Ch.1 Latch function)	Press and hold [Off i] - Press (Channel 1 Knob)
Suspen the automation of the selected channel (e.g. Ch.1 Suspend function)	Press and hold [Off i] - Press (Channel 1 Knob)
Channel Strip	
Activate the Channel Rec function	Press [Channel Rec] of the selected channel
Activate the Channel Solo function	Press [Channel Solo] of the selected channel
Activate the Channel Mute function	Press [Channel Mute] of the selected channel
Select a Channel	Press [Channel Sel] or touch the (Channel Fader cap)
Control buttons	
Channel Pan (Mono track)	Press [Pan], it light - Rotate the correspondance channel (Knob 1-8)
Channel Pan (Stereo track)	Press [Pan) twice, it flashs - Rotate the correspondance channel (Knob 1-8)
Windows buttons	
Opens or Closes the Edit window	Press [Edit@]
Opens or Closes the Mix window	Press [Mix@]
Modifiers	
Extends the edit selection's region boundary (Zoom mode off)	Press [Shift@] - Press [<<@] or [>>@]
Extends the selection to the previous or next track	Press [Shift②] - Press [@] or [@]
Centers the left or right side of the on- screen waveform selection in the Edit window	Press [Option④] - Press [<<邻] or [>>邻]
Removes the selection from the topmost or bottommost track	Press [Option④] - Press [⑭] or [⑭]

Disengage a fader from any Mix group. Relase the button and the fader obeys group behavior again. Used to offset a fader's level within a group	Press [Ctrl 3]
Scolls the frontmost window to the left or right	Press [Cmd①] - Press [<<④] or [>>]
Scolls the frontmost window upward or downward	Press [Cmd①] - Press [⑭] or [⑭]
Utilities	
Save the project	Press [Save 63] twice
Undo the last edit operation	Press [Undo@]
Abort or exit a process	Press [Esc]
Defines a memory location or marker during playback or recording	Press [Enter
Transport buttons	
Set Edit selection "In" point to the current locator position	Press [IN @]
Set Edit selection "Out" point to the current locator position	Press [Out@]
Activate the Rewind function	Press [Rewind @]
Activate the Loop function	Press [Loop 3]
Activate the Fastforward function	Press [Fastforward@]
Activate the Record function	Press [Rec 69]
Activate the Play function	Press [Play]
Activate the Stop function	Press [Stop 39]
Jog Wheel & Scrub button	
Swicthing the Jog wheel function from Scrub to Shuttle	Press [Scrub <ibr></ibr> [] (Toggles squency: Scrub - Shuttle - Off)
Scrubs or Shuttles forward	Rotate (Jog wheel) clockwise
Scrubs or Shuttles backward	Rotate (Jog wheel) anti-clockwise
Zoom & Navigation buttons	
Navigation mode (Zoom/42 button is off)	
Navigation arrow	Rotate (Jog Wheel)
Moves the edit cursor to the previous region boundary or sync point	Press [<<
Moves the edit cursor to the next region boundary or sync point	Press [<<-
Mark-in & mark-out controls	Press @ & @ or [IN2] & [Out2]
Zoom mode (Press Zoom/42 once to enter: light)	
Decreases the horizontal zoom	Press [<< (4)]
Increases the horizontal zoom	Press [<< []]
Decreases the vertical zoom	Press [@]
Increases the vertical zoom	Press []
Selection mode (Press Zoom/42 twice to enter: Flash)	
Adjust the selection "In" point for making a selection	Press & hold [<<)] - Rotate the (Jog wheel)
Adjust the selection "Out" point for making a selection	Press & hold [>>) - Rotate the (Jog wheel)
Positions the cursor at the current selection's left edge	Press twice [<<

Positions the cursor at the current selection's right edge	Press twice [>>43]
Moves the selection to the previous track	Press [@]
Moves the selection to the next track	Press []

Ableton Live 10

Mackie Control mode function table (Abelton Live - PVC Overlay)

Controller	Function
Channel Strip	
Encoder 1 – 8 (Rotate)	Channel 1-8 pan
Encoder 1 - 8 (Enter)	Only use in conjuction with some functions
Fader 1-8	Adjusting correspodance channel volume
Fader M	Adjusting Master channel volume
Button "(Explorer)" 1-8	Select track correspondently
Button "M" 1-8	Activate/inactivate "Mute" function of the correspondance track
Button "S" 1-8	Activate/inactivate "Solo" function of the correspondance track
Button "(dot)" 1-8	Activate/inactivate "Record" function of the correspondance track
Fader controls	
Button "Lock"	Lock all the faders
Button "Flip"	Swap the control for the faders and the rotary encoder knobs
Button "Track <"	Shift one channel up for all the faders except the master fader
Button "Track >"	Shift one channel down for all the faders except the master fader
Button "Bank <"	Shift eight channel up for all the faders except the master fader
Button "Bank >"	Shift eight channel down for all the faders except the master fader
Transport	
Button "(Loop)"	Activate the loop function
Button "<<"	Activate the rewind function
Button ">>"	Activate the fast forward function
Button "(Stop)"	Activate the stop function
Button "(Play)"	Activate the play function
Button "(Rec)"	Activate the record function
Controls / Functions	
Button "View Selector"	Press to switch between "Session view" and "Arrangement view"
Button "Track/Clip view"	Press to switch between "Track view" and "Clip view"
Button "Show/Hide browser"	Press to show or hide the left browser section
Button "Show/Clip detail"	Press to expand the Clip view area by hiding the effect section
Marker controls	
Button "Prev."	Jump to previous marker point from the current position
Button "Add"	Add a marker point at the current position
Button "Next"	Jump to next marker point from the current position
Assignment	
Button "I/O"	Press to activate the "I/O" fuction, use in conjuction with the channel knobs to adjust the audio destination for the "Audio To" setting
Button "Pan"	Press to activate the "Pan" function, use in conjuction with the channel knobs to adjust each channel pan value

Button "Send"	Press to activate the "Send" function and rotate the correspodance channel knob to adjust the Send A and Send B value
Button "Instrument Rack"	Only effect on "Instructment track". Press the Instructment Rack button and then the first channel knob to enter to adjsutment setting. Rotate channel knobs 1-8 to adjust the Marco1-8 values
Button "Return Track"	Activate to control the Return tracks
Navigation	
Jog wheel (Rotate)	"Session view: Scrollling through the clips up and down Arrangement view: Scrolling the play-line forward & backward"
Buttons "Zoom" + "L/R"	"Session view: Zoom button could not be activtaed Arrangement view: Zoom in/out track horizontally"
Buttons "Zoom" + "Up/Down"	"Session view: Zoom button could not be activtaed Arrangement view: Zoom in/out track horizontally"













iconproaudio.com/dashboard/

www.iconproaudio.com