


Pedal Description:

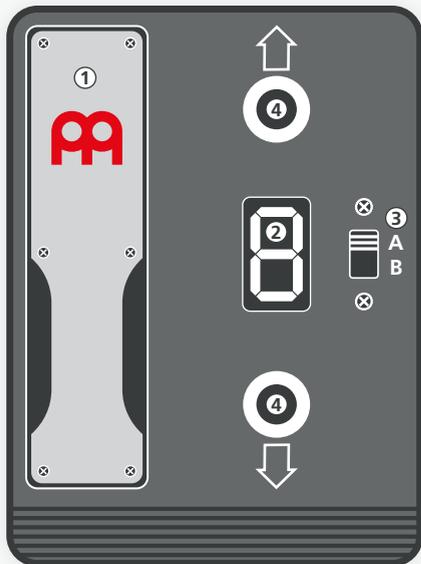

1. Dynamic Steel Pedal

2. Sample Number Select Button

3. A/B File Bank Switch

4. Use The Two Buttons To Switch Between The Ten Sound Samples

Pre-Programmed Sample List:

0 - Kick Bass | 1 - Soft Kick | 2 - 808 Bass | 3 - 808 Snare | 4 - HiHat | 5 - Clave
6 - Hand Clap | 7 - Cowbell | 8 - Straight Tambourine | 9 - Shaker



MEINL PERCUSSION FX20 EFFECTS PEDAL INFO SHEET



ATTENTION

Please do not attempt to disassemble the product

Please do not store the product in a hot or humid environment

Keep the product dry at all times and avoid contact with moisture



Roland Meinl Musikinstrumente GmbH & Co. KG
Musik-Meinl-Straße 1
91468 Gutenstetten
GERMANY


Made in China by *Shadow*

WHAT IS THE MEINL PERCUSSION FX20 EFFECTS PEDAL ?

The MEINL Percussion FX20 Effects Pedal puts the power to add percussion at the feet of any musician. Toggle between ten pre-programmed percussion samples plus an additional ten custom samples of your own. Included is a microSD card to load custom sounds. An A/B file bank switch keeps the two sample lists separate and allows you to easily change between them. The dynamic steel pedal has a sensitive and smooth spring back with no sound interference, while the trigger responds seamlessly to any rhythmic pattern. A durable ABS casing houses the electronics and is weighted to give you a solid feel on any surface. Perfect for multi-instrumentalists and percussionists, the pedal includes volume control, an 1/8" headphone jack and 1/4" jacks for stereo or mono out.

Main Features:

- Ideal for multi-instrumentalists and percussionists
- Ten pre-programmed percussion samples + ten custom samples
- Weighted body for a sturdy feel
- Highly dynamic pedal with smooth spring back and no sound interference
- Includes microSD card and power supply with international adapters

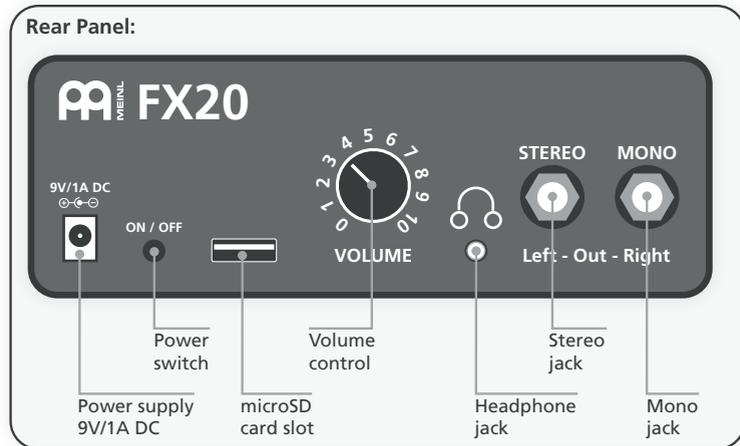

Materials:

- ABS casing
- Chrome plated steel pedal
- Non-slip rubber

Selection Of File Bank:

Select the file bank by using the slide switch. Setting the Bank Select Switch to A selects the user accessible microSD card and setting the Bank Select Switch to B selects the pre-programmed samples. The selected bank is displayed by the dot in the display:

- If the pre-programmed samples are selected then the dot in the display is not illuminated.
- If the microSD card is selected then the dot in the display is illuminated.

SD Card Types And Format:

- Use 2 GB microSD cards
- Some microSD card types ≥ 8 GB have very slow access time
- The preferred file system format is 16 bit FAT, 32 bit FAT also works

File Names:

The files are stored in the root directory of the microSD card, respectively.

- pr0x_a.wav, x: fileSet 0..9

File Format:

The files are stored in the root directory of the microSD card, respectively.

- WAV format • 48000 kHz • Stereo • 16 Bit

Playing Sounds:

- Press the pedal to play the selected sound (file set). The pedal features velocity sensitivity.
- Pressing the pedal slowly and with low pressure will play no sound.
- The detection of a trigger and thus the start of playing a sound is displayed with a short flashing of the dot in the display.
- Hitting the pedal with more power increases the volume of the sound. Maximum volume is displayed with a long flashing of the dot in the display.