

Transport

▶ **PLAY**
Restart

Start playback
When recording, punch out

SHIFT

▶ **PLAY**
Restart

Restart playback
When recording, punch out

● **REC**
Count-In

Start recording
When playing, punch in

SHIFT

● **REC**
Count-In

Activate/deactivate count-in

■ **STOP**

Stop playback/recording at current position
When stopped, relocate play head to song start

LOOP

Activate/deactivate loop playback

LOOP

Move loop in increments of one loop

METRO
Tempo

Activate/deactivate metronome

SHIFT

METRO
Tempo

Tap tempo

Move play head position

Mixer Control

1-8

Mute/unmute track

SHIFT

1-8

Solo/unsolo track

Select previous/next track

SHIFT

Switch between volume and panorama control

Adjust volume/panorama of selected track

1-8

Adjust volume/panorama of respective track

SHIFT

1-8

Fine adjust volume/panorama of respective track

←

→

Move track focus in banks of eight

Edit Control

UNDO
Redo

Undo last action

SHIFT

UNDO
Redo

Redo last action

QUANTIZE

Quantize to grid value

AUTO

Toggle automation mode between read and touch

Navigation

Select previous/next track

Select previous/next region

KONTROL^{NI} ABLETON LIVE

Transport

	Start playback When playing/recording, restart playback/recording	
	Start clip recording	
		Start arrangement view recording
	Stop playback/recording at current position When stopped, relocate play head to song start	
	Activate/deactivate loop playback in arrangement view	
	Activate/deactivate metronome	
		Tap tempo
	Move play head position	

Edit Control

	Undo last action	
		Redo last action
	Quantize to grid value	
	Toggle automation on/off for selected track	

Mixer Control

	Mute/unmute track	
		Solo/unsolo track
	Select previous/next track	
		Switch between volume and panorama control
	Adjust volume/panorama of selected track	
	Adjust volume/panorama of respective track	
		Fine adjust volume/panorama of respective track
		Move track focus in banks of eight

Arranger Control

	Select previous/next track
	Select previous/next clip in selected track
	Start/stop selected clip When empty clip is selected, start clip recording

Transport

▶ **PLAY**
Restart

● **REC**
Count-In

SHIFT

● **REC**
Count-In

■ **STOP**

LOOP

LOOP

METRO
Tempo

Start playback

Start recording
When playing, punch in

Activate/deactivate count-in

Stop playback/recording at current position

Activate/deactivate loop playback

Move loop in increments of one bar

Activate/deactivate metronome

Move play head position

Mixer Control

1-8

SHIFT

1-8

◀ ▶

SHIFT

↕

↻

1-8

SHIFT

1-8

←

→

Mute/unmute track

Solo/unsolo track

Select previous/next track

Switch between volume/panorama control for Knob 1-8

Change volume/panorama of selected track

Adjust volume/panorama of selected track

Fine adjust volume/panorama of selected track

Move track focus in banks of eight

Edit Control

UNDO
Redo

SHIFT

UNDO
Redo

QUANTIZE

AUTO

Undo last action

Redo last action

Quantize to grid value

Activate/deactivate automation write

Navigation

↕

◀ ▶

Select previous/next track

Select previous/next region