



COPYRIGHT © MMXXIV THIRD MAN FILMS

Synth Mix

Blend monophonic synth with input. Fully clockwise is pure synth.

Attack

Filter envelope attack time from 0 to 1000 ms

Drive Amount

Adds distortion, extra dirt and grit past 2 o'clock

Filter Resonance Increases the resonance of the low pass filter



Output Level

From –12 to +9 dB with 0 dB at 12 o'clock

Cutoff Frequency Selects the starting frequency for the filter envelope sweep

Alt LED Button

Hold Momentary button to modify the secondary parameters

Octaves LED Button

Press to toggle Octaves selection Green = Upper octave only Red = Upper + sub octaves Off = Octaves Off

Octaves Footswitch Turns the Octaves On or Off

Active LED Button

Press to toggle filter position Green = Filter pre-distortion Red = Filter post-distortion Off = Effect is bypassed

Active Footswitch

Turns the effect On or Off


Classic Synth Tones, Crushing Distortion

Knives in a blender! An aggressive distortion crushes the threeway blend of input signal, monophonic analog-style synth and Footswitch enabled Octaves. An ADSR-style envelope sweeps the cutoff frequency of a resonant lowpass filter with adjustable Attack, Resonance and Cutoff. Swap the filter position pre- or post-distortion to explore radically altered textures.

Altered States

Press the LED Buttons above each Footswitch to alter filter and octave textures: Green Active moves the filter pre-distortion. Red Active moves the filter post-distortion. Green Octaves adds an upper octave. Red Octaves adds upper and sub octaves.

Download **H90 Control** for routing configurations, source type (guitar/bass), preset management and more: eventideaudio.com/h90control

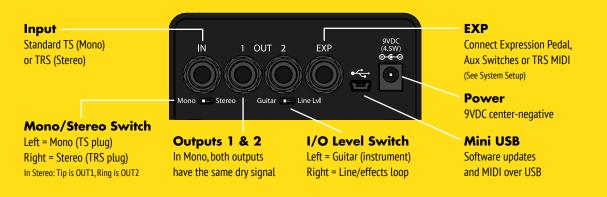

Expression Pedal

Morphing from Heel to Toe

Use an Expression Pedal to change any grouping of Knob Parameters in one smooth gesture. Easily program an Expression Pedal by setting end points for Heel and Toe. Here's how:

- 1. Press Exp Pedal fully Heel down.
- 2. Adjust any combination of Knob Parameters to set the Heel values.
- 3. Press Exp Pedal fully Toe down.
- 4. Adjust any combination of Knob Parameters to set the Toe values.
- 5. Save it or lose it. See "Presets."

Clear Expression Pedal Mappings

To clear the Expression Pedal mappings for all Knob Parameters, press and hold the Active Footswitch and, while holding, press and hold the Active LED Button until the Preset Ladder LEDs flash twice.

NOTE: To use an Expression Pedal, the EXP Jack must be set to either [EXP] or [EXP + AUX] in System Setup.

Presets

Saving: Press and hold Active LED Button and Octaves LED Button to save current preset. Current Preset Ladder LED will blink when saved. Loading: Press and hold Octaves Footswitch to load Knife Drop Preset. The first Preset Ladder LED will blink when loaded.

MIDI Messages

Load Preset

MIDI program change message loads the Preset from the Preset slot of the given value 1–127. The bottom two Ladder LEDs will be lit when Presets 6–127 are selected externally via MIDI.

Perform

CCPARAMETER4Expression Pedal52Pedal Active/Bypass53Octaves On/Off54Filter Position55Octaves Type

Knobs

CC	PARAMETER	
20	Synth	
21	Drive	
22	Level	
26	Attack	SECONDARY
27	Resonance	SECONDARY
28	Cutoff	SECONDARY


System Setup

Restore Factory Settings: Power on while pressing Active Footswitch and Active LED Button **Software Update:** Power on while pressing Octaves Footswitch and Octaves LED Button

Enter System Setup

To access these Global Settings, apply power while holding Active Footswitch and Alt LED Button. Top two Preset LEDs are on when in System Setup. Changes are stored as they are made. Cycle power to exit System Setup.

Set EXP Pedal Jack

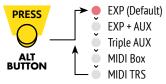

EXP + AUX TIP = Expression Pedal RING = Unused

TRIPLE AUX

TIP = Increment Preset RING = Decrement Preset TIP + RING = Load Preset Note: Times out after a few seconds


MIDI BOX

Receive and Send MIDI via a MIDI Converter Box (Tip Active)


MIDI TRS

Receive MIDI directly with a DIN to TRS or TRS cable.

Set MIDI Channel

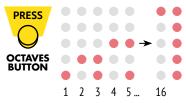

Set Bypass Mode

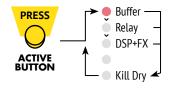

Set MIDI Channel: Press Octaves LED Button Factory Default = Omni

Ωn

Catch Up ON/OFF

PRESS

OCTAVES

SWITCH


Factory Default = Off

For technical support, contact: support@eventideaudio.com

Factory Default = Buffer

eventideaudio.com @eventideaudio

FC This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

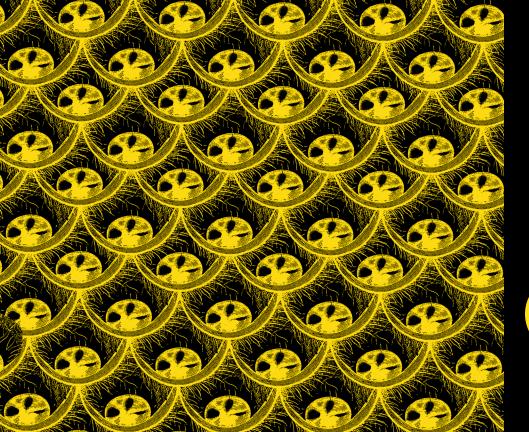



Aprvd. by the estate of GIOVANNI BIANCO IL TERZO

Knife Drop Manual for Firmware v2.0+ Eventide Part#141940 Rev B © 2024 Third Man Records, Eventide Inc. Eventide is a registered trademark of Eventide Inc.