


Fender™

Mini**57 Twin-Amp**™



Owner's Manual

Control Description

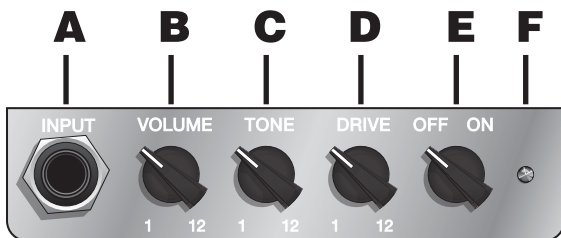

Top Panel Functions

A) INPUT – Plug your guitar in here.

B) VOLUME – Adjusts amplifier loudness.

C) TONE – Adjusts the tone and brightness of the guitar input channel. 12 is the brightest setting, becoming progressively less bright as the dial is rotated towards 1.


D) DRIVE – Adjusts the distortion level and contributes to the overall loudness of the amplifier. Use in conjunction with VOLUME to adjust the overall loudness of the amplifier.

E) POWER – Switches the Amplifier ON or OFF.

F) POWER INDICATOR – Illuminates when the amplifier is ON.

Side Panel Functions

G) HEADPHONE JACK – Connection for headphones. Using this jack automatically disables the internal speakers.

H)  DC 9V – 9V DC power adapter connection. Only use a safety certified external power adapter that is rated properly for use with this product.

SPECIFICATIONS

MODEL	:MINI 57 TWIN
DIMENSIONS	:127mm(HEIGHT) :171mm(WIDTH) :70mm(DEPTH)
WEIGHT	:680g
POWER OUTPUT	:1W RMS
POWER CONSUMPTION	:DC9V 006P BATTERY x1 :200mA
SPEAKER COMPLEMENT	:3" SPEAKERS x2

CAUTION:

AMPLIFIERS AND LOUDSPEAKER SYSTEMS, AND EAR/HEADPHONES (IF EQUIPPED) ARE CAPABLE OF PRODUCING VERY HIGH SOUND PRESSURE LEVELS WHICH MAY CAUSE TEMPORARY OR PERMANENT HEARING DAMAGE. USE CARE WHEN SETTING AND ADJUSTING VOLUME LEVELS DURING USE.

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

The Fender logo, featuring the word "Fender" in a stylized, handwritten-style script font. A small "TM" trademark symbol is located at the top right of the letter "r".

Corona, California
www.fender.com

MADE IN CHINA