




This product is a foot controller for amp products that are equipped with a GA-FC jack. The printing on the panel indicates the functions for a KATANA amp. If you are using this foot controller with a product other than a KATANA amp, please affix the label sheet that is included with your amp.

Connecting the GA-FC

Use a stereo cable to connect the foot controller to the GA-FC jack of your amp.

* Always use a stereo cable.

* Use cables that do not contain resistors.

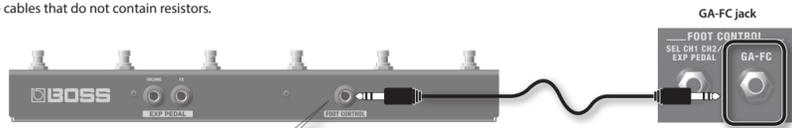

* This instrument is equipped with TRS type jacks. Wiring diagrams for these jacks are shown below.



Operating the GA-FC

When used together with a KATANA amp, you can use the GA-FC to switch channels or turn effects on/off.

* For details on operation, refer to the owner's manual of your amp.



Using the expression pedals

When used together with a KATANA amp, connecting an expression pedal (Roland EV-5, BOSS FV-500L, BOSS FV-500H; sold separately) lets you use the pedal to control volume or other aspects of the sound.

* For details on operation, refer to the owner's manual of your amp.



* Use only the specified expression pedal (Roland EV-5, BOSS FV-500L, BOSS FV-500H; sold separately). By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

Using the footswitches

When used together with a KATANA amp, connecting a footswitch (BOSS FS-5U; sold separately) lets you use it to switch between BANK A/B.

* For details on operation, refer to the owner's manual of your amp.



Copyright © 2012 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

IMPORTANT NOTES

Placement

This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.

When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.

Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface. You can place a piece of felt or cloth under the rubber feet to prevent this from happening. If you do so, please make sure that the unit will not slip or move accidentally.

Swiftly wipe away any liquid that spills on the unit using a dry, soft cloth.

Maintenance

For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.

Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

Use a reasonable amount of care when using the unit's switches; and when using its jacks and connectors. Rough handling can lead to malfunctions.

When disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.

When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.

Use only the specified expression pedal (Roland EV-5, BOSS FV-500L, BOSS FV-500H; sold separately). By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

Copyright

Roland and BOSS are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.

Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

Main Specifications

BOSS GA-FC: Foot Controller

Controls	Switch x 6
Connectors	EXP PEDAL Jack (1/4-inch TRS phone type) x 2 FOOT CONTROL Jack (1/4-inch TRS phone type)
Dimensions	392 (W) x 81 (D) x 49 (H) mm 15-7/16 (W) x 3-3/16 (D) x 1-15/16 (H) inches
Weight	1.0 kg / 2 lbs 4 oz
Accessories	Owner's Manual, Foot Controller Cable
Options	Expression Pedal (Roland EV-5, BOSS FV-500L, BOSS FV-500H)

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

For China

有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。
本资料适用于2007年3月1日以后本公司所制造的产品。

环保使用期限

此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年限。所谓环保使用期限是指在自制造日起的规定的期限内，产品中所含的有害物质不致引起环境污染，不会对人身、财产造成严重的不良影响。环保使用期限仅在遵照产品使用说明书，正确使用产品的条件下才有效。不当的使用，将会导致有害物质泄漏的危险。

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳 (壳体)	×	○	○	○	○	○
电子部件 (印刷电路板等)	×	○	×	○	○	○
附件 (电源线、交流适配器等)	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。

×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572的限量要求。

(企业可在此处，根据实际情况对上表中打“×”的技术原因进行进一步说明。)

USING THE UNIT SAFELY

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The 🔥 symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ⏻ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

<p>⚠ WARNING</p> <p>Do not disassemble or modify by yourself Do not open or perform any internal modifications on the unit.</p> <p></p>	<p>⚠ WARNING</p> <p>Don't allow foreign objects or liquids to enter unit; never place containers with liquid on unit Never allow foreign objects (e.g., flammable objects, coins, wires) or liquids (e.g., water or juice) to enter this product. Doing so may cause short circuits, faulty operation, or other malfunctions.</p> <p></p>	<p>⚠ CAUTION</p> <p>Manage cables for safety Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.</p> <p></p>
<p>Do not repair or replace parts by yourself Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.</p> <p></p>	<p>Turn off the unit if an abnormality or malfunction occurs Immediately turn the amplifier off, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page when:</p> <ul style="list-style-type: none"> Objects have fallen into, or liquid has been spilled onto the unit; or If smoke or unusual odor occurs; or The unit has been exposed to rain (or otherwise has become wet); or The unit does not appear to operate normally or exhibits a marked change in performance. <p></p>	<p>Avoid climbing on top of the unit, or placing heavy objects on it Never climb on top of, nor place heavy objects on the unit.</p> <p></p>
<p>Do not use or store in the following types of locations</p> <ul style="list-style-type: none"> Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are Damp (e.g., baths, washrooms, on wet floors); or are Exposed to steam or smoke; or are Subject to salt exposure; or are Humid; or are Exposed to rain; or are Dusty or sandy; or are Subject to high levels of vibration and shakiness. <p></p>	<p>Adults must provide supervision in places where children are present When using the unit in locations where children are present, be careful so no mishandling of the unit can take place. An adult should always be on hand to provide supervision and guidance.</p> <p></p>	<p>Disconnect everything before moving the unit Disconnect all cords coming from external devices before moving the unit.</p> <p></p>
<p>Do not place in an unstable location Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.</p> <p></p>	<p>Do not drop or subject to strong impact Protect the unit from strong impact. (Do not drop it!)</p> <p></p>	

For the USA

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off on the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment requires shielded interface cables in order to meet FCC class B limit. Any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For Canada

CAN ICES-3 (B)/NMB-3 (B)

For EU Countries

Manufacturer: Roland Corporation
2036-1 Nakagawa, Hosoe-cho, Kita-ku, Hamamatsu, Shizuoka 431-1304, JAPAN

Importer: Roland Corporation
ENA 23 Zone 1 nr. 1620 Klaus-Michael Kuehnelaan 13, 2440 Geel, BELGIUM



For the U.K.

Manufacturer: Roland Corporation
2036-1 Nakagawa, Hosoe-cho, Kita-ku, Hamamatsu, Shizuoka 431-1304, JAPAN

Importer: Roland Europe Group Limited
Hive 2, 1530 Arlington Business Park, Theale, Reading, Berkshire, RG7 4SA United Kingdom




For EU Countries

UK	This symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this symbol must not be discarded together with household waste.
DE	Dieses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt vom Hausmüll gesammelt werden muss gemäß den regionalen Bestimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen nicht zusammen mit dem Hausmüll entsorgt werden.
FR	Ce symbole indique que dans les pays de l'Union européenne, ce produit doit être collecté séparément des ordures ménagères selon les directives en vigueur dans chacun de ces pays. Les produits portant ce symbole ne doivent pas être mis au rebut avec les ordures ménagères.
IT	Questo simbolo indica che nei paesi della Comunità europea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestici, secondo la legislazione in vigore in ciascun paese. I prodotti che riportano questo simbolo non devono essere smaltiti insieme ai rifiuti domestici. Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151.
ES	Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, tal como está regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos.
PT	Este símbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico.
NL	Dit symbool geeft aan dat in landen van de EU dit product gescheiden van huishoudelijk afval moet worden aangeboden, zoals bepaald per gemeente of regio. Producten die van dit symbool zijn voorzien, mogen niet samen met huishoudelijk afval worden verwijderd.
DK	Dette symbol angiver, at i EU-lande skal dette produkt opsamlles adskilt fra husholdningsaffald, som defineret i hver enkelt region. Produkter med dette symbol må ikke smides ud sammen med husholdningsaffald.
NO	Dette symbolet indikerer at produktet må behandles som spesialavfall i EU-land, iht. til retningslinjer for den enkelte regionen, og ikke kastes sammen med vanlig husholdningsavfall. Produkter som er merket med dette symbolet, må ikke kastes sammen med vanlig husholdningsavfall.
SE	Symbolen anger att i EU-länder måste den här produkten kasseras separat från hushållsaffall, i enlighet med varje regions bestämmelser. Produkter med den här symbolen får inte kasseras tillsammans med hushållsaffall.
FI	Tämä merkintä ilmaisee, että tuote on EU-maissa kerättävä erillään kotitalousjätteistä kunkin alueen voimassa olevien määräysten mukaisesti. Tällä merkinnällä varustettuja tuotteita ei saa hävittää kotitalousjätteen mukana.
HU	Ez a szimbólum azt jelenti, hogy az Európai Unióban ez a termék a háztartási hulladéktól elkülönítve, az adott régióban érvényes szabályozás szerint kell gyűjtetni. Az ezzel a szimbólummal ellátott termékeket nem szabad a háztartási hulladék közé dobni.
PL	Symbol oznacza, że zgodnie z regulacjami w odpowiednim regionie, w krajach UE produkty nie należy wyrzucać z odpadami domowymi. Produktów opatrzonych tym symbolem nie można utylizować razem z odpadami domowymi.
CZ	Tento symbol udává, že v zemích EU musí být tento výrobek sbíráán odděleně od domácího odpadu, jak je určeno pro každý region. Výrobky nesoucí tento symbol se nesmí vyhazovat spolu s domácím odpadem.
SK	Tento symbol vyjadruje, že v krajinách EÚ sa musí zber tohto produktu uskutočňovať oddelene od domového odpadu, podľa nariadení platných v konkrétnej krajine. Produkty s týmto symbolom sa nesmú vyhazovať spolu s domovým odpadom.
EE	See sümbol näitab, et EL-i maades tuleb see toode olemprigist eraldi koguda, nii nagu on igas piirkonnas määratletud. Selle sümboliga märgitud tooteid ei tohi ära visata koos olmeprügiga.
LT	Šis simbolis rodo, kad ES šalyse šis produktas turi būti surenkamas atskirai nuo buitinių atliekų, kaip nustatyta kiekviename regione. Šiuo simboliu paženklinoti produktai neturi būti šmetami kartu su buitiniems atliekoms.
LV	Šis simbols norāda, ka ES valstīs šo produktu jāievie atsevišķi no mājsaimniecības atkritumiem, kā noteikts katrā reģionā. Produktus ar šo simbolu nedrīkst izmest kopā ar mājsaimniecības atkritumiem.
SI	Ta simbol označuje, da je treba proizvod v državah EU zbirati ločeno od gospodinskih odpadkov, tako kot je določeno v vsaki regiji. Proizvoda s tem znakom ni dovoljeno odlagati skupaj z gospodinskimi odpadki.
GR	Το σύμβολο αυτό υποδηλώνει ότι στις χώρες της Ε.Ε. το συγκεκριμένο προϊόν πρέπει να συλλέγεται χωριστά από τα υπόλοιπα οικιακά απορρίμματα, σύμφωνα με όσα προβλέπονται σε κάθε περιοχή. Τα προϊόντα που φέρουν το συγκεκριμένο σύμβολο δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα.

本製品はGA-FC端子があるアンプ製品用のフット・コントローラーです。パネルの表記はKATANAアンプ用の機能表示になっています。KATANAアンプ以外の製品でお使いになる場合は、アンプに同梱されているパネル・シートを貼ってお使いください。

GA-FCの接続

アンプ側のGA-FC端子にステレオケーブルで接続します。
※必ずステレオケーブルを使用してください。
※抵抗の入っていないケーブルを使用してください。

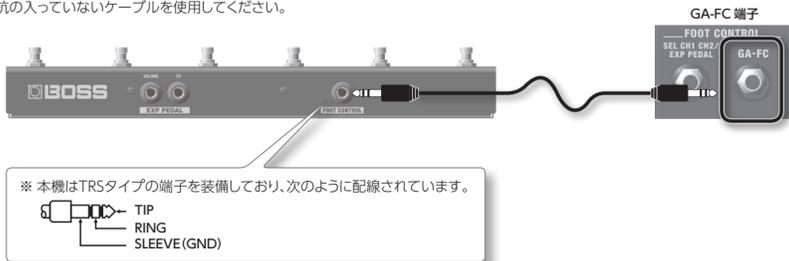

GA-FCの操作方法

KATANAアンプと組み合わせたときは、チャンネルの切り替えやエフェクトのオン/オフなどができます。
※詳しい操作方法については、アンプ側の取扱説明書をご覧ください。



エクスプレッション・ペダルを使う

KATANAアンプと組み合わせたときは、エクスプレッション・ペダル(Roland EV-5、BOSS FV-500L、BOSS FV-500H別売)を接続すると、ペダルを使って音量などをコントロールできます。
※詳しい操作方法については、アンプ側の取扱説明書をご覧ください。



※エクスプレッション・ペダルは、必ず指定のもの(別売:Roland EV-5、BOSS FV-500L、BOSS FV-500H)をお使いください。他社製品を接続すると、本体の故障の原因になる場合があります。

フットスイッチを使う

KATANAアンプと組み合わせたときは、フットスイッチ(BOSS FS-5U:別売)を接続すると、BANK A/Bの切り替えができます。
※詳しい操作方法については、アンプ側の取扱説明書をご覧ください。



© 2012 ローランド株式会社 本書の一部、もしくは全部を無断で複写・転載することを禁じます。

使用上のご注意

設置について

- 本機をテレビやラジオの近くで動作させると、テレビ画面に色ムラが出たりラジオから雑音が出たりすることがあります。この場合は、本機を遠ざけて使用してください。
- 極端に高温湿度の違う場所に移動すると、内部に水滴がつく(結露)することがあります。そのまま使用すると故障の原因になります。致時間放置して、結露がなくなってから使用してください。
- 設置条件(設置面の材質、温度など)によっては、本機のカゴ足が設置した床などの表面を変色または変質させることがあります。カゴ足の下にフェルトなどの布を敷くと、安心してお使いいただけます。この場合、本機が滑って動いたりしないことを確認してからお使いください。
- 表面に付着した液体は、速やかに乾いた柔らかい布で拭き取ってください。

お手入れについて

- 通常のお手入れは、柔らかい布で乾拭きするか、固く絞った布で汚れを拭き取ってください。汚れが激しいときは、中性洗剤を含んだ布で汚れを拭き取ってから、柔らかい布で乾拭きしてください。
- 変色や変形の原因となる、ベンジン、シンナー、アルコール類は使用しないでください。

修理について

- お客様が本機を分解、改造された場合、以後の性能について保証できなくなります。また、修理をお断りする場合があります。
- 当社では、本機の補修用性能部品(製品の機能を維持するために必要な部品)を、製造打切後6年間保有しています。この部品保有期間を修理可能な期間とさせていただきます。なお、保有期間を過ぎた後でも、故障箇所によっては修理可能な場合がありますので、お買い上げ店、またはローランドお客様相談センターにご相談ください。

その他の注意について

- 故障の原因になりますので、スイッチ、入出力端子などに過度の力を加えないでください。
 - ケーブルを抜くときは、ショートや断線を防ぐため、プラグ部分を持って引き抜いてください。
 - 輸送や引越しをするときは、本機が入っていた箱と緩衝材、または同等品で梱包してください。
 - 本機が入っていた梱包箱や緩衝材を廃棄するとき、各地域のゴミの分別基準に従ってください。
 - エクスプレッション・ペダルは、必ず指定のもの(別売:Roland EV-5、BOSS FV-500L、BOSS FV-500H)をお使いください。他社製品を接続すると、本体の故障の原因になる場合があります。
- 著作権について**
- Roland、BOSSは、日本国およびその他の国におけるローランド株式会社の商標または登録商標です。
 - 文中記載の会社名および製品名などは、各社の登録商標または商標です。

主な仕様

BOSS GA-FC:フット・コントローラー

コントロール	スイッチ×6
接続端子	EXP PEDAL端子(TRS標準タイプ)×2 FOOT CONTROL端子(TRS標準タイプ)
外形寸法	392(幅)×81(奥行)×49(高さ)mm
質量	1.0kg
付属品	取扱説明書、保証書、フット・コントローラー接続ケーブル
別売品	エクスプレッション・ペダル (Roland EV-5、BOSS FV-500L、BOSS FV-500H)

※製品の仕様や外観は、改良のため予告なく変更することがあります。

お問い合わせの窓口



ホームページをご覧ください

Q&A、チャットサポート、メール、電話でのお問い合わせ

Roland製品

https://roland.cm/roland_support

BOSS製品

https://roland.cm/boss_support



'21.04.01 現在

安全上のご注意

本機を正しくお使いいただくために、ご使用前に「安全上のご注意」と「使用上のご注意」をよくお読みください。また、本機の優れた機能を十分ご理解いただくためにも、取扱説明書をよくお読みください。取扱説明書は必要ときにすぐに見ることができるよう、手元に置いてください。

火災・感電・傷害を防止するには

⚠ 警告と ⚠ 注意の意味について

⚠ 警告	取り扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表示しています。
⚠ 注意	取り扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表示しています。 ※物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表示しています。

図記号の例

	△は、注意(危険、警告を含む)を表しています。具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表しています。
	⊘は、禁止(してはいけないこと)を表しています。具体的な禁止内容は、⊘の中に描かれています。左図の場合は、「分解禁止」を表しています。
	●は、強制(必ずすること)を表しています。具体的な強制内容は、●の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表しています。

----- 以下の指示を必ず守ってください -----

<p>⚠ 警告</p> <p>分解や改造をしない 本機を分解したり、改造したりしないでください。</p> <p>個人で修理や部品交換はしない 修理/部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランドお客様相談センターに相談してください。</p> <p>次のような場所で使用や保管はしない 次のような場所に設置しないでください。 ・温度が極端に高い場所(直射日光の当たる場所、暖房機器の近く、発熱する機器の上など) ・水気の近く(風呂場、洗面台、濡れた床など)や湿度の高い場所 ・漏気や油煙が当たる場所 ・塩害の恐れがある場所 ・雨に濡れる場所 ・ほこりや砂ぼこりの多い場所 ・振動や揺れの多い場所</p> <p>不安定な場所に設置しない 本機を、ぐらつく台の上や傾いた場所に設置しないでください。必ず安定した水平な場所に設置してください。</p>	<p>⚠ 警告</p> <p>異物や液体を入れない、液体の入った容器を置かない 本機に、異物(燃えやすいもの、硬貨、針金など)や液体(水、ジュースなど)を絶対に入れないでください。ショートや誤動作など、故障となることがあります。</p> <p>異常や故障が生じたときは電源を切る 次のような場合は、直ちにアンプ側の電源を切って、お買い上げ店またはローランドお客様相談センターに修理を依頼してください。 ・煙が出たり、異臭がしたりしたとき ・異物が内部に入ったとき、液体がこぼれたりしたとき ・機器が(雨などで)濡れたとき ・機器に異常や故障が生じたとき</p> <p>お子様の取り扱いに注意する お子様のいる場所で使用する場合、お子様の取り扱いやいたずらに注意してください。必ず大人のかたが、監視/指導してあげてください。</p> <p>落としたり、強い衝撃を与えない 本機を落としたり、本機に強い衝撃を与えないでください。</p>	<p>⚠ 注意</p> <p>コードやケーブルは煩雑にならないように配線する 接続したコードやケーブル類は、煩雑にならないように配線してください。特に、コードやケーブル類は、お子様の手が届かないように配線してください。</p> <p>上に乗ったり、重いものを置いたりしない 本機の上に乗ったり、機器の上に重いものを置いたりしないでください。</p> <p>移動するときはすべての接続をはずす 本機を移動するときは、外部機器との接続をはずしてください。</p>
---	---	---

ローランド株式会社

〒431-1304 静岡県浜松市北区細江町中川 2036-1



Roland Service Centers and Distributors

When you need repair service, access this URL and find your nearest Roland Service Center or authorized Roland distributor in your country.

<https://roland.cm/service>

