

BASS

MID

TREBLE

GAIN

POST

BOOST

PREAMP **LIVE**

Owner's Manual

MOOER

V3

CONTENTS

PRECAUTIONS	01
INTRODUCTION	02
MAIN FEATURES	02
PEDAL LAYOUT	03-04
INTERNAL SIGNAL CHAIN	05
CONTROLS	05-09
Channel controls	06
Master Controls	07
Footswitches / Channel selection / Saving Presets	08
CHANNEL SELECTION	08
BANK SELECTION	09
BOOST	10-12
NOISE GATES	13
FX LOOP	14-16
MODE A (serial)	15
MODE B (A/B)	16
TONE CAPTURE	17-19
TONE CAPTURE operation	18-19
CHANGING PREAMP MODELS	20
PREAMP MODELS	21-24
MIDI	25-27
CAB SIM	28-30
CAB MODEL	29
MIC MODEL	30
MOBILE APP	31
FIRMWARE UPDATE	32
SPECIFICATIONS	33

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 12V DC 1A, $\oplus - \ominus$, center negative. Unplug the AC power adapter when not in use or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Magnetic fields
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Heat sources
- Extreme temperature or humidity
- High humidity or moisture

FCC certification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

INTRODUCTION

PREAMP LIVE has been designed from the ground up to be the ultimate digital preamp modeller for use in a live situation. Every control feature has been carefully thought out to provide the best experience for live performance.

Based on our popular range of MICRO PREAMPS, PREAMP LIVE lets you carry 12 independent preamp channels of your choice everywhere you go for a whole array of different amp tones right at your feet.

Added to the 12 preamps is a dual position booster, a fully programmable effects loop, full channel switching control, MIDI IN and OUT, dedicated headphone connection, multiple outputs with optional cab simulation and IR loading capabilities.


If that wasn't enough, you can also use MOOER's TONE CAPTURE to capture your own amplifiers and even make some experiments to create brand new amplifiers to find that elusive tone you've been chasing.

MAIN FEATURES


- ◆ Contains 12 independent preamp channels with easy and familiar switching controls
- ◆ Pre and Post BOOSTER for each channel
- ◆ Easily accessible global controls for fast setup in different live situations
- ◆ Optional independent speaker cab sim for each output and IR loading via the software
- ◆ Fully programmable effects loop with serial and A/B modes. For use with external effects or combining with your head/combo's own preamp
- ◆ TONE CAPTURE for sampling your real amplifiers tonal characteristics and creating new digital preamp models
- ◆ Dedicated headphone output for using as a stand-alone practice unit
- ◆ Fully mappable MIDI IN and MIDI OUT for integration with other equipment
- ◆ USB and Bluetooth for connecting to PC, MAC and MOBILE APP for deep editing

PEDAL LAYOUT

FRONT PANEL

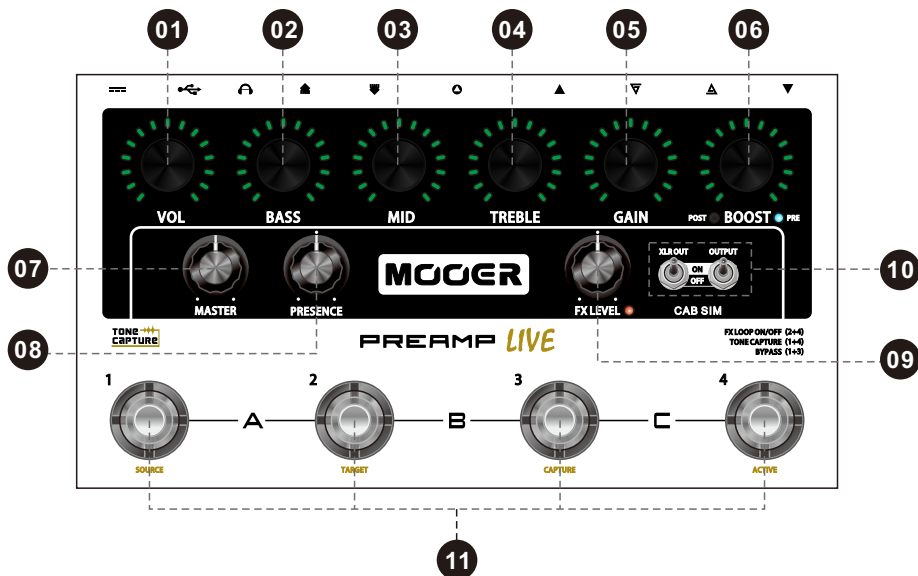


BACK PANEL

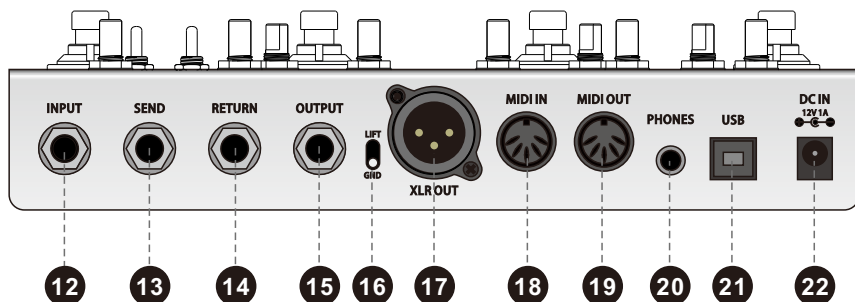

PEDAL LAYOUT


- 01 **VOL**
Adjusts the preamp channel volume
- 02 **BASS**
Adjusts the preamp channel low frequencies
- 03 **MID**
Adjusts the preamp channel middle frequencies
- 04 **TREBLE**
Adjusts the preamp channel high frequencies
- 05 **GAIN**
Adjusts the preamp channel gain
- 06 **BOOST**
Rotate to adjust the boost level for the preamp channel
Press to change the boost to pre (before the preamp input) or post (after the preamp volume)
Press and hold to access pre and post noise gates. (LED's will turn yellow)
- 07 **MASTER**
Adjusts the master output volume of PREAMP LIVE
- 08 **PRESENCE**
Adjusts the master presence (brightness) of PREAMP LIVE
- 09 **FX LEVEL**
Adjusts the master output level of the effects send
- 10 **CAB SIM**
Toggles speaker cabinet simulation on/off. Each output has an independent toggle switch for activating speaker cabinet simulation. Turn CAB SIM on if this output is being sent direct (DI) to a full frequency monitor, PA system or audio interface.
- 11 **FOOTSWITCH 1-4**
See the "Footswitches / Channel selection / Saving Presets" section of this manual for more info...
- 12 **INPUT**
Connect your instrument using a standard ¼" jack cable
- 13 **SEND**
Connect to your external effects input
- 14 **RETURN**
Connect to your external effects output
- 15 **OUTPUT**
Connect to a power amp or direct to a PA system or audio interface
- 16 **GROUND LIFT**
Use to eliminate ground hum when using XLR OUT
- 17 **XLR OUT**
Connect to a power amp or direct to a PA system or audio interface
- 18 **MIDI IN**
Connect to an external device's MIDI OUT to remotely control the PREAMP LIVE
- 19 **MIDI OUT**
Connect to an external devices MIDI IN to control it using PREAMP LIVE
- 20 **PHONES**
Connect directly to your headphones
- 21 **USB**
Connect to a computer to change preamp models, programme MIDI settings, edit channel settings using the proprietary editing software and update PREAMP LIVE's firmware
- 22 **DC IN**
Connect to power supply 12V DC 1A 

INTERNAL SIGNAL CHAIN

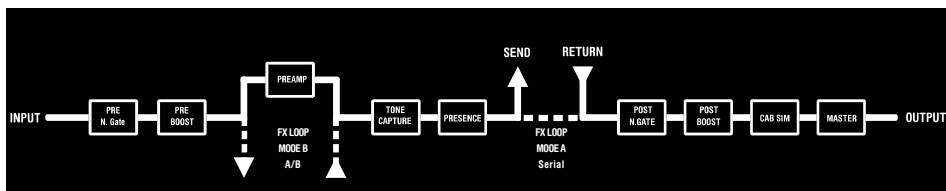

CONTROLS

PREAMP LIVE has been designed primarily with live performance in mind. The controls have been laid out to feel intuitive, familiar, easy to navigate and adjust on the fly.

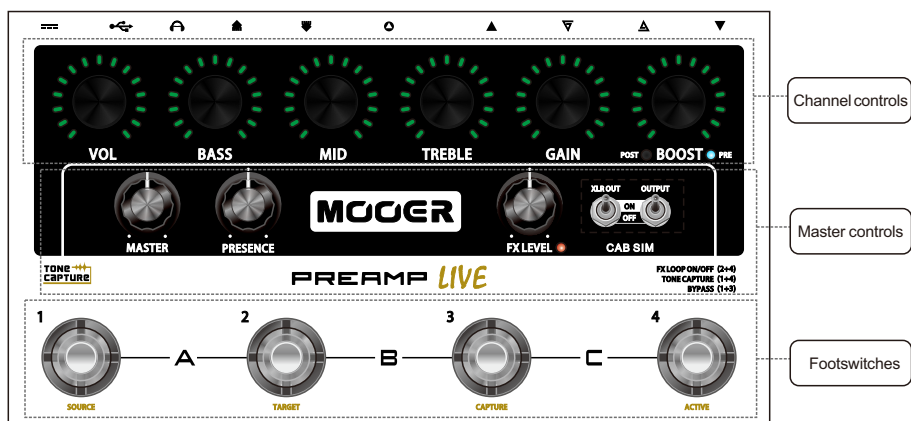


For sake of this manual I've separated the controls into 3 distinct groups. Let's have a look at each group separately.

Channel controls

All of these knobs control parameter settings that are specific to each Preamp channel. The LED's surrounding these controls show the current value of each parameter (See "PEDAL LAYOUT" section of this manual).



The LED's surrounding the control knobs, display the current settings

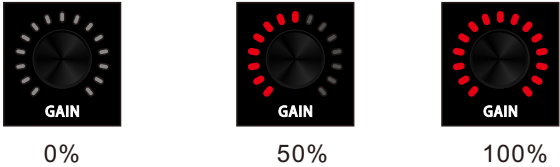

Simply rotate the Knob for the parameter setting you wish to adjust (See "BOOST" section of this manual for more on the BOOST).

If you are happy with your tone and you want to keep it, then remember to save your changes.


Press and hold the footswitch for your currently selected channel for about 1 second. The surrounding LED will flash to confirm saving.

The LED colour displays which bank is currently selected



Master Controls

All of the master controls are global settings which are independent from the PREAMP channels and remain fixed during operation unless adjusted. This provides an easy way to incorporate PREAMP LIVE into various different setups without having to adjust the channel settings you've saved.

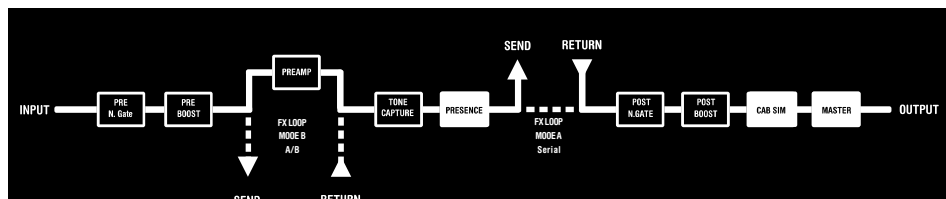

MASTER- Adjusts the overall output volume of PREAMP LIVE

PRESENCE- Adjusts the overall brightness of PREAMP LIVE.

This is great for compensating for the difference between dark and bright power amps when using PREAMP LIVE in different venues.

FX LEVEL- Setup the send level of the effects loop and leave it in place.

This allows easy integration of external effects units or even external preamps with the programmable effects loop.

More on that in the FX LOOP section of this manual.....

CAB SIM- Independently toggle speaker cabinet simulation on/off for the different outputs of PREAMP LIVE.


This makes connecting one output to your on-stage backline (no cab sim) and one output direct to the PA (with cab sim) very easy.

Each preamp channel can have it's own cab sim assigned from a list within the official software. You can also import your own IR files to replace some of the default cab sims.



Footswitches / Channel selection / Saving Presets


There are 12 channels in total inside PREAMP LIVE. These are organised into 3 banks with 4 channels on each. So you could consider each bank almost like a different 4 channel head and each footswitch of the PREAMP LIVE as a different channel within that head.

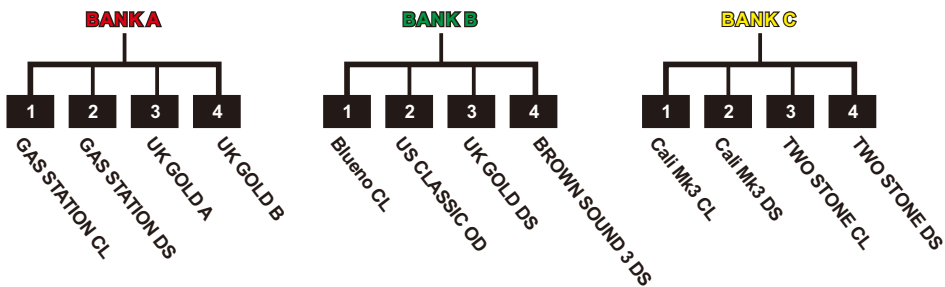


The channel selection logic of PREAMP LIVE is based on the same control methods you might find on a traditional 4 channel tube amplifier.

CHANNEL SELECTION

Press a footswitch to select a channel

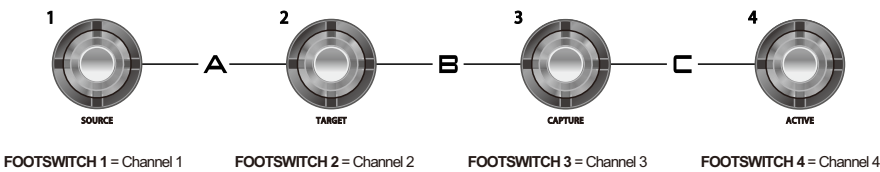


The LED surrounding the footswitch tells us which channel we are on.

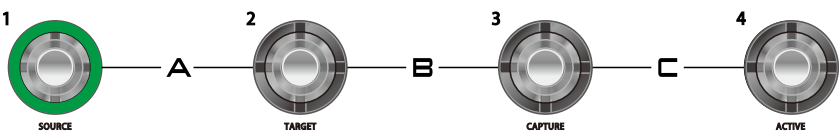

BANK SELECTION

To select a BANK press the 2 footswitches marked at either side of the BANK you wish to select. The LED's surrounding the CHANNEL CONTROLS will change colour to indicate which bank is selected



BANK A = FOOTSWITCH 1 + 2
RED



BANK B = FOOTSWITCH 2 + 3
GREEN



BANK C = FOOTSWITCH 3 + 4
YELLOW



The colour of the CHANNEL CONTROL LED's will indicate which BANK is currently selected. After selecting a different bank the PREAMP LIVE will wait for you to select a channel within that bank before changing the sound.

Saving

All Settings are saved per channel. This includes all of the Channel controls, Boost settings + status, Noise Gate settings and FX LOOP on/off status.

- Select a Preamp Channel
- Dial in your tone
- Press and hold the footswitch for your currently selected channel for around 1 second.
- The surrounding LED will flash to confirm saving

Duplicate channel


You can copy your current channel to any other channel position within Preamp Live.

WARNING this will overwrite all channel settings, Boost settings + status, Noise Gate settings, FX LOOP status and Preamp Model of the target channel. The previous Preamp model will not be recoverable without using the supporting software.

- Select the channel you wish to copy and duplicate
- Press and hold the footswitch of the target channel you wish to overwrite for 3 seconds
- The surrounding LED will flash to confirm overwriting


BOOST

PREAMP LIVE is fully equipped with 2 different boosters. A PRE BOOST and a POST BOOST. You can make and save independent boost settings for each preamp channel. Here's where they are in the signal chain.

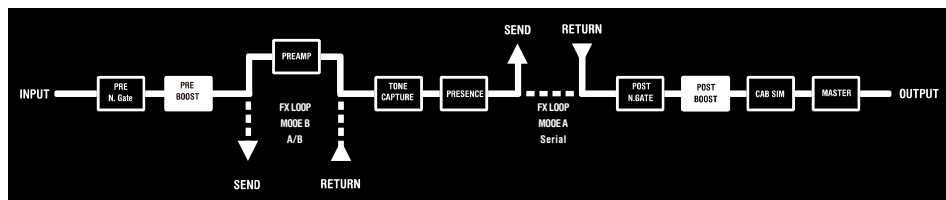


Boost can be set to PRE or POST by pressing the BOOST control knob.

PRE BOOST comes before the PREAMP in the signal chain and will add more saturation by pushing the front end of the preamp and boosting the volume, just like a clean overdrive pedal would. The PRE BOOST also adds a bit of mid hump to your guitar signal to fatten things up.

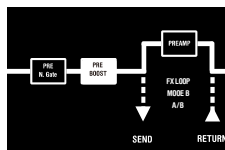


POST BOOST Comes after the PREAMP in the signal chain so it simply adds more volume when engaged. The POST BOOST is completely transparent and has a boost range of 0dB - 6dB.

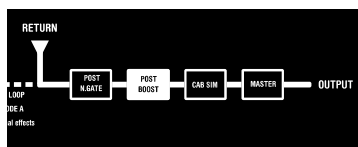

Press the footswitch of your currently selected PREAMP CHANNEL to toggle the boost ON/OFF.



GREEN = OFF




RED = ON




CHANGING BOOST MODELS

Both PRE and POST boost models can be changed in computer software/APP.

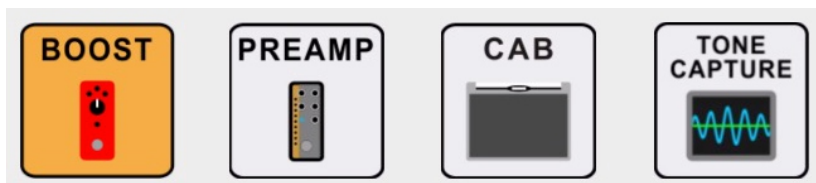

Select the BOOST icon in software

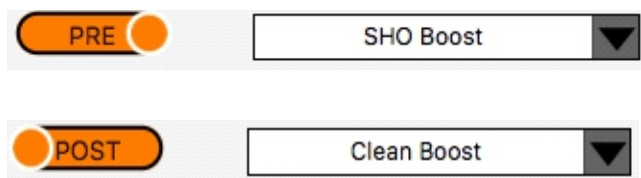

Two drop down menu for choosing the pre/post boost models.

BOOST MODELS


PRE BOOST	
1.SHO Boost	Based on Zvex® Super Hard On
2.Pure Boost	Based on Mooer® Pure Boost
3.Gold Clon	Based on Klon® Centaur Professional Overdrive
4.Tube DR	Based on B.K Butler® Tube Driver
5.Blues Mood	Based on Mooer® Blues Mood
6.808	Based on Ibanez® Tube Scream 808
7.OD250	Based on DOD® OD-250
8.BeeBee Pre	Based on Xotic® BB Preamp
9.Grey Faze	Based on Mooer® Grey Faze
10.Muffy	Based on Electro-Harmonix® Big Muff Pi
11.Black Rat	Based on Pro Co® Rat 2
12.Shred	Based on Marshall® Shred Master
13.Riet	Based on Suhr® Riot

POST BOOST	
1.Clean Boost	Based on Mooer® Clean Boost
2.EP	Based on Xotic® EP Booster
3.Flex Boost	Based on Mooer® Flex Boost

Please Note: All manufacturers and brand names mentioned above are not affiliated with MOOER or PREAMP LIVE

NOISE GATES

Preamp live has 2 adjustable noise gates per channel. PRE and POST.
Both can be used simultaneously if needed.

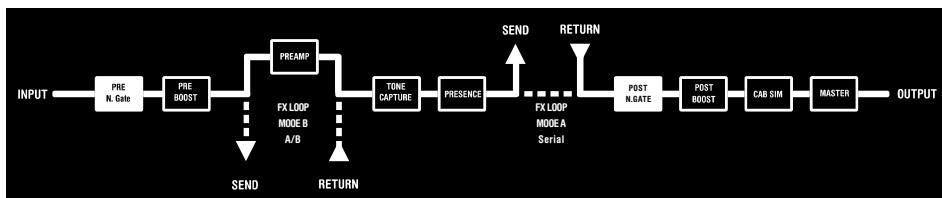


Press and hold the BOOST control to access the noise gates. The surrounding LED's will turn yellow to indicate the noise gate level.

Press the BOOST control to toggle between PRE or POST noise gate


PRE NOISE GATE

This noise gate comes after the input of PREAMP live but before the PREAMP model within the signal chain. Use this to eliminate noise from external devices that are connected to the input

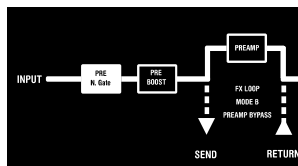


POST NOISE GATE

This noise gate comes after the preamp model in the signal chain. Use this to eliminate unwanted noise caused by high gain preamp settings.

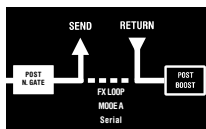

Effects LOOP
MODE A (SERIAL)

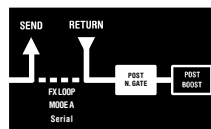

Effects LOOP
MODE B (A/B)


When the effects loop is set to MODE A (SERIAL) the POST NG will be before the effects loop.
When the effects loop is set to MODE B (A/B) the POST NG will be after the effects loop.

After setting your desired noise gate levels, press and hold the BOOST control to exit the noise gate setup. The noise gate setup will automatically exit after 5 seconds.


Remember to save your channel if you wish to keep these settings

Please note - Both noise gates will be completely disabled on each channel by default

FX LOOP

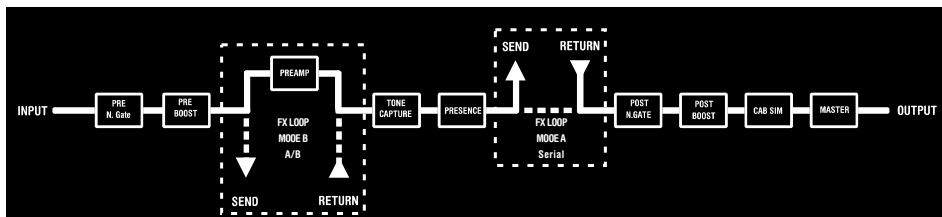

Preamp live has an advanced, programmable effects loop which has 2 different modes. Simultaneously press and release footswitches 2 + 4 to toggle the effects loop on/off

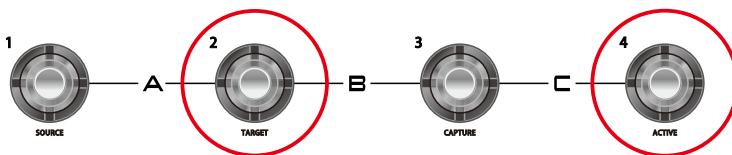

Press and hold footswitches 2 + 4 for several seconds to change the FX LOOP mode.

The LED beside the FX LEVEL control will illuminate to show when the FX LOOP is active and it's colour depicts which FX LOOP MODE is selected.

MODE A (serial) = GREEN



MODE B (A/B) = RED




The FX LEVEL control will adjust the send level +/- 5dB.




Please note - The on/off status of the effects loop can be saved per preamp channel but the FX LOOP MODE is a global setting.

MODE A (serial)

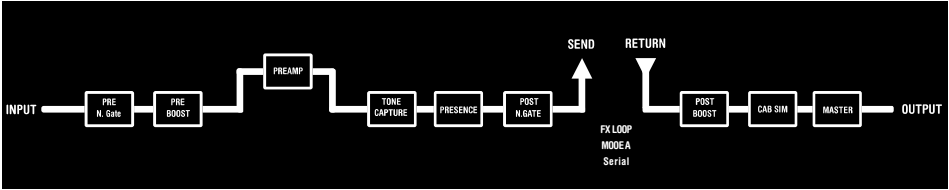


MODE A is a traditional serial FX LOOP that comes after the PREAMP section of PREAMP LIVE. This is ideal for using external effects units that you want to switch in and out with different preamp channels.

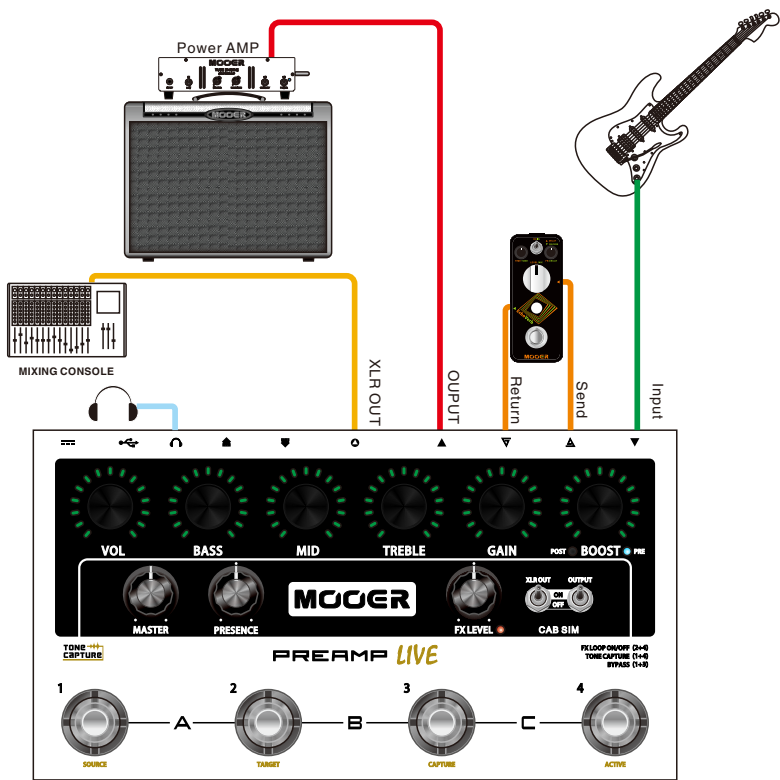


When the effects loop is set to MODE A (SERIAL) the POST NG will be before the effects loop.

MODE B (A/B)

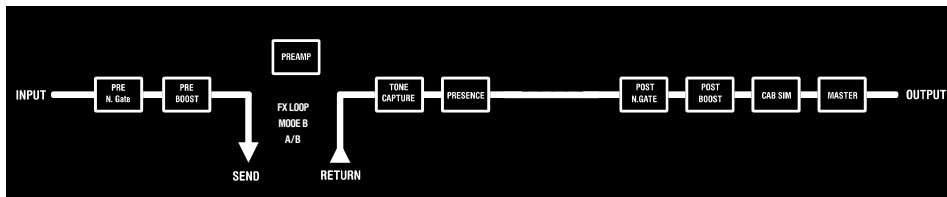


MODE B is a special FX LOOP that will bypass the digital preamp section of PREAMP LIVE and replace it with the analog preamp section of your amplifier. This allows you to connect PREAMP LIVE up to an amplifier head or combo with 4 cables and use the preamp section of the head/ combo instead of the digital PREAMP when the FX LOOP is active.

For example, I can use a digital preamp on channels 1, 2 and 4 and use the preamp from my amplifier head or combo on channel 3 by activating the effects loop (in MODE B) on channel 3.

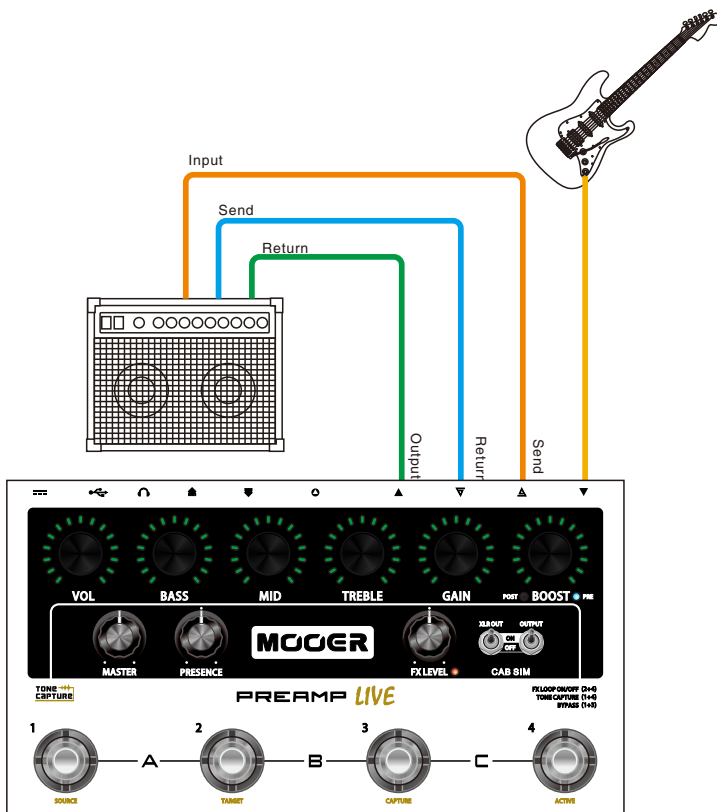

When the effects loop is set to MODE B (A/B) the POST NG will be after the effects loop.

TONE CAPTURE

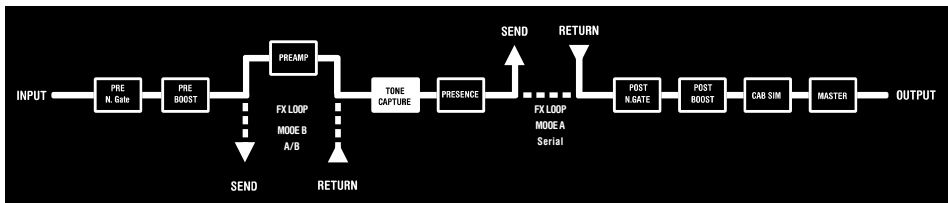


PREAMP LIVE has a very interesting special feature called TONE CAPTURE. TONE CAPTURE allows you to create an advanced EQ stage based on feedback sampling of external equipment.

The primary application for this function is to try and replicate the sound of your favourite amplifiers (or preamp pedal) by combining one of the MOOER PREAMP models with a TONE CAPTURE EQ you have created by sampling your amp.

Every channel of PREAMP LIVE is capable of storing it's own tone capture EQ which can then be exported and shared with friends using the official software.


TONE CAPTURE Connections

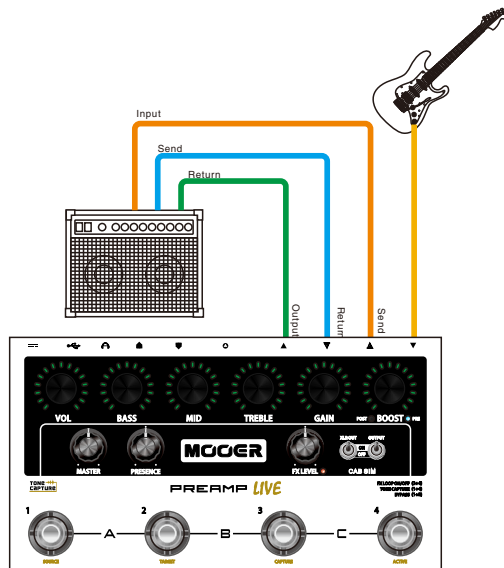

The amplifier must have an effects loop or "preamp out" to work. It must have a speaker load connected at all times during the capture process. DO NOT connect the speaker output of your amplifier to PREAMP LIVE.

TONE CAPTURE operation

1. Select a PREAMP CHANNEL that you think most closely matches that of your target amplifier in tonal characteristics. Tweak the settings to further match the sound you want.
2. Simultaneously press footswitches 1 + 4 on PREAMP LIVE to enter TONE CAPTURE mode.

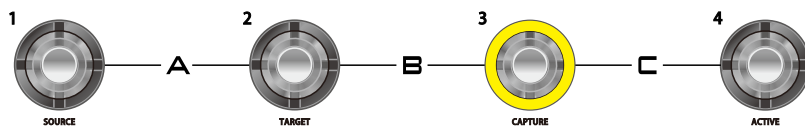


If the channel does not have a tone capture already saved in memory then footswitch 3 will be illuminated yellow and flashing on/off.


If the channel already has a tone capture stored in memory then footswitch 3 will be yellow and in a solid status.

To clear a tone capture from channel memory, press and hold footswitch 3 until it starts flashing.


3. Press footswitch 1 (SOURCE) to listen to your PREAMP LIVE channel

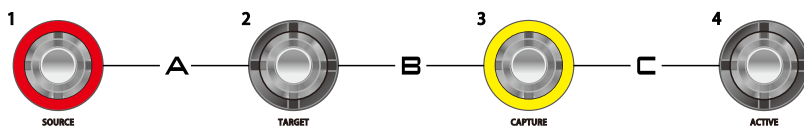

4. Press footswitch 2 (TARGET) to listen to the external amplifier

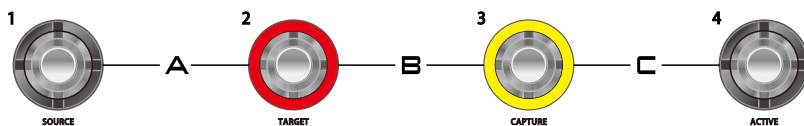


- Press footswitch 3 (CAPTURE) and play your guitar whilst the CHANNEL CONTROL LED's countdown. Try and play all over the fretboard and reach as big a note range as possible to get the best capture results.

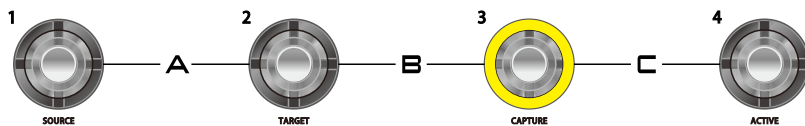


When the capture process has finished, footswitch 3 LED's will stop flashing and remain solid.

- Press footswitch 3 to listen to the PREAMP LIVE channel combined with your newly created TONE CAPTURE. The tone capture you just created will be automatically stored to channel memory should you wish to use it.

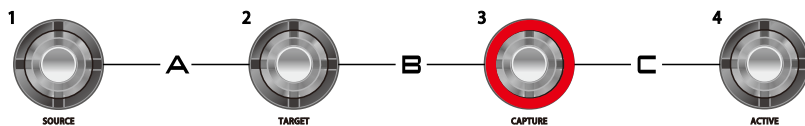

You can now toggle between **SOURCE**, **TARGET** and **CAPTURE** to compare the difference in tone using footswitches 1, 2 and 3.


- Press footswitch 4 (ACTIVE) to activate the tone capture on the preamp channel. You can use this footswitch to toggle the tone capture on/off from the tone capture mode at any time. The tone capture on/off state is a saveable parameter for every preamp channel.

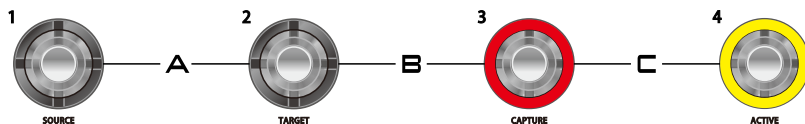

- Simultaneously press footswitches 1 + 4 to exit tone capture mode. You can now tweak the EQ and gain parameters further. Don't forget to save your preamp channel before changing if you wish to keep the settings.

CHANGING PREAMP MODELS

Preamp Live contains 12 PREAMP channels in total. By default the preamp channels that ship with the unit are as follows....

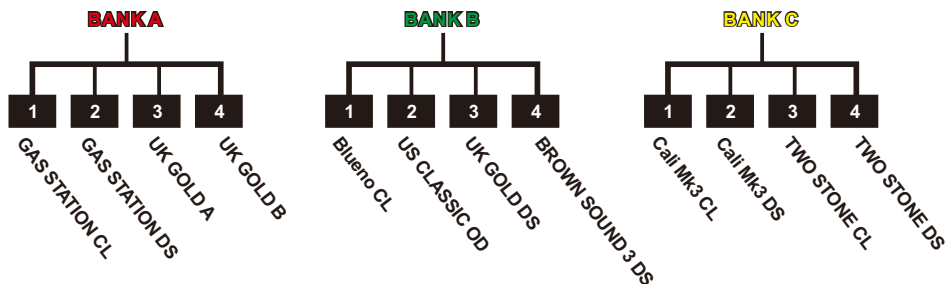

To change the PREAMP models and/or organise their channel allocation, download the software from www.moeraudio.com and connect PREAMP LIVE to your computer via USB or to your mobile device via BLUETOOTH.

CHANNEL				
A	1	2	3	4
B	1	2	3	4
C	1	2	3	4
FX LOOP <input checked="" type="radio"/> Bypass <input type="radio"/> OFF				

1. Select the channel you wish to edit

PREAMP 5. Blueno UG 30 ▼

2. Open the PREAMP drop down menu

- 1. Gas Station Clean
- 2. Gas Station Dist
- 3. UK Gold Clean
- 4. UK Gold Dist
- 5. Blueno UG 30
- 6. US Classic OD
- 7. US Gold 100 Dist
- 8. Brown Sound 3 CH3
- 9. Cali-MK 3 Deep Clean
- 10. Cali-MK 3 Rhythm
- 11. Two Stone Coral Clean
- 12. Two Stone Coral OD

3. Select the new PREAMP model

SAVE PRESET OPTION

4. Press the SAVE button

You can organise your PREAMP channels however you like and even have multiples of the same PREAMP model on different channels so you can set them up differently.

PREAMP MODELS

PREAMP LIVE has 50 different preamp models available within the software.

No.	Preamp Model	Original Source
01	Gas Station Clean	Diezel® Hagen
02	Gas Station Dist	
03	UK Gold Clean	Marshall® JCM900
04	UK Gold Dist	
05	Blueno UG 30	Bruno® Underground 30
06	US Classic OD	Fender® Blues Deluxe
07	US Gold 100 Dist	Friedman® Be100
08	Brown Sound 3 Ch3	EVH® 5150
09	Cali-MK 3 Deep Clean	Mesa Boogie® Mark III
10	Cali-MK 3 Rhythm	
11	Two Stone Coral Clean	Two Rock® Coral
12	Two Stone Coral OD	
13	Day Tripper Clean	Vox® AC30
14	Day Tripper OD	
15	Black Night Clean	ENGL® E650 Blackmore
16	Black Night Dist	
17	US Classic Clean	Fender® Blues Deluxe
18	VHS Clean	Diezel® Vh4
19	VHS Rhythm	
20	VHS Lead	
21	Doctor3 B	DR.Z® Maz38
22	Doctor3 A	

Please Note: All manufacturers and brand names mentioned above are not affiliated with MOOER or PREAMP LIVE

PREAMP MODELS

No.	Preamp Model	Original Source
23	Eagle FB Ch2	Engl® Fireball 100
24	Brown Sound 3 Ch2	EVH® 5150
25	Brown Sound 3 Ch1	
26	US Gold 100 Clean	Friedman® Be100
27	US Gold 50 A	Friedman® Smallbox 50
28	US Gold 50 B	
29	Power-Zone Clean	Koch® Powertone
30	Power-Zone Dist	
31	Cali JP A	Mesa Boogie® JP-2C
32	Cali JP B	
33	Cali JP C	
34	Cali LS Ch1	Mesa Boogie® Lonestar
35	Cali LS Ch2	
36	Cali-MK 3 Clean	Mesa Boogie® Mark III
37	Cali-MK 3 Lead	
38	Petey Satch Clean	Peavey® JSX
39	Petey Satch Crunch	Peavey® JSX Crunch
40	Petey Satch Ultra	Peavey® JSX Ultra
41	Mr Smith Clean	PRS® ARCHON
42	Mr Smith Dist	
43	Randy Devil Clean	Randall® Satan
44	Randy Devil Lead	
45	Regal Tone Lead	Tone King® Falcon Lead
46	Regal Tone Rhythm	Tone King® Falcon Rhythm
47	Regal Tone Tweed	Tone King® Falcon Tweed
48	Two Stone Cardeff	Two Rock® Cardiff
49	Shittcow Clean	VHT PITTBULL
50	Shittcow Dist	

Please Note: All manufacturers and brand names mentioned above are not affiliated with MOOER or PREAMP LIVE

PREAMP MODELS

No.	Preamp Model	Original Source
51	65 US TW	Fender® Twin Reverb
52	59 US Bass	Fender® 59 Bassman
53	US Blues CL	Fender® Blues Deluxe
54	US Blues OD	
55	J800	Marshall® JCM800
56	PLX 100	Marshall® Plexi 100
57	TRI REC CL	Mesa Boogie® Triple Rectifier
58	TRI REC DS	
59	MarkV CL	Mesa Boogie® MARK V
60	MarkV DS	
61	Rock Vrb CL	Orange® Rockerverb
62	Rock Vrb DS	
63	DR ZEE 18 JR	DR.Z® Maz18 Jr
64	DR ZEE 18 Reck	DR.Z® Z-Wreck
65	UK30 CL	Vox® AC30 CC2X
66	UK30 OD	
67	HWT 103	Hiwatt® DR-103
68	PV 5050 CL	Peavey® 5150
69	PV 5050 DS	
70	HT CLUB CL	Blackstar® HT Stage 100
71	HT CLUB DS	
72	Gas Station OD	Diezel® Hagen
73	Custom 100 Ch1	Custom Audio® Pt100
74	Custom 100 Ch2	
75	Custom 100 Ch3	

Please Note: All manufacturers and brand names mentioned above are not affiliated with MOOER or PREAMP LIVE

PREAMP MODELS


No.	Preamp Model	Original Source
76	Herby CH1	Diezel® Herbert
77	Herby CH2	
78	Herby CH3	
79	VHS OD	Diezel® VH4
80	Eagle 670 CL	ENGL® E670
81	Eagle 670 CR	
82	Eagle 670 L1	
83	Eagle 670 L2	
84	Eagle FB CH1	ENGL® Fireball 100
85	Matchbox 30 CL	Matchless® C30
86	Matchbox 30 OD	
87	Cali Dual 1	Mesa Boogie® Dual Rectifier BlackFace
88	Cali Dual 2	
89	Cali MK4 A	Mesa Boogie® Mark IV
90	Cali MK4 B	
91	Cali MK4 C	
92	Satsuma TH200 A	Orange® Thunderverb 200
93	Satsuma TH200 B	
94	Satsuma TH30 A	Orange® Th30
95	Satsuma TH30 B	
96	Taxidea Taxus A	Suhr® Badger 30
97	Taxidea Taxus B	
98	Acoustic 1	MOOER® Acoustic Emulator 1
99	Acoustic 2	MOOER® Acoustic Emulator 2
100	Acoustic 3	MOOER® Acoustic Emulator 3
101	BASS AGLR 751	Aguilar® DB751
102	BASS APG SVT	Ampeg® SVT-7 PRO

Please Note: All manufacturers and brand names mentioned above are not affiliated with MOOER or PREAMP LIVE

MIDI


Preamp LIVE has a very simple and straight-forward MIDI functionality. It can send and receive MIDI PC signals to change Channels/Presets. The PC signals are fully mappable within the PREAMP LIVE software.

MIDI IN

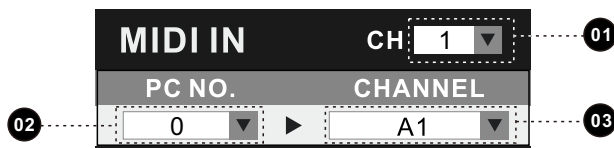

1. Select the MIDI channel that PREAMP LIVE receives PC signal changes on
2. Choose an incoming PC signal
3. Select the Channel that PREAMP LIVE will switch to when receiving the PC signal

MIDI OUT

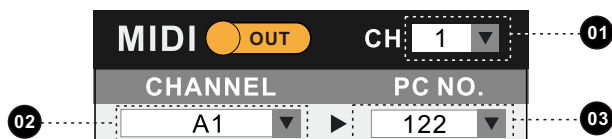

1. Select the MIDI channel that PREAMP LIVE transmits PC signal changes on
2. Select a preamp channel on PREAMP LIVE
3. Choose the PC signal that PREAMP LIVE will transmit when the channel is selected on the device.

MIDI OUT/THRU... Selecting THRU on this button will change the MIDI OUT port into a MIDI THRU port. When set to THRU, PREAMP LIVE will not transmit any MIDI data when a channel is selected on the device. However it will allow data coming into the device from the MIDI IN to be passed through to other devices connected to the MIDI OUT port.


IMPORT/EXPORT PRESETS


PREAMP LIVE software allows users import/export presets to share their tone with other users.


Select “LIBRARY”

LIBRARY

There are two lists come up. Right side is for the PREAMP LIVE stocked presets. The left side is for presets files stored in your computer.

For exporting presets from PREAMP LIVE, please select a preset in the right list, click on . Confirm and completed.

For importing presets for PREAMP LIVE, please select a preset in the left side, click on . Confirm and completed.

Click on the  icon, the fold of saving presets in your computer will be opened.

Notice:

1. Uninstall/reinstall the PREAMP LIVE software, all the preset files saved in your computer will be removed. Recommend to backup your presets files before uninstall/reinstall the software.
2. The IR files are not bond with preset files. For exporting presets with 3rd party IR imported, the presets files do not include the 3rd party IR. Users need to import the 3rd party IR manually. The 3rd party IR could be saved by the “BACKUP” function. For more detail, please check the next section in the manual.


BACKUP

In BACKUP function, PREAMP LIVE allow users backup all 12 presets in the unit, or restore those 12 presets from computer easily. In addition, 3rd party IRs can be saved with the preset files together by BACKUP.

Export all presets:

Click on the **BACKUP**

Select EXPORT, choose a location and confirm saving.

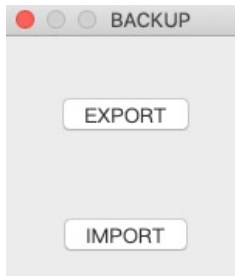

Restore:

Select IMPORT, choose previous saved preset files and confirm.

Notice:

1. When the restore procedure is completed, PREAMP LIVE's LED will keep blinking for a while and reboot automatically.
2. Cannot support IOS/Android. Because the data is too large for smart phone APP transporting. Currently, supports MAC/WIN.

CAB SIM

Each preamp channel within PREAMP LIVE can have it's own cab sim assigned from a list within the official software. Optional power amp modelling is also available.



You can import your own IR files to replace some of the default cab sims in the CAB MODEL drop down menu.



SPEAKER CAB MODELS

PREAMP LIVE has 30 different native CAB models available within the software.

MODEL	BASED ON
Champer 1x8	Fender Champ Silverface
V.Champer 1x8	Fender Vibro Champ Silverface
Prince.B 1x10	Fender Princeton Tweed
Prince.S 1x10	Fender 65'princeton reverb
65DLX 1x12	Fender 65 deluxe reverb
57DLX 1x12	Fender 57 tweed deluxe
Kitty 1x12	Bad cat
AC15 1x12	Vox AC15C1
Twinverb.S 2x12	Fender 70'twin reverb silverface
Twinverb.B 2x12	Fender 67'twin reverb blackface
Matchbox 2x12	Matchless chieftain
AC30.B 2x12	Vox V212H Alnico blue
AC30.S 2x12	Vox AC30 Jimi212 Silver bell
Superverb 4x10	Fender 64'super reverb
59Baseman 4x10	Fender 59'bassman Tweed
1960AG 4x12	Marshall 1960A Green back
1960BT 4x12	Marshall 1960B G12T-75
1960BV 4x12	Marshall 1960B V30
UK.Citrus 4x12	Orange ppc412
Solo.L 4x12	Soldano 4x12 Lucky
Solo.S 4x12	Soldano 4x12 Slant
Rect.S 4x12	Mesa boogie recto standard
Rect.T 4x12	Mesa boogie recto traditional
German.V 4x12	Diezel Rearloaded V30
German.G 4x12	Diezel Rearloaded G12-65Heritage
B.svt 1x15	Ampeg svt 15E
B.svt.S 1x15	Ampeg svt 15E (Subkick)
B.svt 4x10	Ampeg svt 410HE
B.svt.S 4x10	Ampeg svt 410HE(Subkick)
B.svt 8x10	Ampeg svt 810E

Please Note: All manufacturers and brand names mentioned above are not affiliated with MOOER or PREAMP LIVE

MICROPHONE MODELS

PREAMP LIVE has 11 different microphone models available within the software.

MODEL	BASED ON
SM57	Shure SM 57 Dynamic
SM58	Shure SM 58 Dynamic
MD421	Sennheiser MD 421 Dynamic
MD441	Sennheiser MD 441U Dynamic
U47	Neumann U47
U87	Neumann U87
RodeNT1	Rode NT-1
MXL2001P	Marshall MXL 2001P
MXL2003	Marshall MXL 2003
C3000	AKG C3000
C4000B	AKG C4000B

Please Note: All manufacturers and brand names mentioned above are not affiliated with MOOER or PREAMP LIVE

MOBILE APP

PREAMP LIVE is equipped with an integrated wireless module for connecting with your mobile devices via the official MOOER PREAMP LIVE mobile app.

The mobile app allows you to edit all of your preamp channel parameter settings, programme midi and change the preamp models on the go.



To connect to the mobile app

- Power on PREAMP LIVE and wait for it to finish booting up
- Put PREAMP LIVE into bypass mode by simultaneously pressing footswitches 1+3. This will allow the PREAMP LIVE to be discoverable by the mobile app.
- Open the mobile app and allow it to turn on Bluetooth
- Connect to your PREAMP LIVE using the OPTION > DEVICE menu within the app

FIRMWARE UPDATE

Your PREAMP LIVE may need a firmware update to operate correctly with the software. If a firmware update is required then boot PREAMP LIVE into update mode to receive the firmware update from the computer software.

- Ensure PREAMP LIVE is NOT powered on
- Connect PREAMP LIVE to a computer via USB
- Press and hold footswitches 1 + 2
- Connect power to PREAMP LIVE
- After PREAMP LIVE has finished booting up, release the footswitches
- Open the software to install the latest firmware on your PREAMP LIVE

Windows and MAC software can be downloaded from
www.mooeraudio.com

Mobile apps are available from [GooglePlay](#) and [Apple AppStore](#)

SPECIFICATIONS

Preamplifier Channels: 12

Input: 1/4" mono audio jack (impedance 500k)

Outputs: 1 x 1/4" mono audio jack (impedance 100Ω)

1 x XLR balanced out (impedance 100Ω)

1 x 3.5mm headphone jack (impedance 10Ω)

Effects Loop: Mode 1 Serial ~ Mode 2 A/B

Effects Send: 1/4" mono audio jack (impedance 100Ω)

Effects Return: 1/4" mono audio jack (impedance 500k)

MIDI IN & OUT: 5 pin DIN connector

USB: Type-B Female Connector

Sampling rate: 88.2KHz

Sampling accuracy: 24bit

Signal to noise ratio: 103dB

IMPULSE RESPONSE SPEC

Format: .WAV

Sampling rate: 44.1KHz

Sampling accuracy: 24bit

Max sample length: 23.2ms/1024 Points

Power requirements: 9V-12V DC 1A 

Dimensions: 230mm x 130mm x 54mm

Weight: 1.18Kg

Accessories: 1 x USB Cable

1 x 12V Power Supply

MOOER

MOOER AUDIO CO.,LTD
Shenzhen, China
www.mooeraudio.com