







PLATFORM-M⁺

MIDI/Audio-Steuerung mit
motorisierten Fadern für Produktion



	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN RISQUE DE CHOC ELECTRIQUE NE PAS OUVRI</p>		
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED PERSONNEL</p>			
<p>ATTENTION: POUR EVITER LES RISQUES DE CHOC ELECTRIQUE: NE PAS ENLEVER LE COUVERCLE, AUCUN ENTRETIEN DE PIECES INTERIEURES PAR L'USAGER, CONFIER L'ENTRETIEN AU PERSONNEL QUALIFIE.</p>		<p>The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure, that may be of sufficient magnitude to electric shock to persons. The symbol, clear with point of the triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. Le point d'exclamation à l'intérieur d'un triangle qui est employé pour avertir les utilisateurs de la présence d'instructions importantes pour le fonctionnement et l'entretien (service) dans le livret d'instruction accompagnant l'appareil.</p>	
<p>AVIS: POUR EVITER LES RISQUES D'INCENDIE OU D'ELECTROCUTION, N'EXPOSEZ PAS CET ARTICLE A LA PLUIE OU A L'HUMIDITE</p>			

ACHTUNG: Um die Gefahr eines Brandes oder Stromschlags zu verringern, sollten Sie dieses Gerät weder Regen noch Feuchtigkeit aussetzen. Um die Gefahr eines Stromschlags zu verringern, sollten Sie weder Deckel noch Rückwand des Geräts entfernen. Im Innern befinden sich keine Teile, die vom Anwender gewartet werden können. Überlassen Sie die Wartung qualifiziertem Fachpersonal. Der Blitz mit Pfeilspitze im gleichseitigen Dreieck soll den Anwender vor nichtisolierter "gefährlicher Spannung" im Geräteinnern warnen. Diese Spannung kann so hoch sein, dass die Gefahr eines Stromschlags besteht. Das Ausrufezeichen im gleichseitigen Dreieck soll den Anwender auf wichtige Bedienungs- und Wartungsanleitungen aufmerksam machen, die im mitgelieferten Informationsmaterial näher beschrieben werden.

Wichtige Sicherheitsvorkehrungen

1. Lesen Sie alle Anleitungen, bevor Sie das Gerät in Betrieb nehmen.
2. Bewahren Sie diese Anleitungen für den späteren Gebrauch gut auf.
3. Bitte treffen Sie alle beschriebenen Sicherheitsvorkehrungen.
4. Befolgen Sie die Anleitungen des Herstellers.
5. Benutzen Sie das Gerät nicht in der Nähe von Wasser oder Feuchtigkeit.
6. Verwenden Sie zur Reinigung des Geräts nur ein feuchtes Tuch.
7. Blockieren Sie keine Belüftungsöffnungen. Nehmen Sie den Einbau des Geräts nur entsprechend den Anweisungen des Herstellers vor.
8. Bauen Sie das Gerät nicht in der Nähe von Wärmequellen wie Heizkörpern, Wärmeklappen, Öfen oder anderen Geräten (inklusive Verstärkern) ein, die Hitze erzeugen.
9. Setzen Sie die Sicherheitsfunktion des polarisierten oder geerdeten Steckers nicht außer Kraft. Ein polarisierter Stecker hat zwei flache, unterschiedlich breite Pole. Ein geerdeter Stecker hat zwei flache Pole und einen dritten Erdungsstift. Der breitere Pol oder der dritte Stift dient Ihrer Sicherheit. Wenn der vorhandene Stecker nicht in Ihre Steckdose passt, lassen Sie die veraltete Steckdose von einem Elektriker ersetzen.
10. Schützen Sie das Netzkabel dahingehend, dass niemand darüber laufen und es nicht geknickt werden kann. Achten Sie hierbei besonders auf Netzstecker, Mehrfachsteckdosen und den Kabelanschluss am Gerät.
11. Ziehen Sie den Netzstecker des Geräts bei Gewittern oder längeren Betriebspausen aus der Steckdose.
12. Überlassen Sie die Wartung qualifiziertem Fachpersonal. Eine Wartung ist notwendig, wenn das Gerät auf irgendeine Weise, beispielsweise am Kabel oder Netzstecker beschädigt wurde, oder wenn Flüssigkeiten oder Objekte in das Gerät gelangt sind, es Regen oder Feuchtigkeit ausgesetzt war, nicht mehr wie gewohnt betrieben werden kann oder fallen gelassen wurde.

Contents

Einführung	4
Lieferumfang	4
So registrieren Sie Ihr ICON Pro Audio-Produkt in Ihrem persönlichen Konto	5
Merkmale	6
Layout Deckplatte	7
Seitenansicht	10
Erste Schritte Platform M+ Controller anschließen	11
(Expander ~ use with Platform X+)	12
Cubase	15
Ableton Live	17
Logic Pro	18
Samplitude	20
Pro Tools	22
(Standalone)	24
Cubase	24
Nuendo	25
Logic Pro	26
Samplitude	27
Bitwig	29
Reason	30
Reaper	31
Studio One	32
Ableton Live	33
Pro Tools	34
Laden Sie den Windows-Treiber von Ihrer persönlichen Benutzerseite unter www.iconproaudio.com herunter	36
iMap™ Software-Installation für Windows	38
Zuweisen des DAW-Modus (Mackie Control/HUI) oder MIDI-Funktionen mit iMap™ definieren	40
Zuweisen eines DAW-Modus (Mackie Control/HUI) mit iMap™	41
Zuordnung von MIDI-Nachrichten im benutzerdefinierten Modus mit iMap™	43
Steuerelement-Setup im benutzerdefinierten Modus	45
Sonstige Funktionen in iMap™	47
Firmware-Aktualisierung	48
Rückstellung zu den Werkseinstellungen	52
Erweiterungsmodule anschließen	52
Technische Daten	53
Wartung und Reparatur	54
AppendixA	55
Cubase	55
Logic Pro X	69
Pro Tools HUI	91
Ableton Live 10	99
AppendixB	109
Cubase	109
Logic Pro X	110
Pro Tools HUI	112
Ableton Live 10	113
AppendixC	115
Cubase	115
Logic Pro X	116
ProTools HUI	118
Ableton Live 10	121

Einführung

Vielen Dank, dass Sie sich für den ICON Platform M+ MIDI/Audio-Controller-Oberfläche entschieden haben. Wir haben vollstes Vertrauen darin, dass dieses Produkt Ihnen jahrelang zuverlässige Dienste leisten wird. Sollten sie aber aus irgendwelchen Gründen nicht voll und ganz zufrieden sein, werden wir unser Möglichstes tun, diesen Zustand zu beheben.

Auf den folgenden Seiten finden Sie eine detaillierte Beschreibung des Platform M+ MIDI/Audio-Controller-Oberfläche sowie einen Überblick über die Bedienelemente auf der Vorder- und Rückseite des Geräts, eine Schritt-für-Schritt Anleitung für Setup und Betrieb, sowie sämtliche technischen Details.

Bitte registrieren Sie das Produkt unter dem folgenden Link auf unserer Website: www.iconproaudio.com/registration.

Befolgen Sie dazu Schritt für Schritt das Verfahren. Beginnen Sie mit der Eingabe der Seriennummer des Geräts sowie Ihrer persönlichen Daten usw. Indem Sie Ihr Produkt online registrieren, können Sie unseren Service und Kundendienst durch unsere Kundendienstzentrale über unsere Website unter www.iconproaudio.com in Anspruch nehmen. Außerdem werden alle für Ihr Konto registrierten Produkte auf Ihrer persönlichen Produktseite aufgeführt, wo Sie aktuelle Informationen wie Firmware-/Treiber-Upgrades, Software-Bundles, Benutzerhandbücher usw. für Ihr Gerät herunterladen können.

Wie bei den meisten elektronischen Geräten empfehlen wir Ihnen dringend, die Originalverpackung aufzubewahren. In dem unwahrscheinlichen Fall, dass das Produkt zur Reparatur eingeschickt werden muss, ist die Originalverpackung (oder ein gleichwertiger Ersatz) erforderlich.

Mit entsprechender Pflege und ausreichender Luftzirkulation werden Sie Ihr Platform M+ MIDI/Audio-Controller-Oberfläche viele Jahre lang problemlos betreiben können. Wir empfehlen, dass Sie Ihre Seriennummer in dieser Bedienungsanleitung notieren, um eventuell später darauf zurückgreifen zu können.

Lieferumfang

- USB Controller mit Anschlagdynamik x 1pc
- Schnellanleitung x 1
- USB 2.0 Kabel x 1
- AC-Adapter x 1pc

So registrieren Sie Ihr ICON Pro Audio-Produkt in Ihrem persönlichen Konto

1. Überprüfen Sie die Seriennummer IhresGeräts

Gehen Sie zu <http://iconproaudio.com/registration> oder scannen Sie den untenstehenden QR-Code



Geben Sie die Seriennummer Ihres Geräts und die anderen erforderlichen Informationen auf dem Bildschirm ein. Klicken Sie auf „Submit“.

Daraufhin wird eine Meldung mit den Daten Ihres Geräts wie dem Modellnamen und der Seriennummer angezeigt. – Klicken Sie auf „Register this device to my account“ oder wenden Sie sich unseren Kundendienst, falls eine andere Meldung angezeigt wird

2. Melden Sie sich als bestehender Benutzer bei Ihrer persönlichen Benutzerseite an oder registrieren Sie sich als neuer Benutzer

Bestehender Benutzer: Melden Sie sich bei Ihrer persönlichen Benutzerseite an, indem Sie Ihren Benutzernamen und Ihr Passwort eingeben.

Neuer Benutzer: Klicken Sie auf „Sign Up“ und geben Sie alle Informationen ein.

3. Laden Sie alle nützlichenMaterialien herunter


Auf dieser Seite werden alle für Ihr Konto registrierten Geräte angezeigt. Jedes Produkt wird zusammen mit allen verfügbaren Dateien wie Treiber, Firmware, Benutzerhandbuch in verschiedenen Sprachen sowie Software-Bundles zum Herunterladen aufgeführt. Stellen Sie sicher, dass Sie die erforderlichen Dateien wie zum Beispiel Treiber heruntergeladen haben, bevor Sie mit der Installation des Geräts beginnen.

Merkmale



- Äußerst kompakt, robust und vielseitig
- Passen Sie das optimale Setup mit einer Vielzahl von Platform-Erweiterungsmodulen an
- 8+1 berührungsempfindliche Motorfader mit 10 Bit Auflösung
- 8 x Drehregler mit dualer Funktion (Eingabe & Drehen)
- Jog-Rad Shuttle für schnelle Suche und Steuerung
- Beleuchtete Tasten für jeden Kanal einschließlich Sel (Auswahl), Mute (Stummschaltung), Solo und Record (Aufnahme)
- 6 beleuchtete Transport-Tasten inklusive Wiedergabe, Stopp, Aufnahme, Rücklauf, Vorlauf und Schleife
- Beleuchtete „Zoom“-Tasten mit 2 Pfeiltasten (nach links/rechts und oben/unten) in Kombination mit dem JOG-Rad
- 2 illuminated “Track” buttons for easy selection of different channels
- 2 illuminated “Bank” buttons for shifting 8-channels
- 4x Erweiterungsanschlüsse für Erweiterungsmodule
- SYMBOL „Schnellsetup“-Treiber ist für Cubase, Nuendo, Reason und Bitwig für sofortiges Plug & Play verfügbar
- Integrierte Mackie-Steuerung für Cubase/Nuendo, LogicPro, Digital Performer, FL Studio, Samplitude, Reaper, Studio One, Bitwig, Reasons, ProTools, Sonar, Audition, Ableton Live und User define.
- Mackie-HUI-Protokoll für Pro Tool eingebaut
- Einschließlich iMap -Software für eine einfache Zuordnung von MIDI-Funktionen
- Firmware-Upgrade, einfach erhältlich über eine USB-Verbindung und die iMap-Software.
- Klassenkonform mit Windows XP, Vista (32-bit und 64-bit), Windows 7/8/10 (32-bit und 64-bit) sowie Mac OS X (IntelMac).
- USB 2.0 Konnektivität
- Hervorragende Verarbeitungsqualität und robustes Metallgehäuse mit Kensingtonschloss-Anschluss
- 12V/2.5A Netzadapter mitgeliefert

Layout Deckplatte

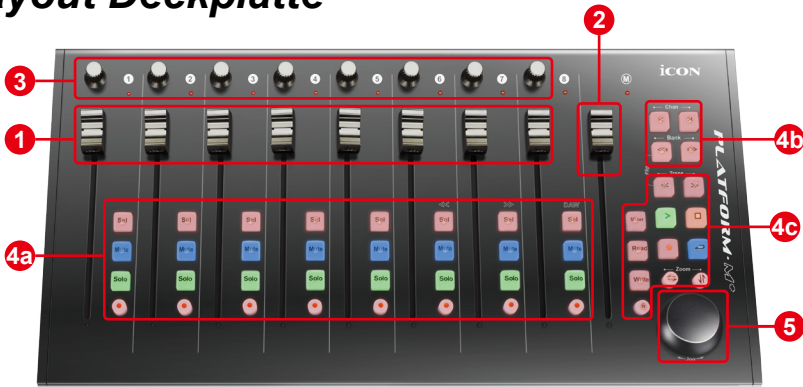

Hinweis: Die Funktionen sind für DAWs etwas unterschiedlich. Bitte schlagen Sie in Ihrer DAW-Anleitung die Funktionen nach. Die nachstehende Beschreibung basiert auf den Funktionen in Apple Logic™.

1. Kanalfader

Die acht 100-mm motorisierten Fader werden allgemein zur Steuerung der Tracklautstärke Ihrer DAW benutzt. Abhängig von Ihrer DAW können Sie „Flip“ zum Umschalten der Funktion dieser Fader zur Änderung andere Einstellungen benutzen. Sie sind alle berührungsempfindlich und ermöglichen die Überschreibung der Automation, sobald ein Fader berührt wird. Außerdem sind sie motorisiert; sie bewegen sich automatisch und reflektieren den aktuellen Pegel des gewählten Kanals in Ihrer DAW-Anwendung. Jegliche Automation, die in einem Projekt aufgezeichnet wurde, wird durch die Faderpositionen reflektiert.

2. Masterfader

Dieser 100-mm motorisierte Fader funktioniert wie die anderen 8 Fader. Er steuert den Masterkanalfader Ihrer DAW-Software.

Hinweis: Nur Pro Tools - Die Pro Tools Software ist so konzipiert, dass der Fader neben Ihrem letzten Kanalfader stets als Master-Fader fungiert.

3. Drehknöpfe

Die neun Encoder-Drehknöpfe werden allgemeine zur Steuerung der Track-Panposition, des AUX-Sendepegels und des EQ Ihrer DAW benutzt. Sie können sie ebenfalls zur Einstellung spezifischer Parameter innerhalb von Plug-ins und virtuellen Instrumenten voreinstellen.

4. Steuertasten

4a) Aufnahmekanal-Steuertasten

REC-Tasten - Aktivieren und deaktivieren den Aufnahmestatus des zugeordneten Kanals. Die Taste leuchtet rot, wenn der Kanal scharf ist.

SOLO-Tasten - Ein- und ausschalten des Solostatus des zugeordneten Kanals. Die Taste leuchtet grün, wenn der Solostatus des Kanals eingeschaltet ist und andere Kanäle stummgeschaltet. Sie können mehrere Solokanäle einschalten, indem Sie die SOLO-Tasten anderer Kanäle drücken.

MUTE-Tasten - Aktivieren und deaktivieren den Stummschaltstatus des zugeordneten Kanals. Die Taste leuchtet blau, wenn der Kanal stummgeschaltet ist. Stummschaltung des Kanals.

SEL-Tasten - Die SEL-Tasten aktivieren die zugeordneten Kanäle in der DAWSoftware, um eine bestimmte Operation auszuführen (beim Einstellen des EQ mit den ZUWEISBAREN ENCODERN wird beispielsweise die SEL-Taste zur Auswahl des einzustellenden Kanals benutzt). Nach Auswahl des Kanals leuchtet die rote LED der zugeordneten SEL-Taste.

4b) Motorfader-Steuertastenabschnitt

Chan <Taste -	Alle Fader „einen“ Kanal aufwärts schalten (außer Masterkanal).
Chan <Taste -	Alle Fader „einen“ Kanal abwärts schalten (außer Masterkanal).
BANK <Taste -	Alle Fader „acht“ Kanäle aufwärts schalten (außer Masterkanal).
BANK <Taste -	Alle Fader „acht“ Kanäle abwärts schalten (außer Masterkanal).

4c) Transport- und Zoom-Steuertastenabschnitt

PLAY-Taste -	Aktiviert die Wiedergabefunktion der DAW.	
STOP-Taste -	Aktiviert die Stoppfunktion der DAW.	
REC-Taste -	Aktiviert die Aufnahmefunktion der DAW.	
REWIND-Taste -	Aktiviert die schnelle Rücklauffunktion der DAW.	
FAST FORWARD-Taste -	Aktiviert die schnelle Vorlauffunktion der DAW.	
LOOP-Taste -	Aktiviert die Schleifenfunktion der DAW.	
Taste Zoom L/R -	Vergrößert horizontal die grafische Benutzeroberfläche (GUI) der DAW-Anwendung. Aktivieren Sie zum Vergrößern bzw. Verkleinern die Taste und drehen Sie das JOG-Rad.	
Taste Zoom U/D -	Verkleinert vertikal die grafische Benutzeroberfläche (GUI) der DAW-Anwendung. Aktivieren Sie zum Vergrößern bzw. Verkleinern die Taste und drehen Sie das JOG-Rad.	
READ-Taste -	Mit der READ-Taste aktivieren Sie die Lesefunktion des aktuellen Audiotracks.	
WRITE-Taste -	Mit der WRITE-Taste aktivieren Sie die Schreibfunktion des aktuellen Audiotracks.	
LOCK-Taste -	Verriegelung aller motorisierten Fader aktivieren.	
MIXER-Taste -	DAW	Funktion

Logic Pro, Samplitude, Reaper, Studio One, Bitwig Studio, Sonar	Marker
Nuendo/Cubase, Live, Reason	Left
Fl Studio	Shift
Audition	Play
DP	RTZ

5. Jog wheel

Das Jog Wheel wird für unterschiedliche Zwecke spezifisch für die DAW-Software benutzt, einschließlich Shuttle- und Scrubbingfunktionen.

Seitenansicht



1. USB-Anschluss

Functions as a MIDI port to your notebook (or computer) and compatible software.

2. Erweiterungshäfen

Diese Erweiterungs-Ports sind für den Anschluss von dedizierten Plattform-Serie Steuermodul wie Platform B (Button-Modul) ausgestattet.

3. Plattform D / D2 LCD-Modulanschluss

Schließen Sie Plattform D / D2 mit dem mitgelieferten Kabel an diesen Port an.

Erste Schritte Platform M+ Controller anschließen



2 Platform M+ über den USB-Port an Ihrem Mac/PC anschließen

Wählen Sie einen USB-Port auf Ihrem Mac/PC und schließen Sie das breite (flache) Ende des USB-Kabels an. Schließen Sie das andere Ende des Kabels am Platform M+ an. Ihr Mac/PC erkennt die neue Hardware automatisch und teilt Ihnen mit, dass sie betriebsbereit ist.

4 DAW an Platform M+ wählen

Drücken Sie << (Taste Kanal 6 „Sel“)/>> (Taste Kanal 7 „Sel“), um durch die Steuermodus-Liste zu scrollen und drücken Sie dann „DAW“ (Taste Kanal 8 „Sel“), um die Auswahl zu bestätigen.

Während Sie durch die Liste scrollen, wird der Steuermodus-Name auf dem LCD angezeigt, um die Auswahl zu bestätigen, wenn Platform D / Platform D2 (optional) installiert wurde. Ansonsten zeigen die LED-Anzeigelampen von Kanal 9 oben die DAW an. Die Sequenz lautet wie folgt:

Kanal 1 LED: MCP (Nuendo / Cubase / Samplitude / Ableton Live / Reaper / Studio One / Reason / Bitwig / Sonar / Audition / FL Studio / Digital Performer)

Kanal 2 LED: Logic Pro

Kanal 3 LED: HUI (Pro Tools)

Kanal 4 LED: User define

Hinweis: Platform M+ speichert den zuletzt gewählten DAW-Modus und schaltet in diesen Modus wenige Sekunden, nachdem das Gerät eingeschaltet wurde. (Sie müssen den DAW-Modus nicht wählen, wenn Sie den zuletzt gewählten Modus benutzen wollen.)

5 DAW einstellen


Aktivieren Sie den ICON Platform M+ Controller in Ihrer DAW- oder MIDI-Software mit „MIDI Setup“ oder „MIDI Devices“.

Für Logic™, Cubase™ und Nuendo™ wählen Sie in der „Device List“ die Mackie-Steuerung.

(Tipp: Sie können auch unserer Website unter www.iconproaudio.com besuchen, auf der Sie Abbildungen zur Einrichtung für verschiedene DAWs im Abschnitt „Setup-Demo“ der Produktseite für jeden Controller (Platform M+) finden.

Für DAWs, die sich nicht in unserer Setup-Demolisten befinden, schlagen Sie für den Hardwaresetup in Ihrem Software-Benutzerhandbuch nach.)

(Expander ~ use with Platform X+)

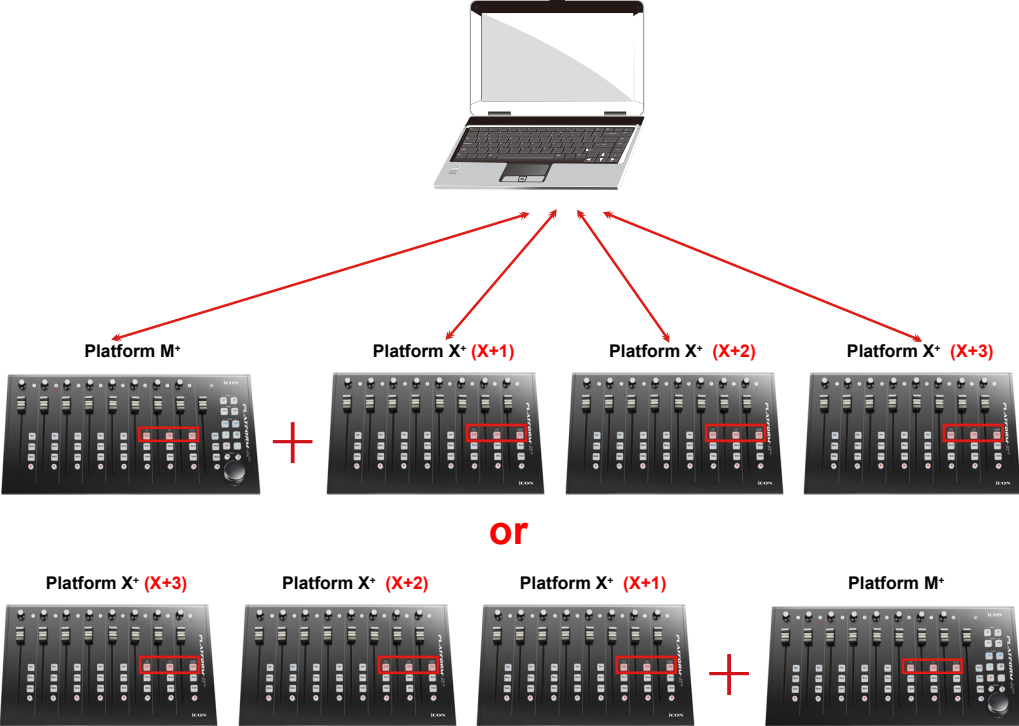

1 Platform M+

Channel 1 LED: MCP
Channel 2 LED: Logic Pro
Channel 3 LED: HUI
Channel 4 LED: User define


2 Platform X+ (X+1)

Channel 1 LED: MCP
Channel 2 LED: Logic Pro
Channel 3 LED: HUI
Channel 4 LED: User define




3 Platform X+ (X+2)





4 Platform X+ (X+3)


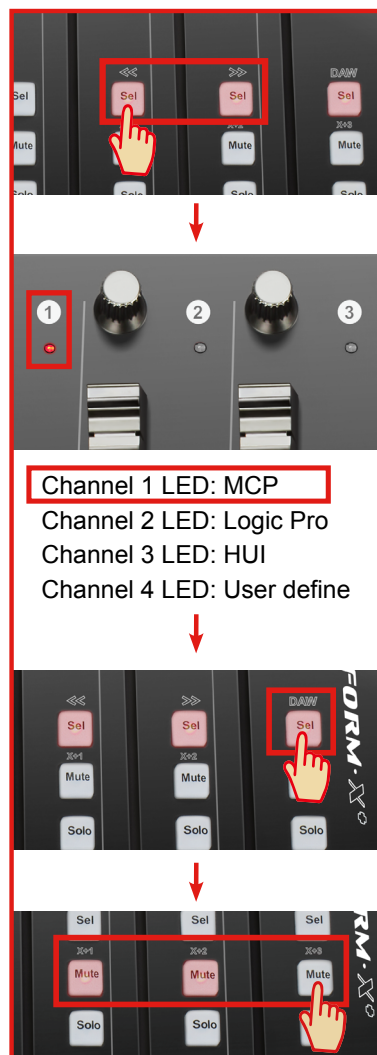


Cubase

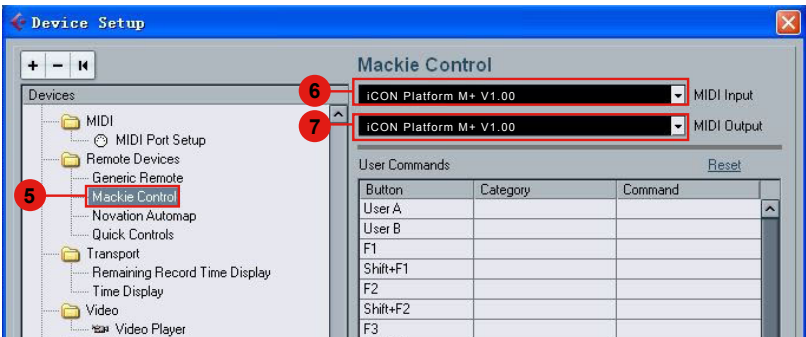
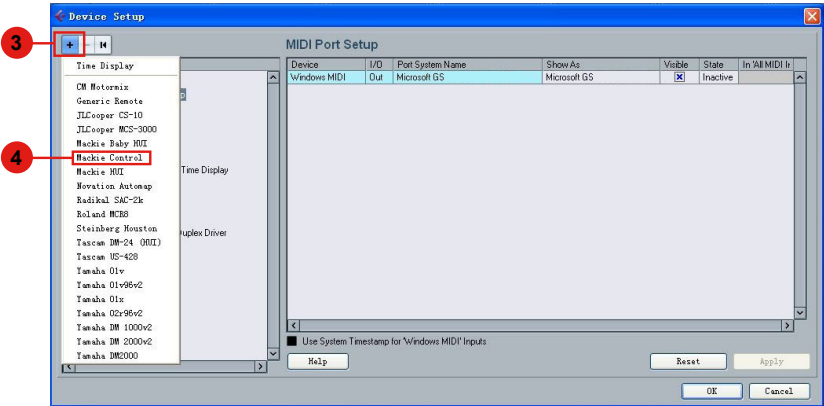
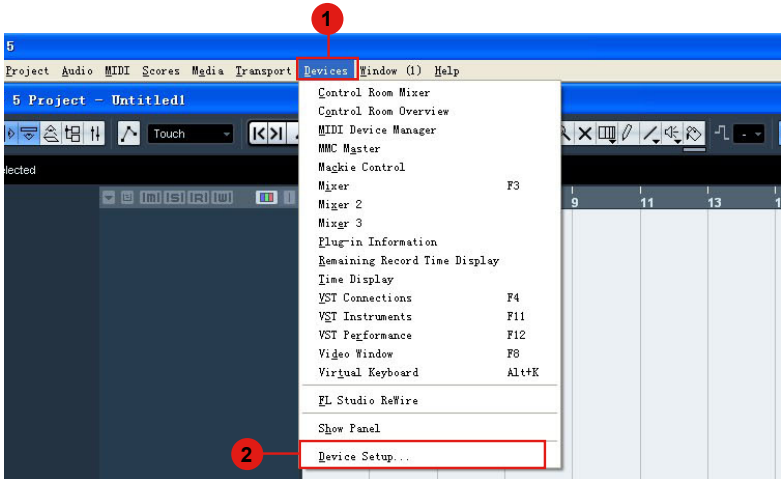




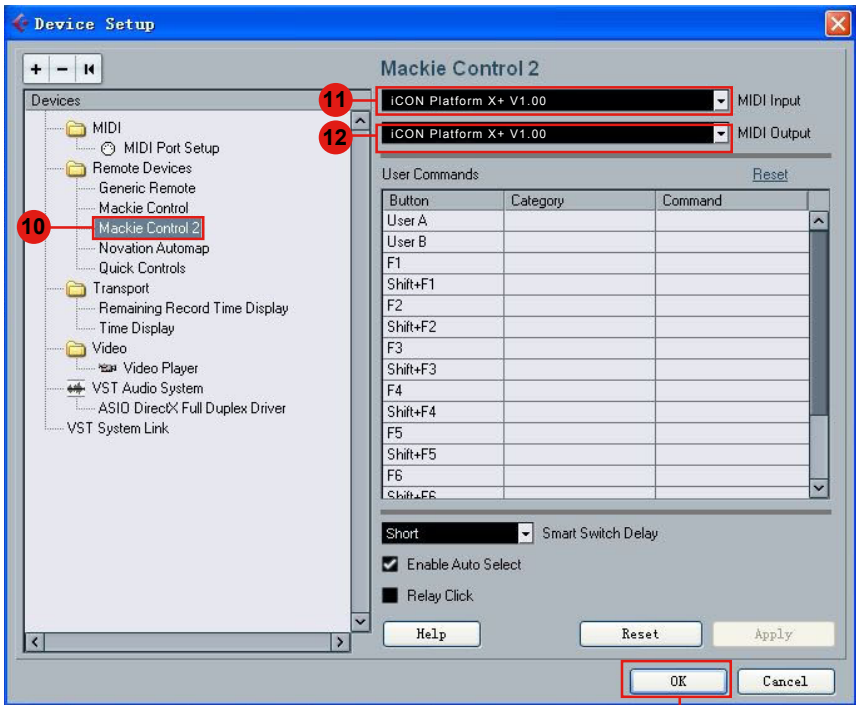
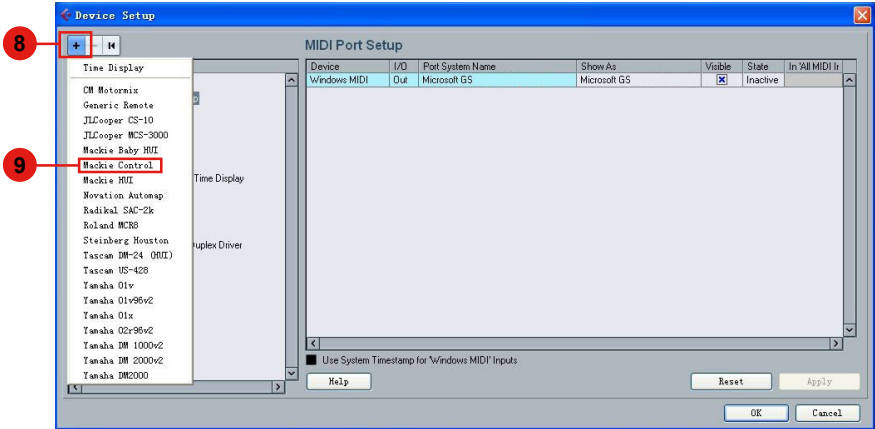


Ableton Live

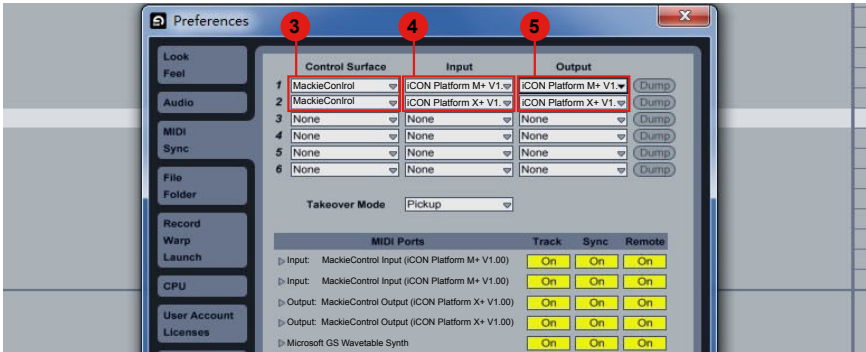
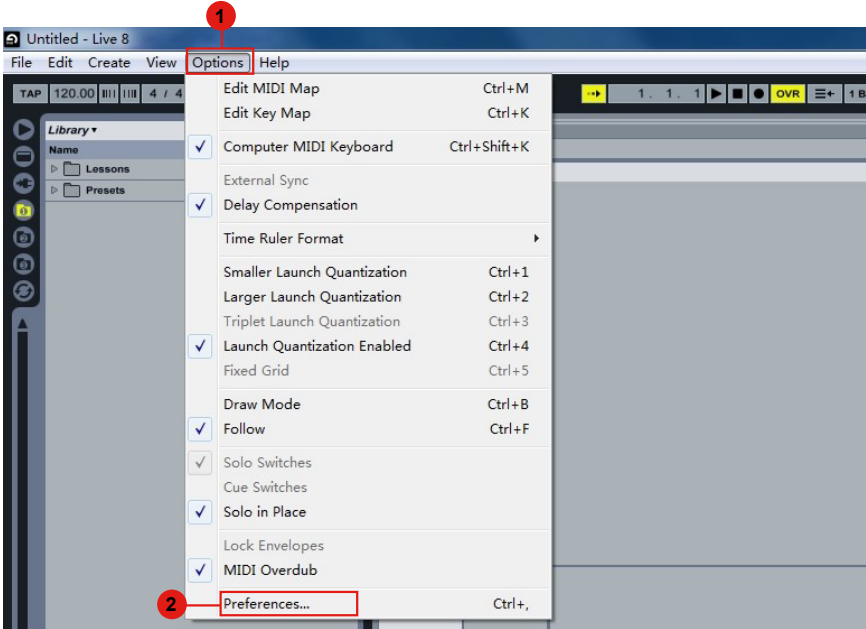




Logic Pro

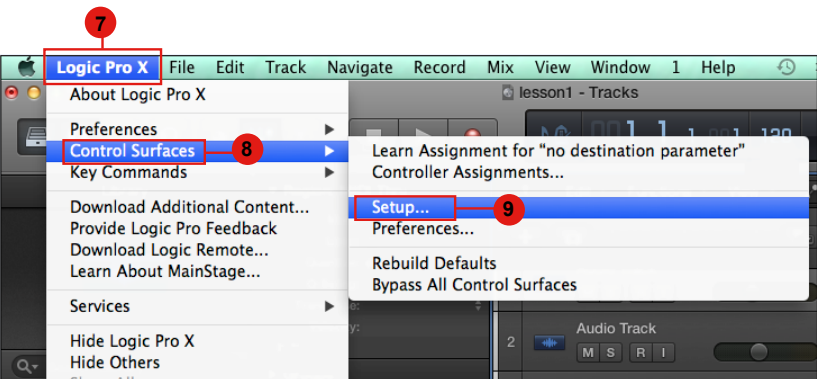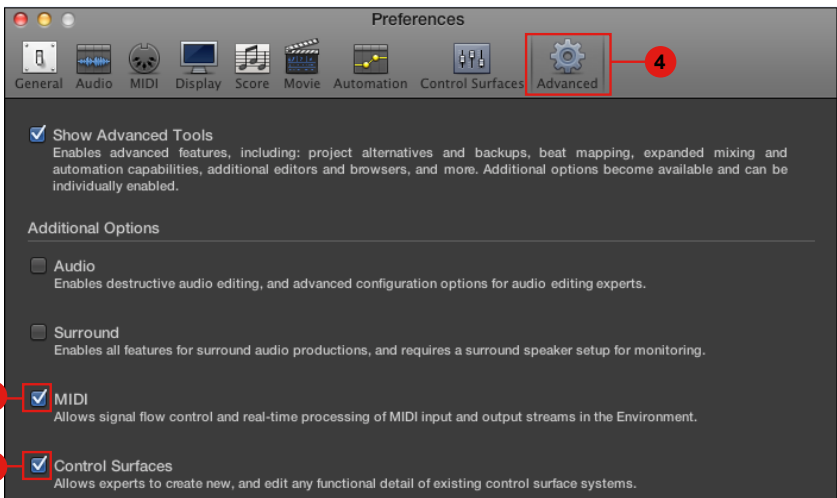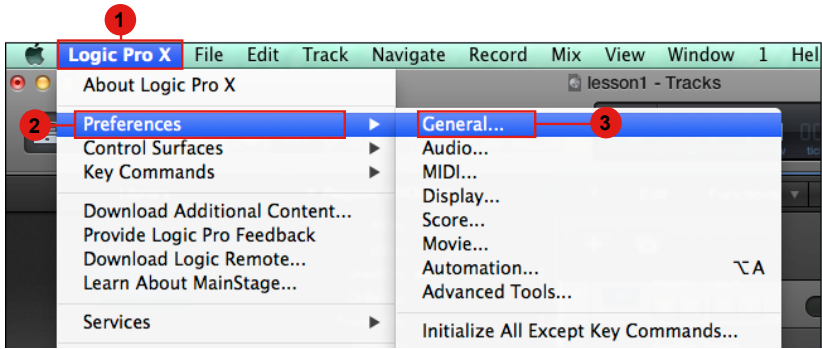

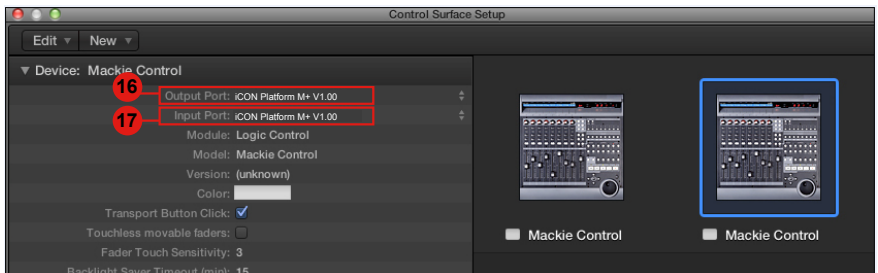
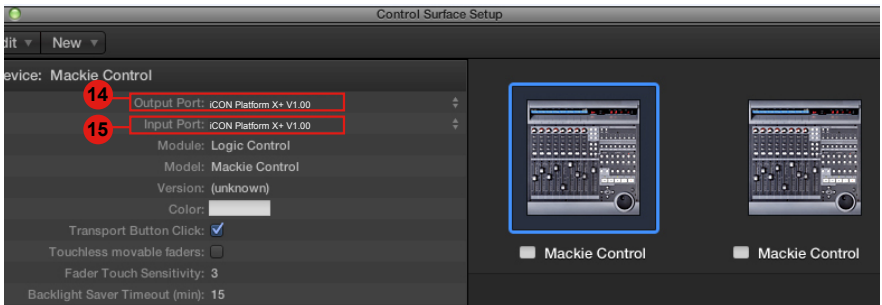
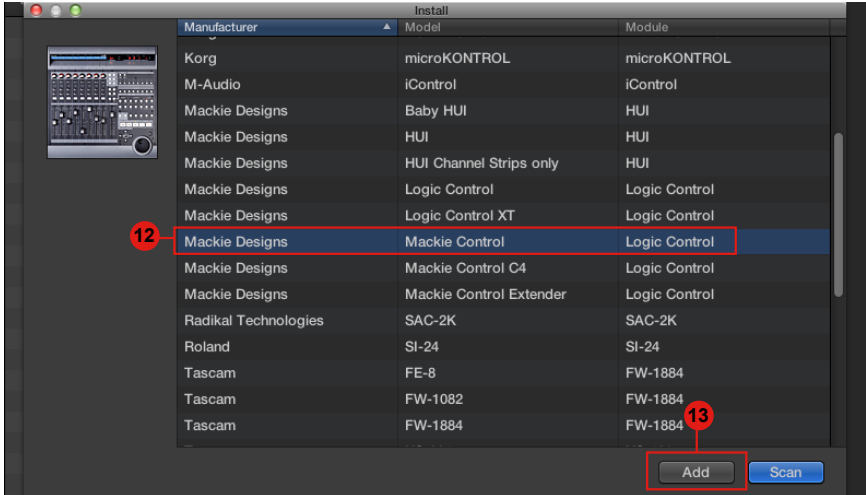
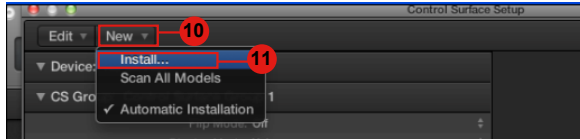




Samplitude

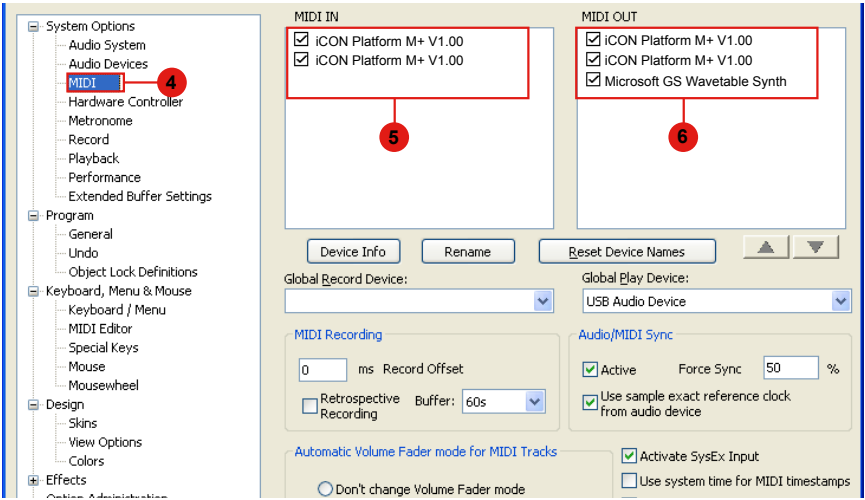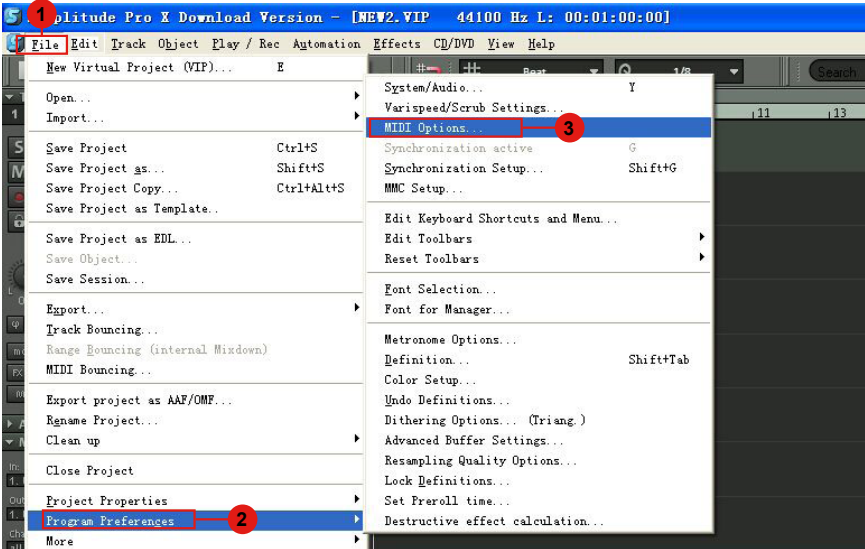

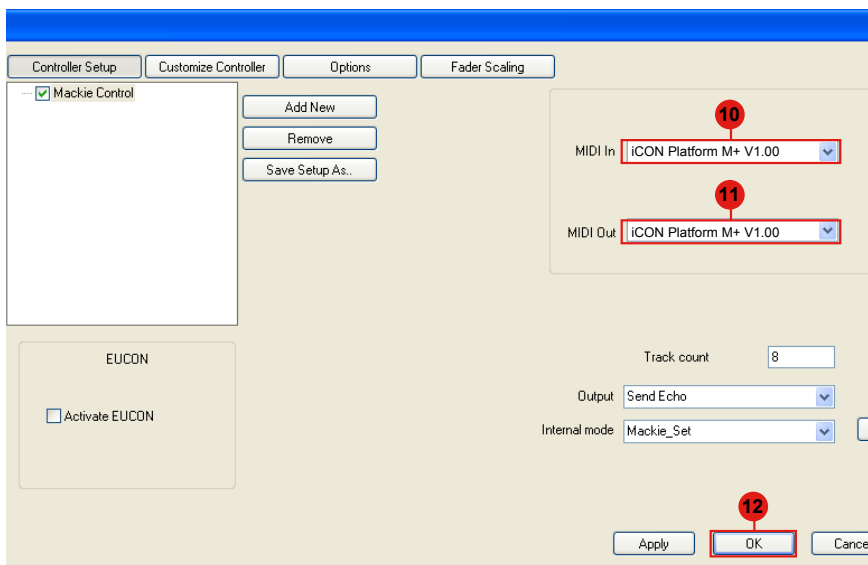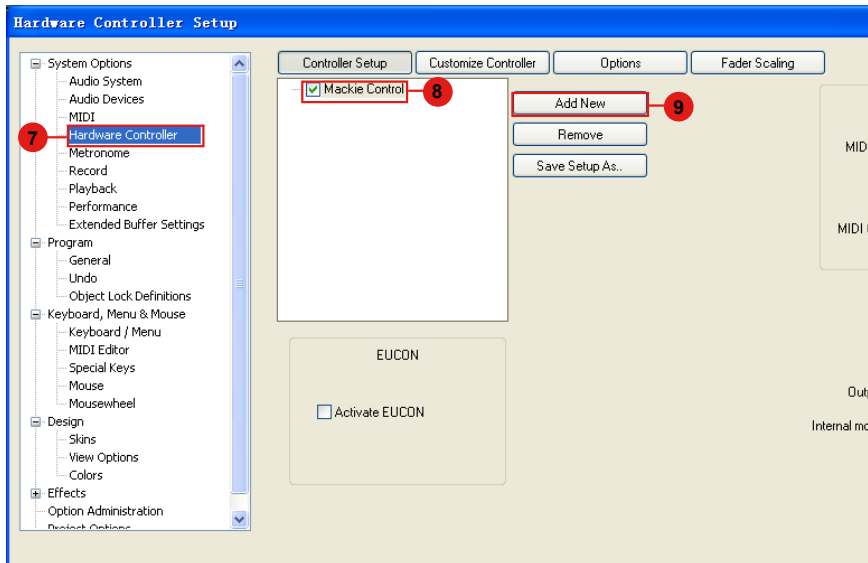




Pro Tools

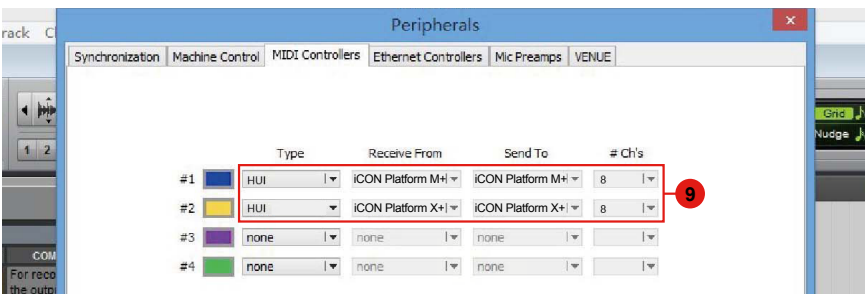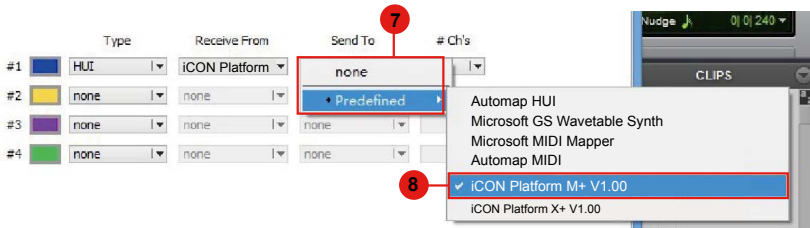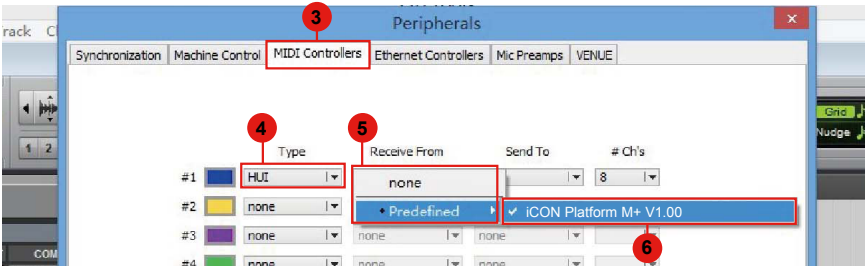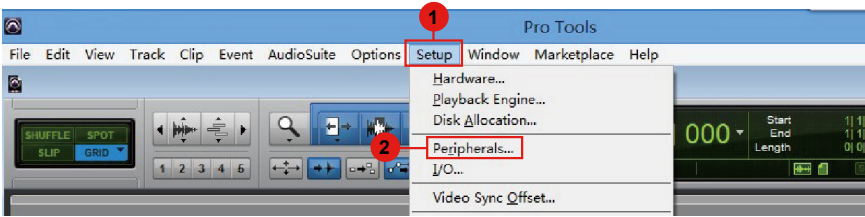

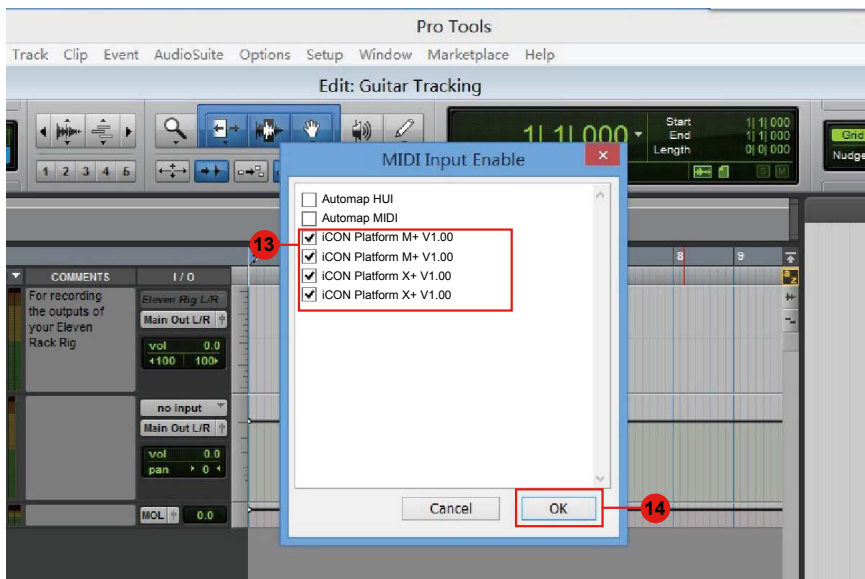
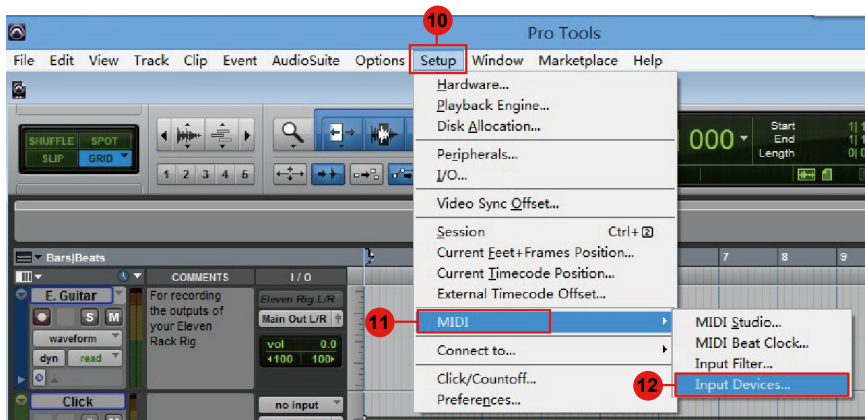


(Standalone)





Cubase

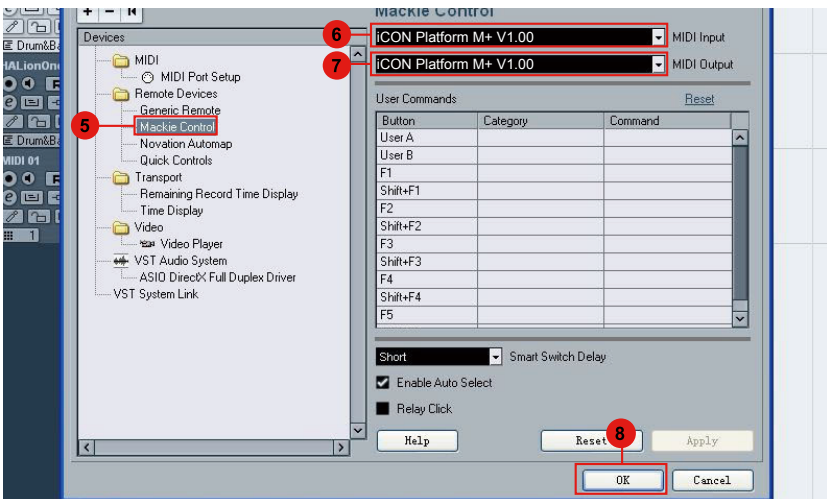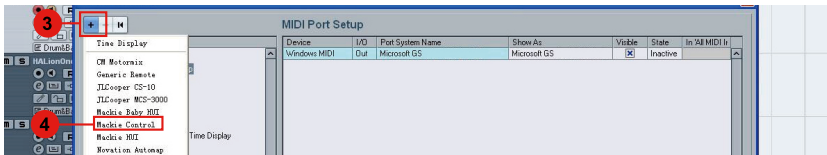
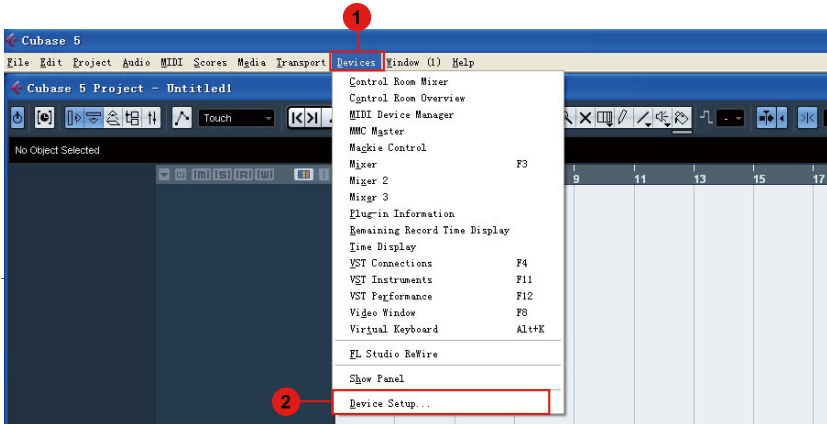


Nuendo

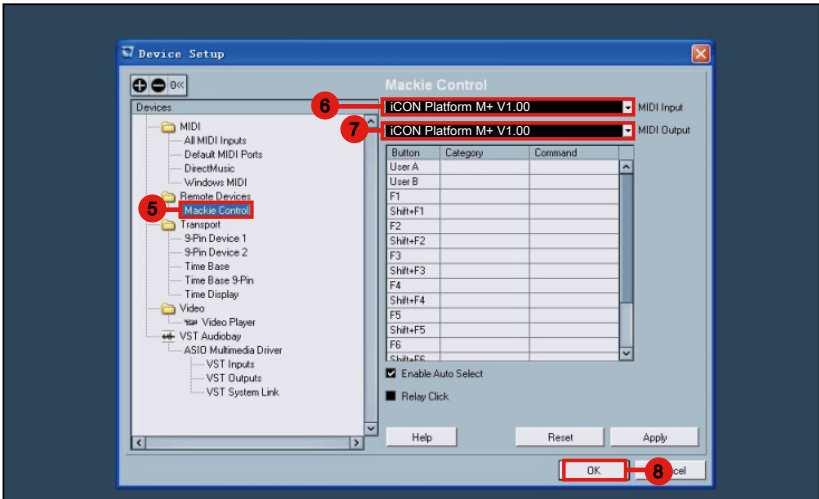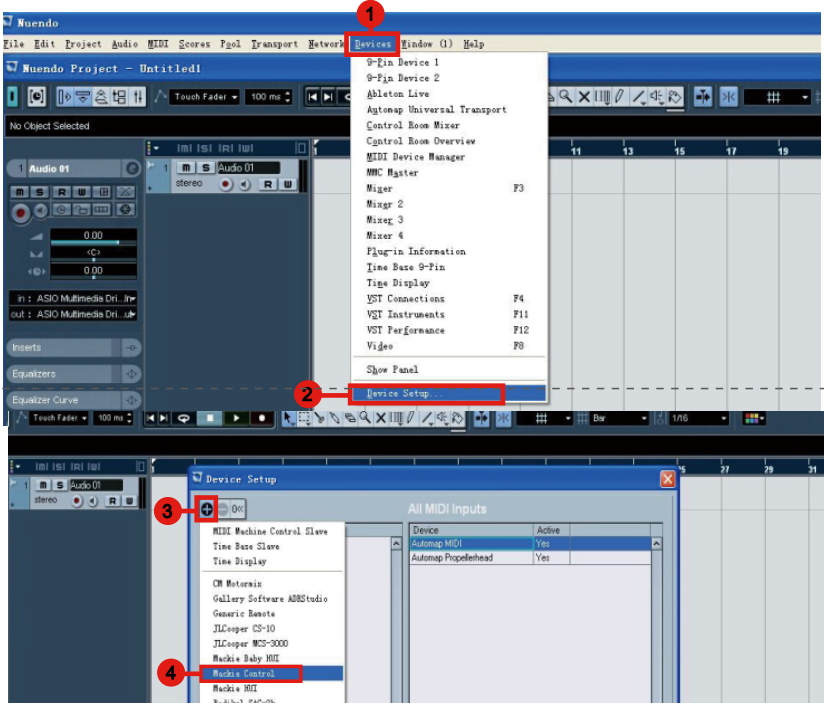





Logic Pro

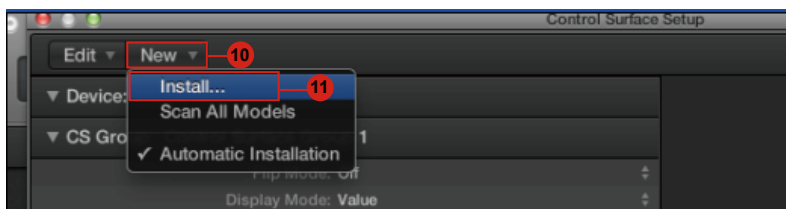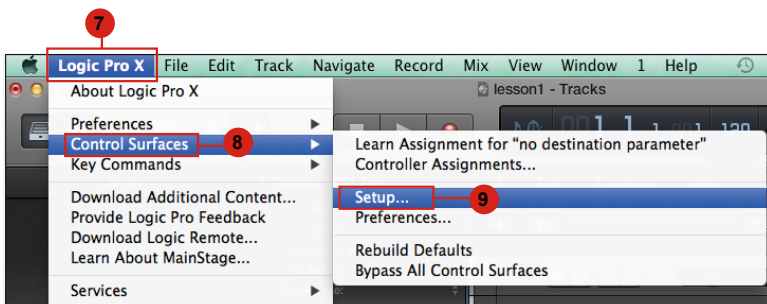
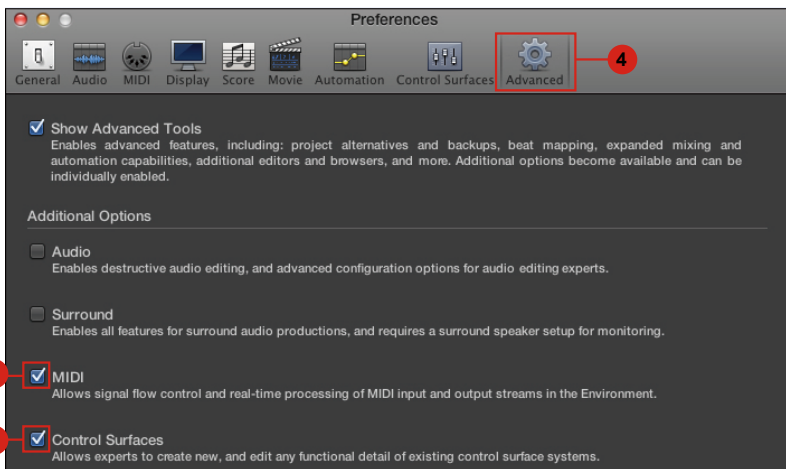
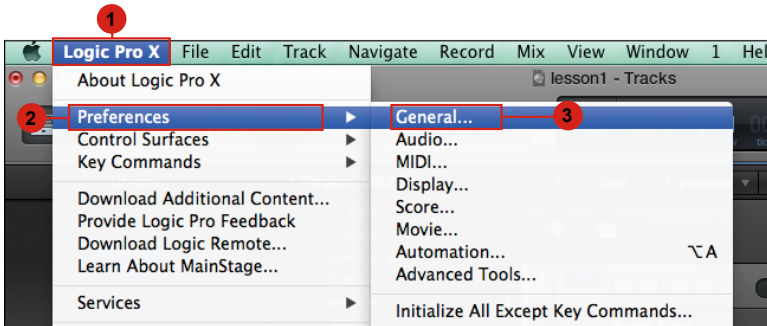


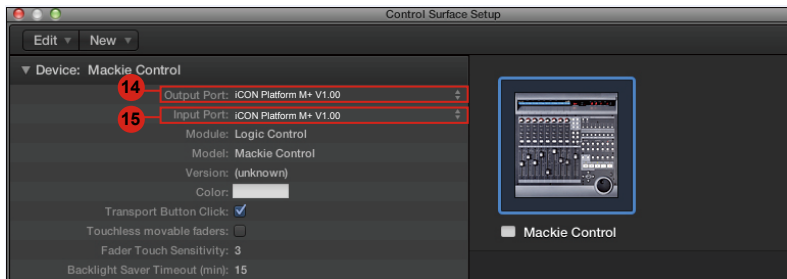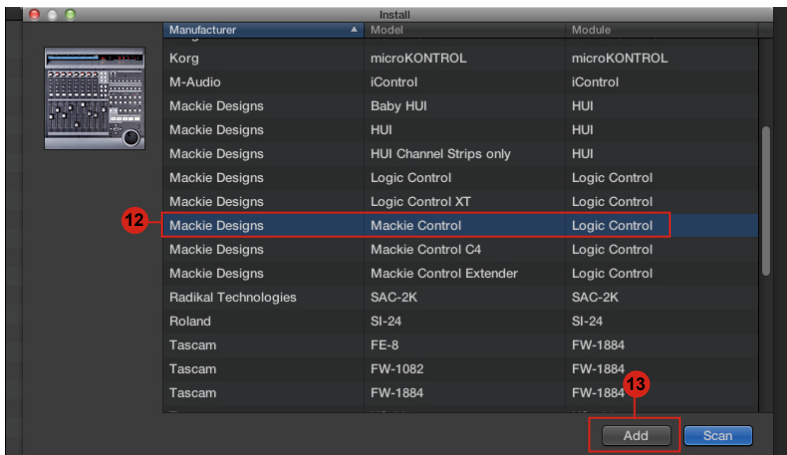




Samplitude

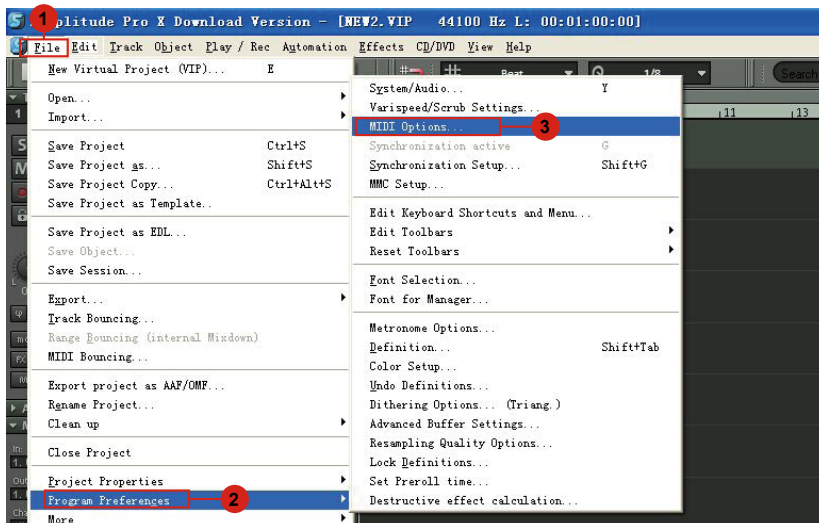

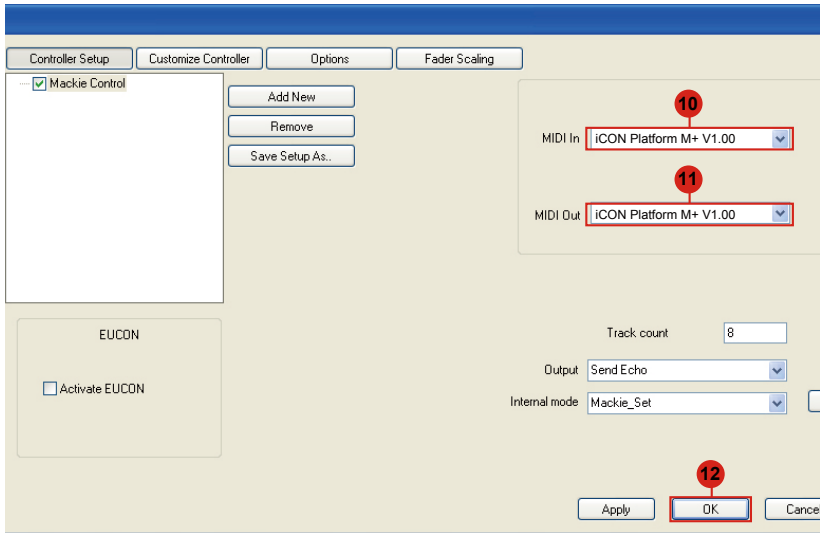
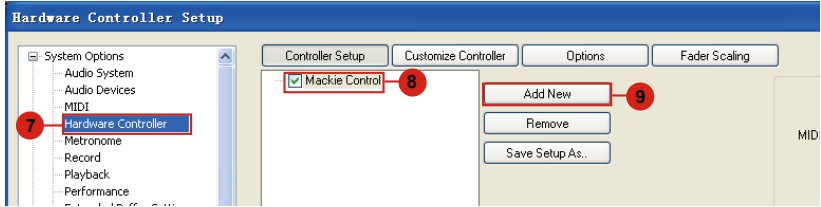
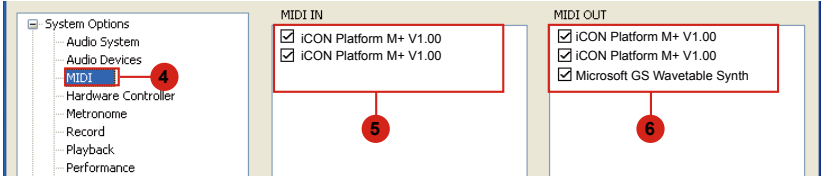


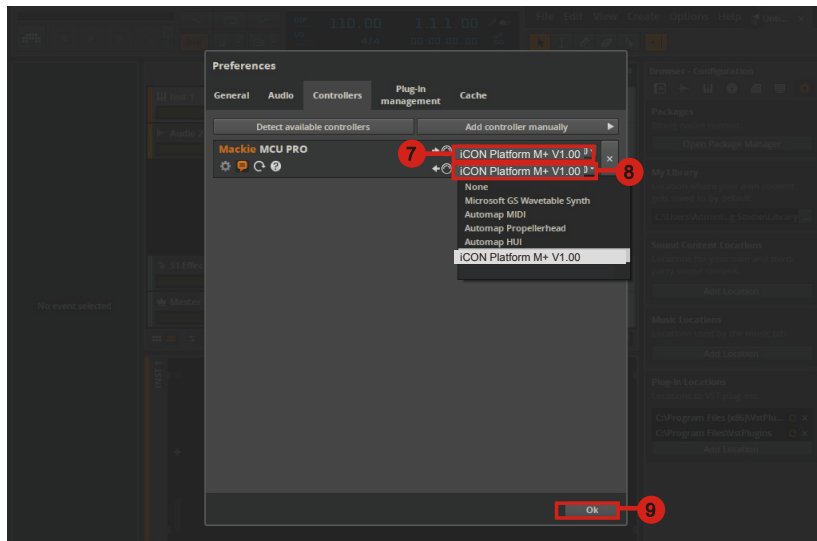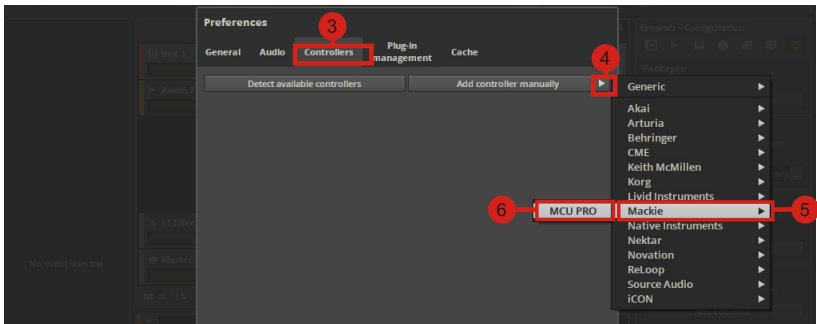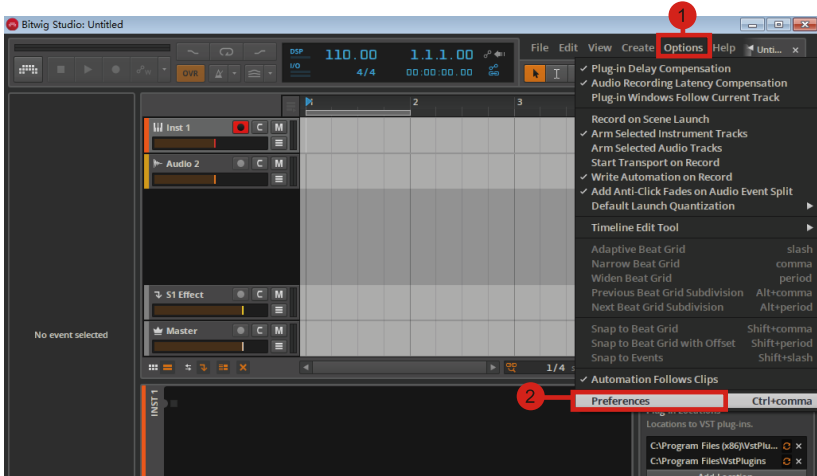




Reason

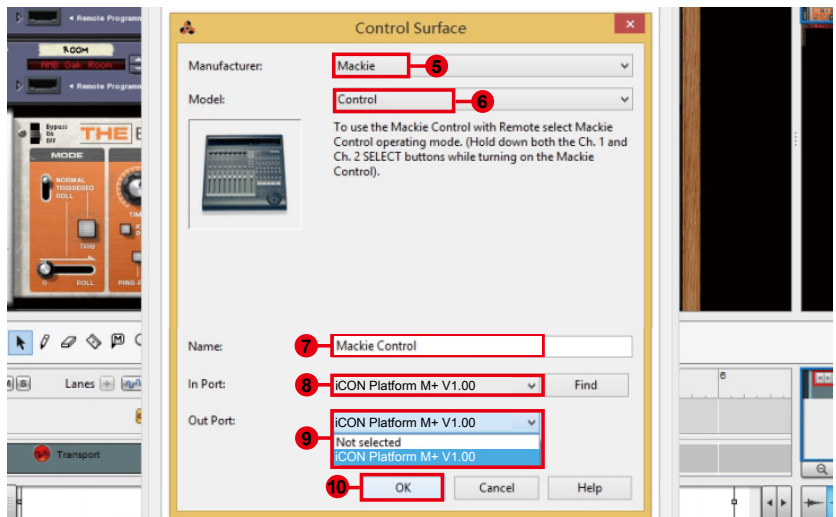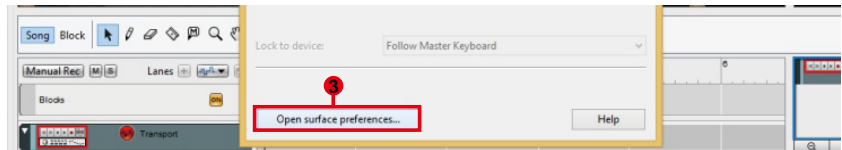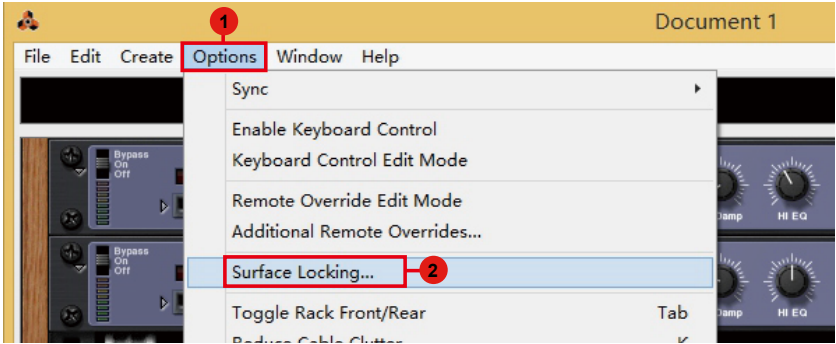



Reaper

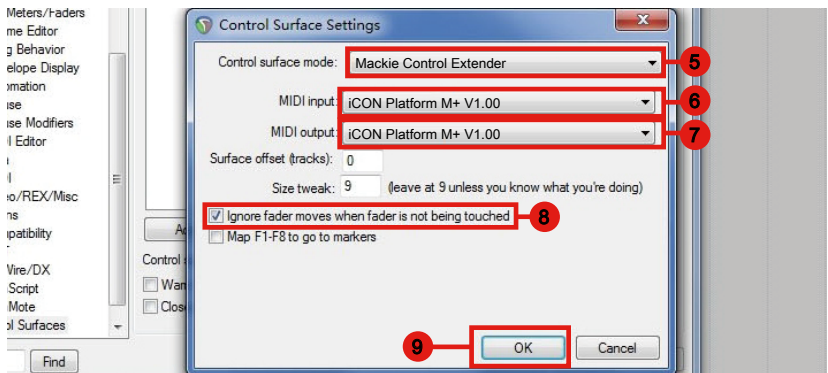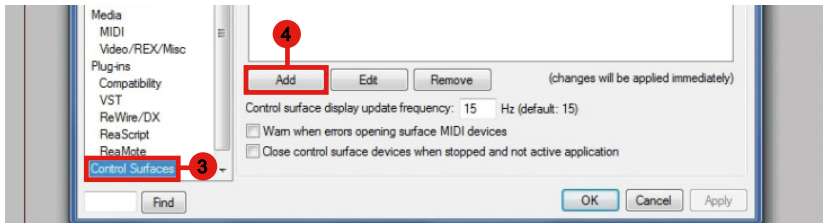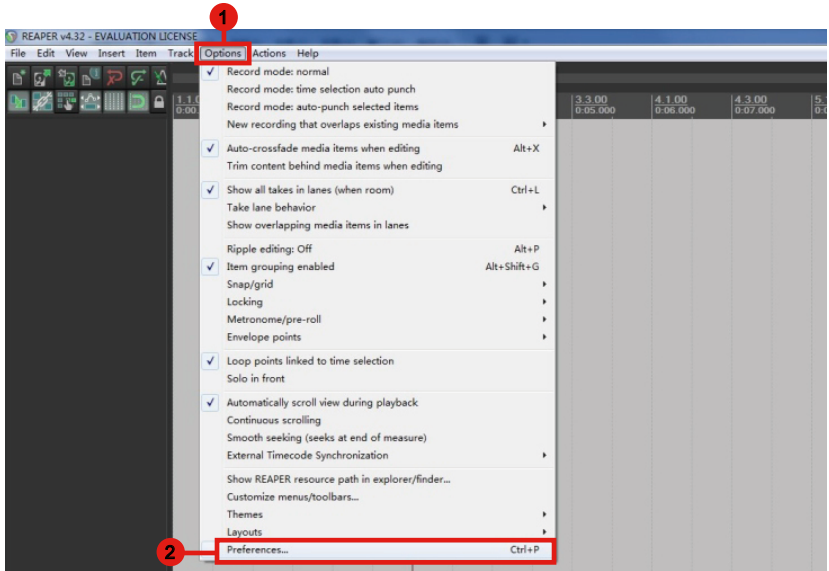






Studio One

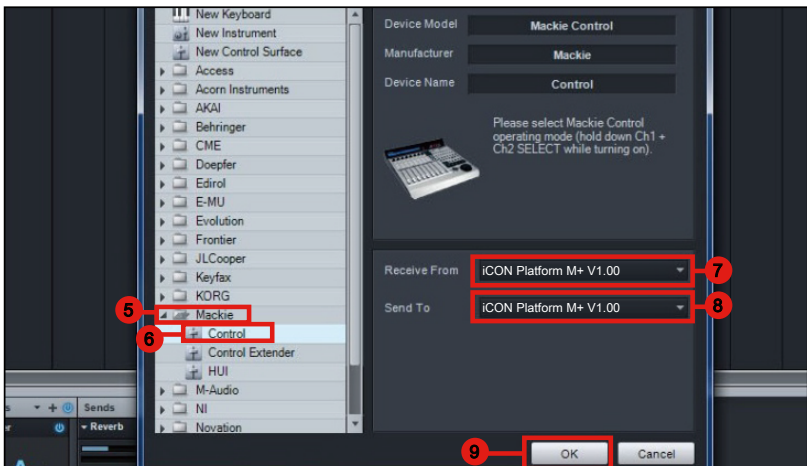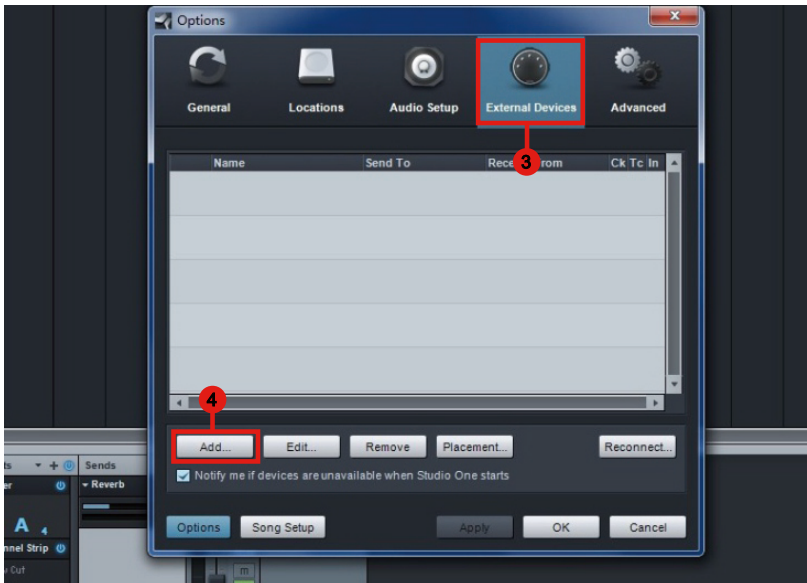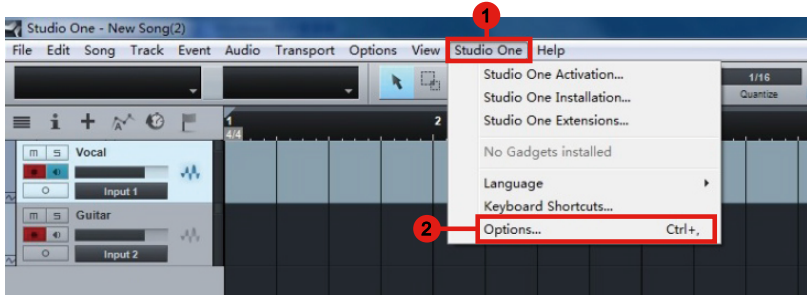


Ableton Live

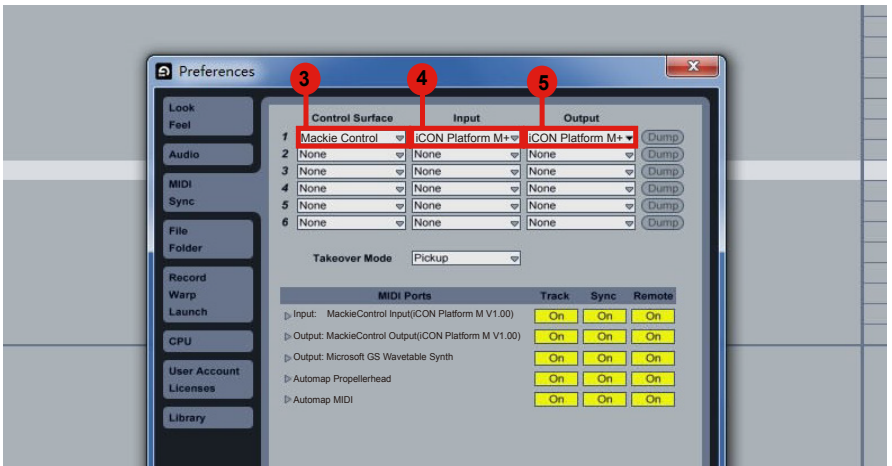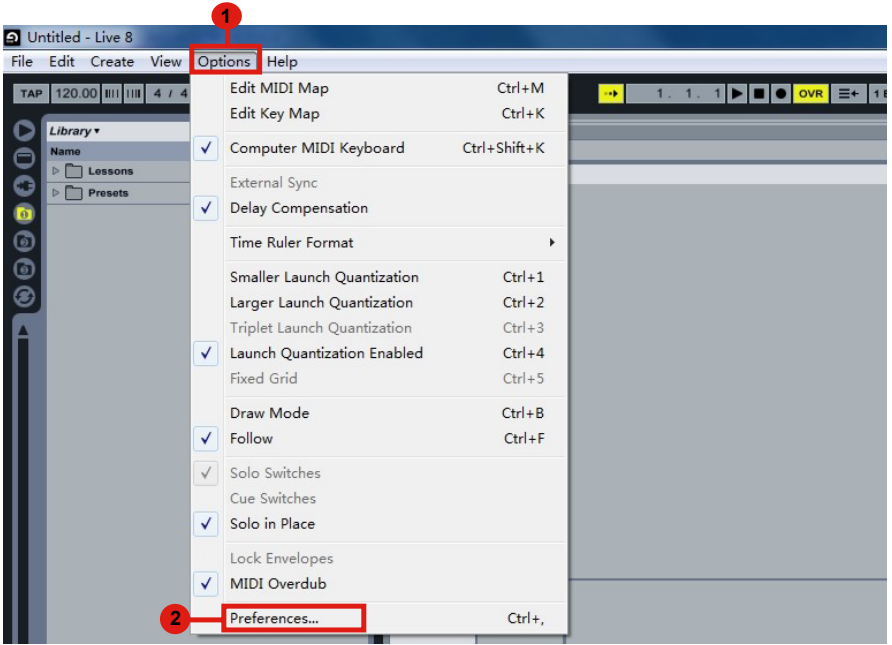

Pro Tools

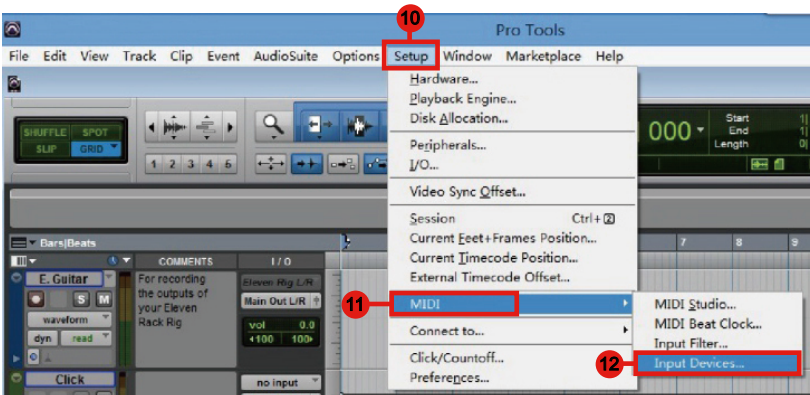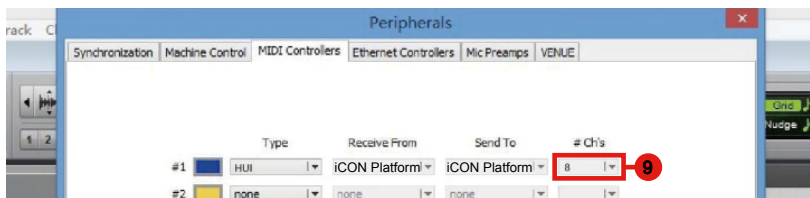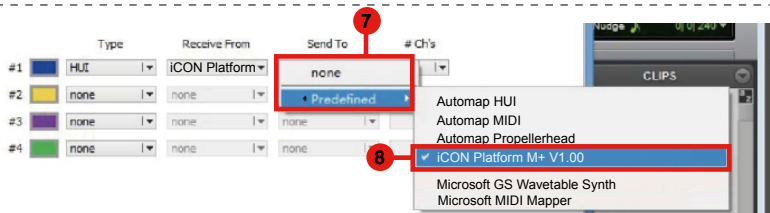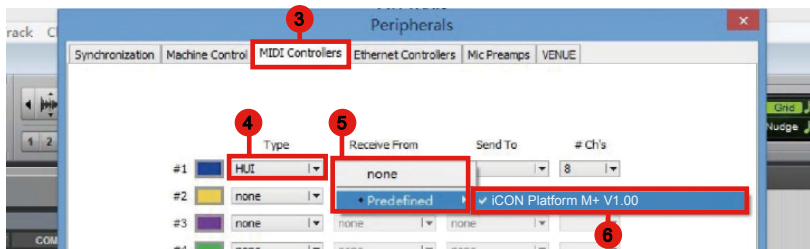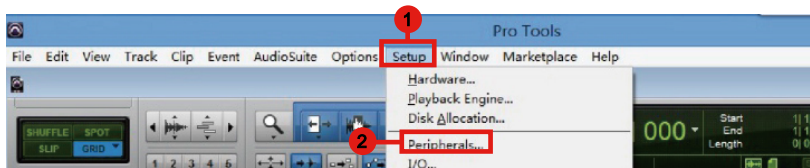

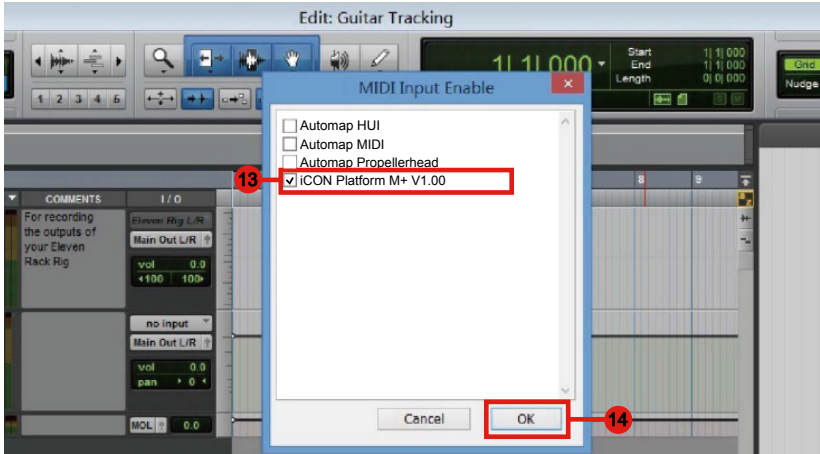

Laden Sie den Windows-Treiber von Ihrer persönlichen Benutzerseite unter www.iconproaudio.com herunter

Nachdem Sie die Treiberdatei heruntergeladen haben, klicken Sie darauf, um den Installationsvorgang zu starten

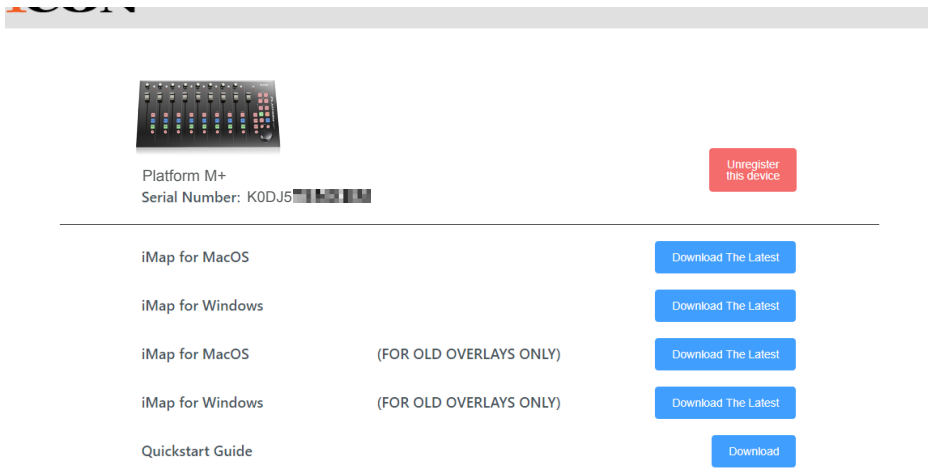


Diagramm 1

1. iMap™ Software-Installation für Mac OS X.

Bitte befolgen Sie die nachfolgenden Anweisungen Schritt für Schritt, um die iMap™ Software auf Mac OS X zu installieren.

Tipp: Verschieben Sie mittels „Drag and Drop“ das „Platform M+ iMap“-Symbol in den Ordner „Applications“, um eine „iMAP“-Verknüpfung auf Ihrem Mac-Desktop zu erstellen.

2. Klicken Sie auf "Weiter".

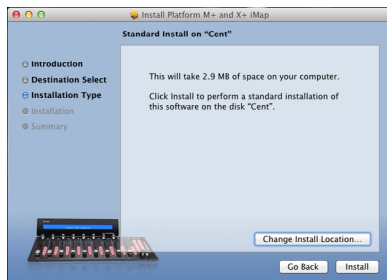


Diagramm 2

3. Klicken Sie auf "Installieren".

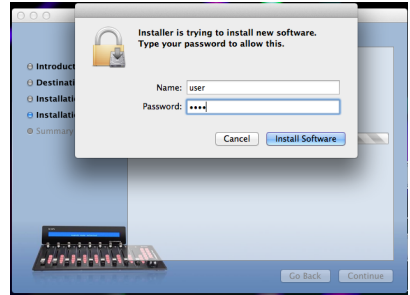


Diagramm 3

4. Geben Sie Ihr Passwort ein, damit die Installation gestartet werden kann.

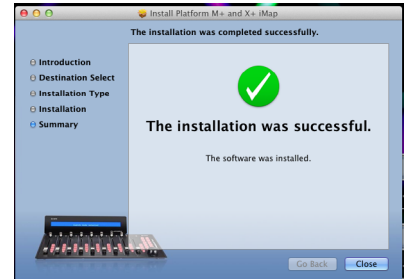


Diagramm 4

5. Klicken Sie nach Abschluss der Installation auf „Schließen“.

6. Sie können die Anwendung „Platform_M+_and_X+“ im „Spotlight“ finden und auf klicken, um sie auszuführen.

Oder Sie können den Ordner "Applications" im Finder öffnen und die iMap ausführen.

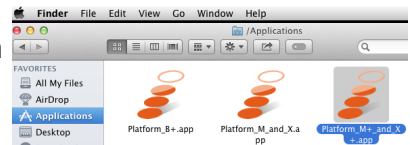



Diagramm 5

7. Benutzeroberfläche der iMap.

Tipps: Wenn Sie das Symbol „Platform-M+“ in den Ordner „Applications“ ziehen und ablegen, können Sie eine „iMap“-Verknüpfung auf dem Desktop Ihres Mac erstellen.



Diagramm 6

iMap™ Software-Installation für Windows

Bitte befolgen Sie die nachfolgenden Anweisungen Schritt für Schritt, um die iMap™ Software auf einem Windows-PC zu installieren.

1. Fahren Sie Ihren PC hoch.

2. Laden Sie den Windows-Treiber von Ihrer persönlichen Benutzerseite unter www.iconproaudio.com herunter.

Nachdem Sie die Treiberdatei heruntergeladen haben, klicken Sie darauf, um den Installationsvorgang zu starten

3. Wählen Sie den Installationsort

Wählen Sie den gewünschten Installationsort für iMap™ oder verwenden Sie die Standardeinstellung und klicken Sie auf ‚Next‘ (‚Weiter‘).

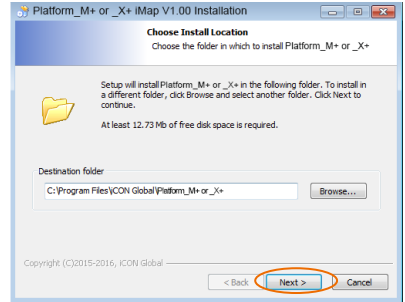


Diagramm 7

4. Verknüpfung erstellen

Wählen Sie den Ordner im Startmenü, in dem Sie die Verknüpfung (‚Shortcut‘) für iMap™ erstellen möchten. Klicken Sie dann auf ‚Next‘.

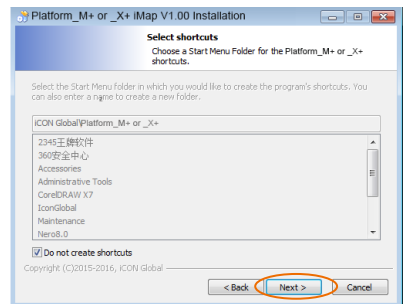


Diagramm 8

5. Erstellen Sie eine Verknüpfung auf Ihrem Desktop

Bitte deaktivieren Sie das Kästchen, 'Create a Desktop Icon', wenn Sie keine Verknüpfung für iMap™ auf Ihrem Desktop erstellen möchten; anderenfalls klicken Sie einfach auf ‚Next‘.

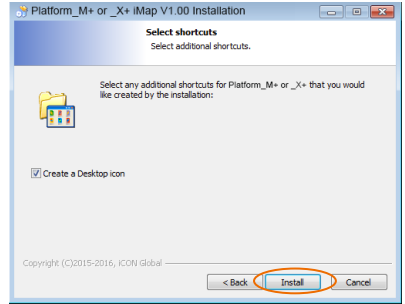


Diagramm 9

6. iMap™ beginnt mit der Installation

Die Installation von iMap™ hat nun begonnen. Warten Sie, bis diese beendet ist und klicken Sie dann auf ‚Finish‘ (‚Beenden‘).

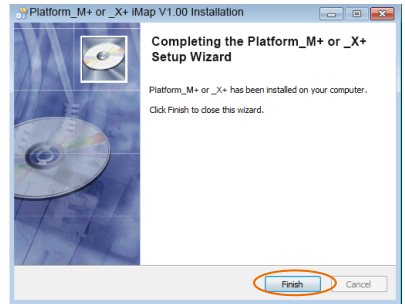


Diagramm 10

7. Klicken Sie auf das iMap-Logo auf Ihrem Desktop, um die iMap Software zu starten.

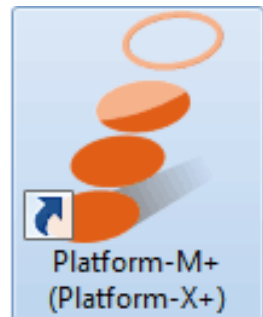


Diagramm 11

Zuweisen des DAW-Modus (Mackie Control/HUI) oder MIDI-Funktionen mit iMap™ definieren

Es gibt zwei verschiedene Methoden, um Ihre Plattform M+ an Ihre Bedürfnisse anzupassen. Im Allgemeinen wäre es viel einfacher und schneller, das Gerät mit dem Mackie Control / HUI-Protokoll abhängig von Ihrer DAW-Einstellung einzustellen.

Oder Sie können jedes Steuerelement auf Ihrem Plattform M+ mit ihren eigenen MIDI-Nachrichten definieren, die im Pulldown-Menü der iMap-Funktion angeboten werden. Allerdings kann dies sehr schwierig einzurichten sein, es sei denn, Sie verstehen die MIDI-Struktur Ihrer DAW vollständig. Wir empfehlen dringend, dass die vorgemappten DAW-Modi zu verwenden, da sie entsprechend der gängigsten Benutzereinstellungen programmiert sind und am ehesten Ihren Anforderungen entsprechen.

Zuweisen eines DAW-Modus (Mackie Control/HUI) mit iMap™

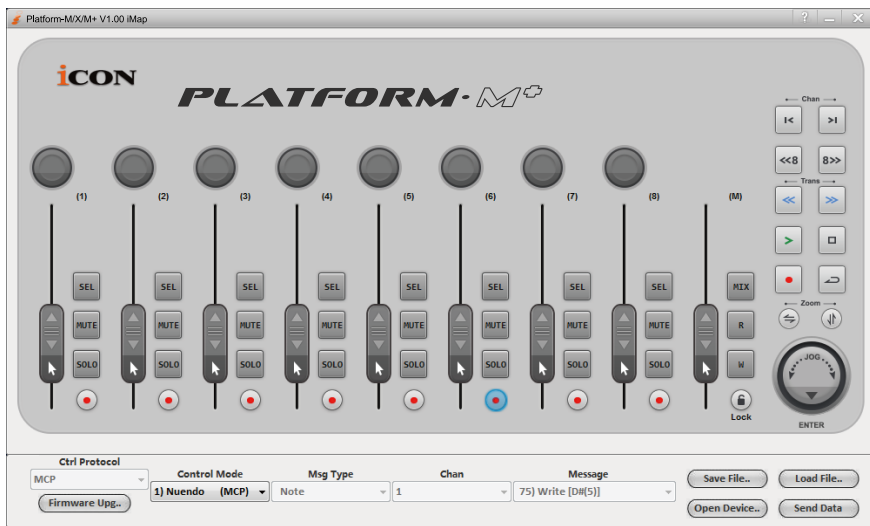


Diagramm 12

iMap™ Platform M+ Software-Bedienfeld

Um den DAW-Modussetup zu starten, verbinden Sie Ihren Platform M+ mit iMap. Gehen Sie wie folgt vor:

1. Verbinden Sie den Platform M+ mit Ihrem Mac/PC.
2. Starten Sie iMap und klicken Sie auf die Schaltfläche "Verbinden".

Hinweis: Verbinden Sie die Platform M+ mit dem mitgelieferten USB-Kabel mit Ihrem Mac / PC.

3. Wählen Sie „Platform M+“ aus dem Pop-up-Menü als Ihr MIDI-Ausgangsgerät.

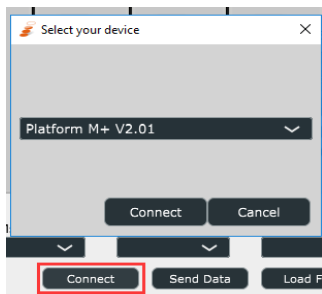


Diagramm 13

4. Wählen Sie entsprechend Ihrer DAW den DAW Mackie / HUI-Protokollmodus aus dem Pulldown-Menü "Control Mode" aus. sind verschiedene DAW-Modi aufgelistet:

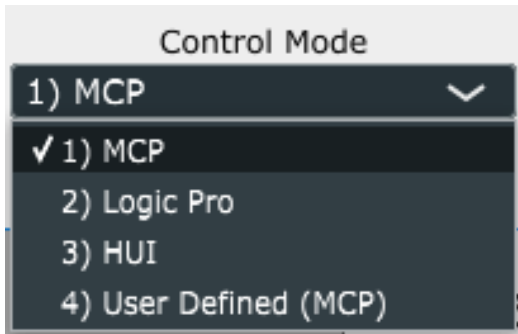



Diagramm 14

Hinweis: Im DAW-Modus (Mackie Control / HUI) können Sie kein MIDI ändern
Nachrichteneinstellungen für alle Steuerelemente auf Plattform M+.

Tipps: Sie können die Hardware auch verwenden, um den DAW-Modus anstelle
von iMap auszuwählen. Anweisungen finden Sie auf S.9.

5. Nachdem Sie alle Einstellungen beendet haben, klicken Sie auf „Send Data“.
6. Schließen Sie iMap.

Zuordnung von MIDI-Nachrichten im benutzerdefinierten Modus mit iMap™

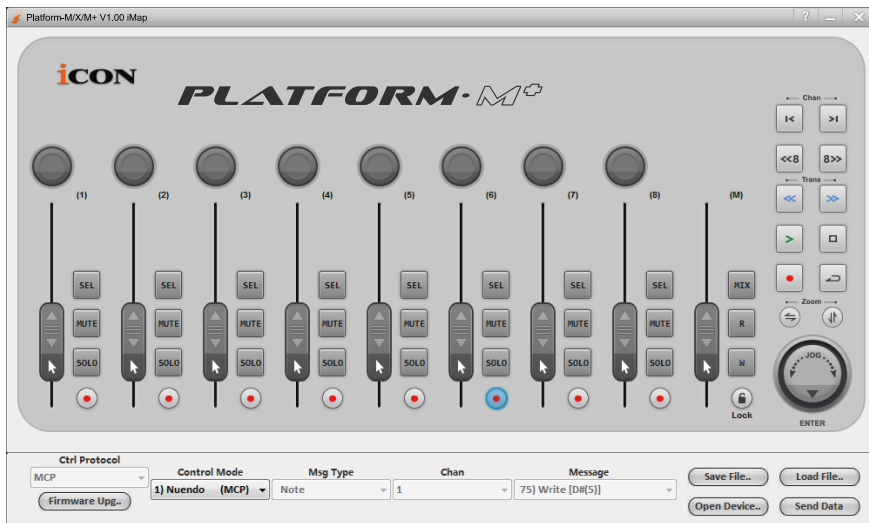

iMap™ Platform M+ Software-Bedienfeld

Diagramm 15

Um den „User-Defined Mode“ -Modussetup zu starten, verbinden Sie Ihren Platform M+ mit iMap. Gehen Sie wie folgt vor:

1. Verbinden Sie den Platform M+ mit Ihrem Mac/PC.
2. Starten Sie iMap und klicken Sie auf „Connect Device“.
3. Wählen Sie „Platform M+“ aus dem Popup-Menü als Ihr MIDI-Ausgangsgerät.

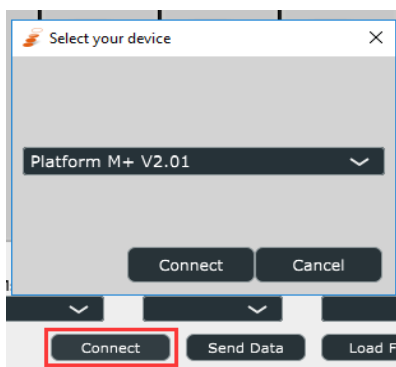


Diagramm 16

4. Wählen Sie „User-Defined Mode“ im „Modus“ Pulldown-Menü. Siehe folgende Abbildung (43) für jede Steuerelementeinstellung im benutzerdefinierten Modus.

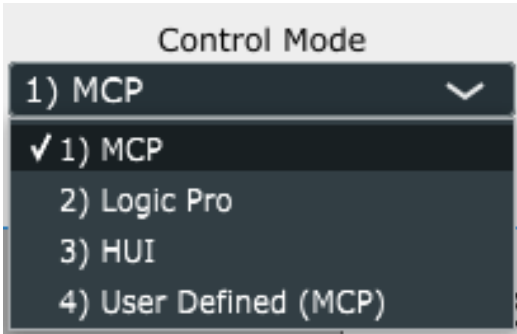


Diagramm 17

5. Nachdem Sie alle Einstellungen beendet haben, klicken Sie auf „Send Data“.
6. Schließen Sie iMap.

Steuerelement-Setup im benutzerdefinierten Modus

iMap™ Platform M+ Software-Bedienfeld

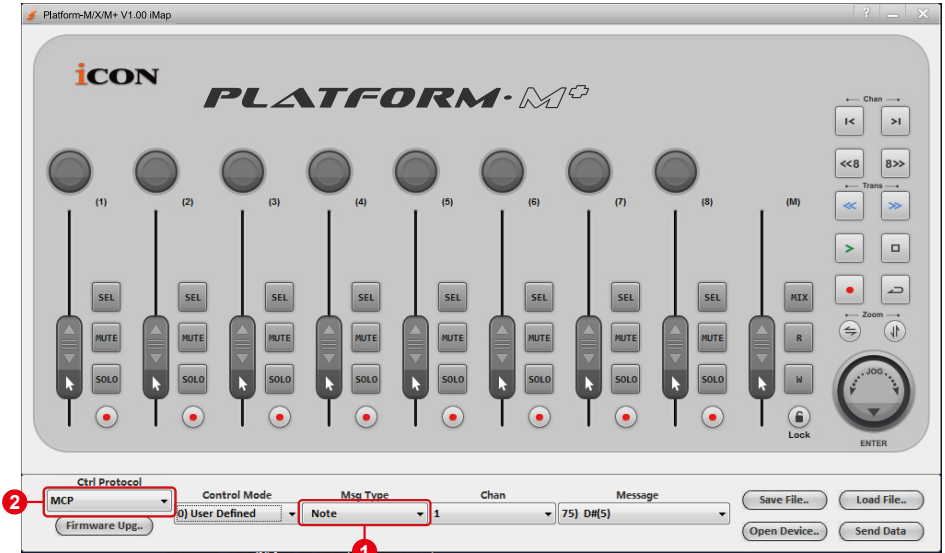



Diagramm 18

Es gibt auf Platform M+ Steuerelemente, einschließlich Fadern, Knöpfen, Tasten und einem Jog-Rad, für die Sie Ihre eigenen MIDI-Nachrichten einstellen können. Sie können die vier Nachrichtenarten, einschließlich „Tonhöhe“, „Ton“, „CC“-Werte, abhängig vom Steuerelement anpassen. Schlagen Sie in der folgenden Tabelle die verfügbaren Einstellungswerte nach.

„Steuerelementgrafik“

Control protocol	Control	Element	Available MIDI message setting values		
			Message type	Channel	Message
MCP	Faders	Slid	Note	1-16	C(-1) to G(9)
			CC	1-16	Bank MSB to Poly Mode On
			Pitch	1-16	0-127
		Touch sensitive	Note	1-16	C(-1) to G(9)
			CC	1-16	Bank MSB to Poly Mode On
			Pitch	1-16	0-127
MCP	Knobs	Rotate	Note	1-16	C(-1) to G(9)
			CC	1-16	Bank MSB to Poly Mode On
			Pitch	1-16	0-127
		Enter	Note	1-16	C(-1) to G(9)
			CC	1-16	Bank MSB to Poly Mode On
			Pitch	1-16	0-127
MCP	JogWheel	Rotate counter-clockwise	Note	1-16	C(-1) to G(9)
			CC	1-16	Bank MSB to Poly Mode On
			Pitch	1-16	0-127
		Rotate clockwise	Note	1-16	C(-1) to G(9)
			CC	1-16	Bank MSB to Poly Mode On
			Pitch	1-16	0-127
		Enter	Note	1-16	C(-1) to G(9)
			CC	1-16	Bank MSB to Poly Mode On
			Pitch	1-16	0-127
MCP	Buttons	All buttons except "Lock" button	Note	1-16	C(-1) to G(9)
			CC	1-16	Bank MSB to Poly Mode On
			Pitch	1-16	0-127

Sonstige Funktionen in iMap™

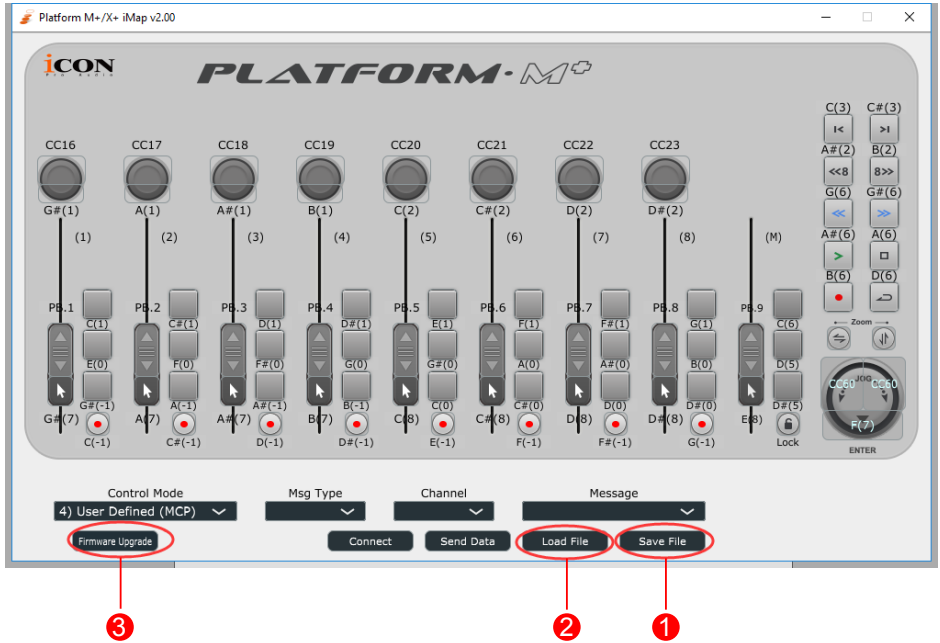

1. Einstellungen abspeichern mit dem Button “Save file”

Klicken Sie diesen Button an, um Ihre aktuellen Einstellungen für das Platform M+ abzuspeichern. Die Datei ist eine „. Platform M+“ Datei.

2. Einstellungen laden mit dem Button “Load file”




Klicken Sie diesen Button an, um bereits abgespeicherte „. Platform M+“ Einstellungsdateien für Ihr Platform M+ aufzurufen.

3. Taste „Firmware Upgrade“


Klicken Sie die Taste zum Aufrufen des Fensters für die Aktualisierung der Firmware des Platform M+. Siehe Seite 45 für Einzelheiten zur Aktualisierung der Firmware.

Firmware-Aktualisierung



Funktionale Firmware-Upload-Prozedur für Plattform M+

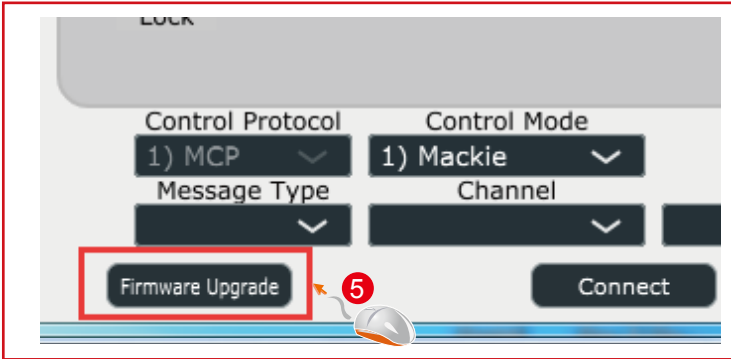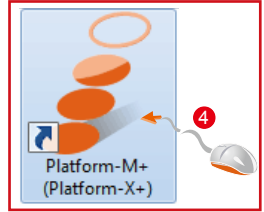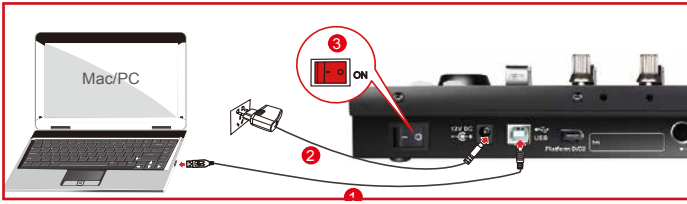

Warnung: Der Firmware-Upload-Vorgang „MUSS“ abgeschlossen sein und darf während des Datei-Upload-Prozesses nicht unterbrochen werden. Andernfalls kann das Gerät möglicherweise nicht wiederhergestellt werden. Daher ist ein Service-Center-Dienst erforderlich, um das Gerät wiederherzustellen.

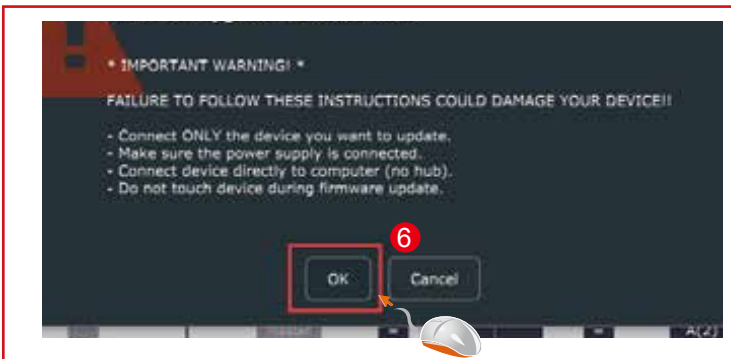


Schritt 1: Klicken Sie auf die erste Schaltfläche "Connect", um Platform M+ als MIDI-Ausgabegerät auszuwählen.

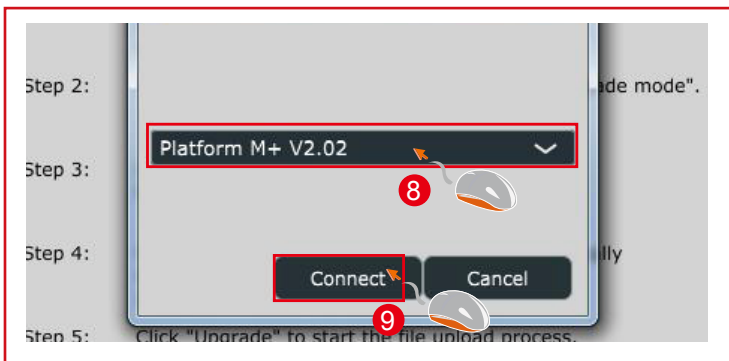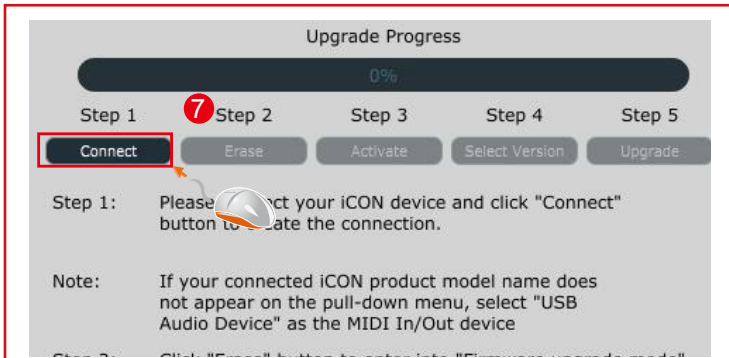


Hinweis: Wenn Platform M+ nicht im Pulldown-Menü angezeigt wird, wählen Sie "USB Audio Device" als MIDI In / Out-Gerät.

Schritt 2:


Klicken Sie auf die Schaltfläche "Löschen", um die Firmware zu löschen. Schritt 3 wird nur aktiviert, wenn die Firmware erfolgreich gelöscht wurde.

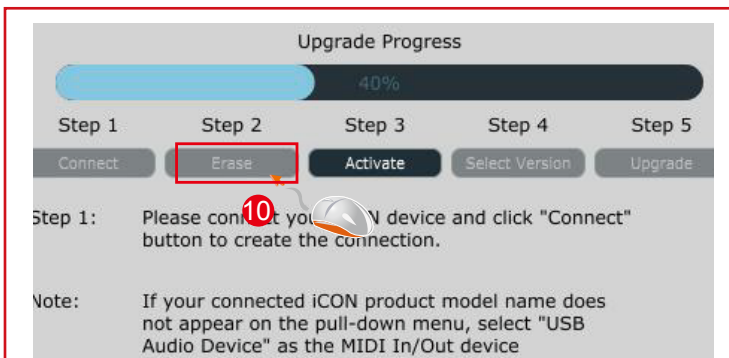


Schritt 3: Bitte warten Sie einige Sekunden, um sicherzustellen, dass das Gerät vollständig recycelt ist. Klicken Sie dann auf die dritte Schaltfläche "Aktivieren" und wählen Sie "iCON firmware upgrade", um den Firmware-Upgrade-Modus zu aktivieren.

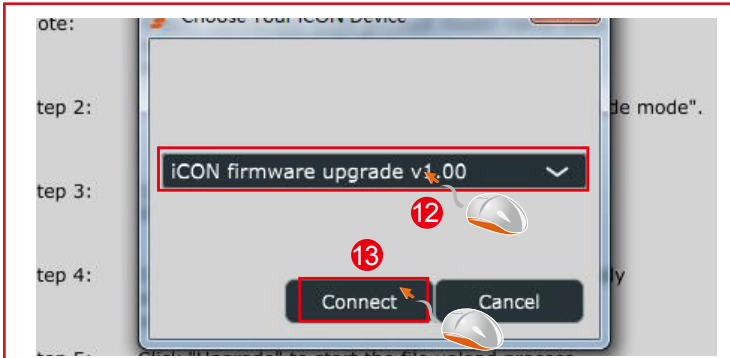


Schritt 4: Klicken Sie auf die Schaltfläche "Version auswählen" oder "Datei öffnen", um die neue Firmware zu durchsuchen, z.

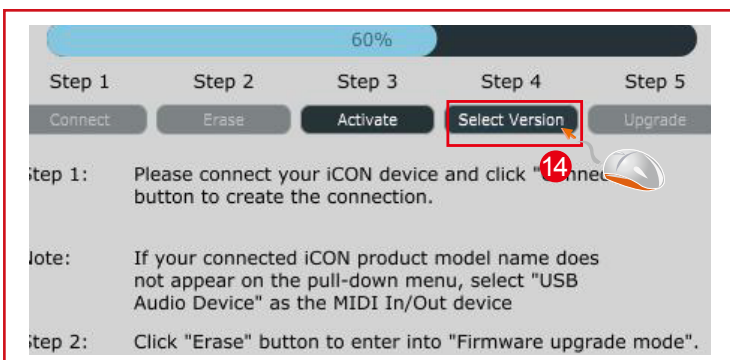

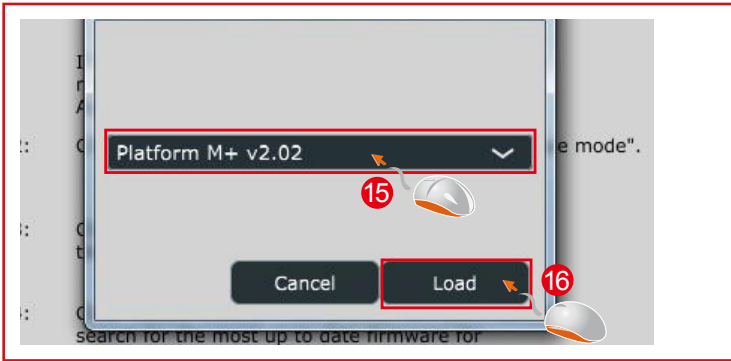

Schritt 5: Klicken Sie auf die Schaltfläche "Upgrade", um die Firmware zu aktualisieren, und warten Sie, bis die Firmware aktualisiert wird Fertigstellung.

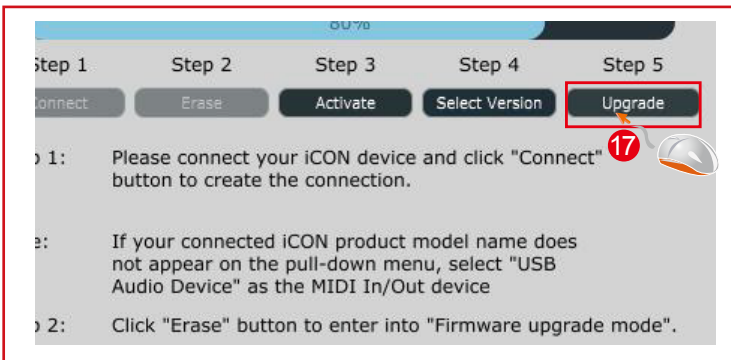

Rückstellung zu den Werkseinstellungen


Starten Sie zur Wiederherstellung Ihrer Platform M+- Einstellungen auf die werksseitigen Standardeinstellungen einfach iMap und importieren Sie auf die ursprünglichen Einstellungen in das Gerät (d.h. ohne Änderungen), indem Sie die folgenden Schritte durchführen.

1. Verbinden Sie mit dem mitgelieferten USB-Kabel den Platform M+ starten Sie die iMap-Software.
2. Klicken Sie auf die Taste „MIDI Device“ und wählen Sie „Platform M+“ als MIDI-Eingabe - und Ausgabegerät aus.
Hinweis: Wenn der Platform M+ im Pulldown-Menü nicht angezeigt wird, wählen Sie USB-Audio als MIDI-Eingabe- und -Ausgabegerät aus.
3. Klicken Sie auf „Send Data“, um die Einstellung zu ihrem Platform M+ hochzuladen.
4. Schließen Sie iMap und schalten Sie dann den Platform M+ aus und wieder ein.

Erweiterungsmodule anschließen

An diese Erweiterungports können Sie bis zu drei dedizierte Steuerungsmodule der Platform-Serie, z. Diese Module werden in Ihrer DAW-Einstellung als Plattform M+ erkannt.

Hinweis: Platform X+ hat einen eigenen USB-Anschluss für den direkten Anschluss an den PC / Mac.

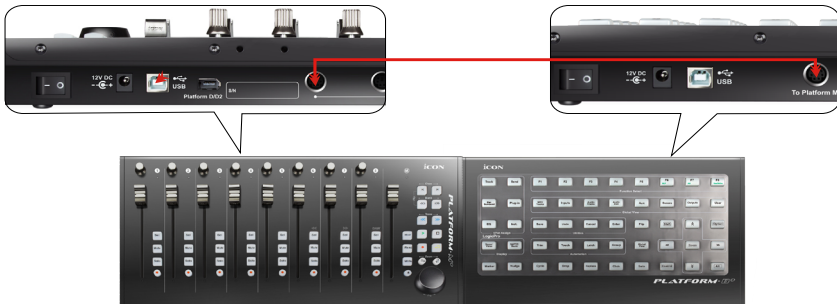

Platform M+ & Platform B+

Technische Daten

Verbindung:	Zum Computer	USB Kabel
Stromversorgung:		12V/2.5A DC
Stromverbrauch:		2.0A or less
Gewicht:		1.855kg (4.1lb)
Maße:		395(L) x 196(W) x 58(H)mm 15.6"(L) x 7.7"(W) x 2.3"(H)

Wartung und Reparatur

Falls Ihr "QconPro X " repariert werden muss, befolgen Sie bitte die nachstehenden Anweisungen.

Besuchen Sie unser Online-Hilfecenter unter <http://support.iconproaudio.com/hc/en-us> für Informationen, Erfahrungen und Downloads, wie z.B.

1. FAQ
2. Herunterladen
3. Erfahren Sie mehr
4. Forum

Sie werden auf diesen Seiten sehr oft Lösungen finden. Wenn Sie keine Lösung finden, erstellen Sie mit unserem Online-ACS (Automatische Kundenunterstützung) ein Support-Ticket unter folgendem Link und unser technischer Kundenservice wird Ihnen so schnell wie möglich helfen. Rufen Sie <http://support.iconproaudio.com/hc/en-us> auf und melden Sie sich zum Einreichen eines Tickets an oder klicken Sie ohne Anmeldung auf „Submit a ticket“.

Nachdem Sie ein Anfrageticket eingereicht haben, wird Sie unser Kundendienstteam so bald wie möglich bei der Lösung des Problems mit Ihrem iCON-Pro-Audio-Gerät unterstützen.

Einsenden von defekten Produkten zur Wartung:

1. Stellen Sie sicher, dass das Problem nicht durch einen Anwendungsfehler oder externe Systemgeräte verursacht wird.
2. Bewahren Sie diese Bedienungsanleitung bei sich auf und schicken Sie sie nicht mit, da sie für die Reparatur des Geräts nicht benötigt wird.
3. Packen Sie das Gerät in die Originalverpackung, einschließlich Registerkarte und Versandkarton. Dies ist sehr wichtig. Wenn Sie die Originalverpackung verloren haben, stellen Sie bitte sicher, dass das Gerät ordentlich verpackt ist. ICON übernimmt keine Verantwortung für Schäden, die durch fabrikfremde Verpackung entstehen.
4. Schicken Sie das Gerät an das technische Servicezentrum von ICON oder an die regionale Rücksendeadresse. Suchen Sie unsere Kundendienstcenter und Wartungsstellen der Distributoren unter dem folgenden Link:

Wenn Sie sich in Hongkong befinden
Senden Sie das Produkt an:

BÜRO ASIEN:
Unit F, 15/F., Fu Cheung Centre,
No. 5-7 Wong Chuk Yueng Street, Fotan,
Sha Tin, N.T., Hong Kong.

Wenn Sie sich in Europa befinden
Senden Sie das Produkt an:

Sound Service
GmbHEuropean
HeadquarterMoriz-Seeler-Straße
3D-12489 Berlin
Telephone: +49 (0)30 707 130-0
Fax: +49 (0)30 707 130-189
E-Mail: info@sound-service.eu

Wenn Sie sich in North America befinden
Senden Sie das Produkt an:

North America
Mixware, LLC – U.S. Distributor
11070 Fleetwood Street – Unit F.
Sun Valley, CA 91352; USA
Tel.: (818) 578 4030
Contact: www.mixware.net/help

5. Für zusätzliche Informationen besuchen Sie bitte unsere Webseite unter:
www.iconproaudio.com

Appendix A

Control Surface Functionality Manual

Cubase

QCon Pro X, QCon Pro XS, QCon Pro G2, QCon EX G2 Platform M+, Platform B+, Platform D2, Platform X+, Platform Nano

Revision v0.71

This is a master manual. Specific device manuals can be built from this material

Congratulations on owning an Icon control surface! This manual documents the full range of potential functions when the device is installed in Cubase.

You can extensively control Cubase with an Icon QCon series control surface or Icon Platform modular control system using standard Mackie Control protocol. Expansion bank units can be added for more hands-on controls: QCon expansion units for the QCon series and the Platform X+ channel bank expansion. Platform B+ button module is necessary to access all functions in this manual with Platform M+, and the D2 display highly recommended. Icon Metal Fader Caps and Icon Metal Knob Caps are available as an aesthetic and haptic upgrade for the best control experience.

The term Mackie Control is used to refer to the control protocol standard to be used with the QCon and Platform series control surfaces, and is abbreviated as MCP. The terms , Cubase, and all Cubase-specific terminology belong to Steinberg and has no affiliation with Icon Pro Audio.

<<<< Table of Contents >>>>

Setup	-
Getting Started	-
Mix and Transport	-
View	-
Automation	-
Encoder Knob Assignment	-
Utilities	-
Advanced Configuration	-
Troubleshooting	-

- Firmware Update -
- Fader Calibration -
- MCP MIDI Implementation Table..... -
- Renamed Buttons -

<<<<<Color Reference Key>>>>>

Control Surface Function

Control Surface Button

DAW Term

ButtonA + ButtonB =hold Button A and press Button B

Button A - Button B = press Button A and then press Button B

<<<<<<<<< Setup>>>>>>>>>

Before you can use your control surface, you will first need to configure it in Cubase. Once the setup is successful, by defaultCubase will remember your settings for future sessions without the need to reconfigure. For maximum stability, first boot the control surface and select the **DAW Mode**, then start your DAW software.

When your control surface is switched on, it will first prompt for a **DAW Mode** selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected **DAW Mode**. If no action is taken after startup, the control surface will select the last used mode after a few seconds.

To configure your Icon control surface in Cubase, go to Devices ->Device Setup. Delete previous Mackie Control configurations, then go to “+”and select Mackie Control. Finally choose your device name for both the Output Port and Input Port, displayed on the right under“Mackie Control”.

Repeat this process for any expansion modules. The configuration of each device needs to happen corresponding to the physical position of the control surfaces from left to right. You can now use your Icon control surface for transport, mix, and extended control functions. Next up: An overview ofthe fundamental elements for controlling Cubase.

Stop - Stop = Project cursor jumps to previous play position

Shift + FastForward= Project cursor jumps to end of project

Shift + Rewind = Project cursor jumps to start of project

Left = Project cursor jumps to left locator

Right = Project cursor jumps to right locator

Cycle = Toggle playback loop (set between the left and right locators)

Shift + Left = Set left locator to project cursor

Shift + Right = Set right locator to project cursor

Channel Strip Buttons:

Rec (channel) = Arms the channel strip for recording

Solo = Engage **Solo** for one or multiple channels

Mute = Engage **Mute** for one or multiple channels

Select = Focuses and selects the channel, displays the fullchannel name on the LCD display

Solo Defeat = De-solo all channels (*default QCon Pro X and B+ only*)

Shift + Solo Defeat= Un-mute all channels (*default QCon Pro X and B+ only*)

Shift + ChannelUp/Down= Bank by 1 channel instead of 8

Shift + BankUp/Down= Toggle switch Band/Channel

Monitoring:

In **Pan Assignment**, press the Encoder Knobs to toggle channel **monitoring**. This activates input monitoring mixed with audio playback output from Cubase.

Fader Lock:

Press **Lock Mix** to disable touch sensitive changes to fader position. Automation remains active. This is useful to secure a finished mix.

Press **Motorsto** disable all motor fader movement. This is useful to silence the control surface. When motors are disabled, the faders are still touch-responsive and can edit the mix.

Listen Mode:

Shift + Project = activate **Listen Mode**:

Solo = Engage **Listen** for one or multiple channels

Shift + Project = deactivate **Listen**for all channels

There are settings in Cubase for **Listen** in the **Control Room**, which is found under**Outputs** in the **Connections Window**.

<<<<<<<<< Encoder Knob Assignment >>>>>>>>

Press one of the **Assignment** buttons to select the category of parameters currently assigned to the **Encoder Knobs**. Assignment modes apply controls to the currently selected channel – with a few exceptions. Use **Channel** up/down to browse pages of options and parameters. Rotate the **Encoder Knobs** to adjust parameters or make a selection from a list.

Assignment Modes:

- Pan** = Activates **Pan Assignment**. Edit standard pan or front/rear panning.
- Inserts** = Activates **Insert Assignment**. Open plug-ins and access plug-in parameters.
- EQ** = Activates **EQ Assignment**. Opens and edits **Cubase EQ** on selected channel.
- FX Aux** = Activates **FX Aux Assignment**. Open and edit the **Channel Strip Rack**.
- Instrument** = Activates **Instrument Assignment**. Open and edit plug-in instruments.
- Send Page Down** = Activates **FX Send Assignment**. Setup and edit FX sends.
- Master FX** = Activates **Master FX Assignment**. Setup and edit FX sends.
- Page Up, Routing** = Activates **Routing Assignment**. Setup and edit FX sends.

Fader Flip:

Press **Flip** to access the current **Encoder Knob** parameters on the touch sensitive motor faders. This is great for precise adjustments of multiple channels/parameters and managing automation.

<<<<< Pan >>>>>

Pan Assignment: (Pan)

Press **Pan** to adjust stereo panning with the **Encoder Knobs** on their respective channels. Press **Page** Up/Down to choose between Left/Right or Front/Rear panning.

Surround Assignment: (Shift+Pan)

Edit multiple surround parameters for the selected channel. **Each Encoder Knob** is set to a different function depending on the current channel Panner set in Cubase: Stereo Dual Panner, Stereo Combined Panner, Stereo Balanced Panner, or others.

Parameters:

L-R Standard, L-R Panner, Mode

<<<<< Inserts >>>>>

Insert Assignment Mode: (Plug-In)

Press **Insert** to open and edit plug-ins on the selected channel. Assign plug-ins on Page 01, and edit on Page 02. Press **Channel** up/down to browse pages. Plug-In parameters appear on the LCD display and are assigned across the **Encoder Knobs**.

To quickly insert and edit a plug-in, press **Insert**, then turn **Encoder Knob 3**, press **Channel** down and then edit parameters on all Encoder Knobs.

Insert parameters appear automatically assigned across the Encoder Knobs

<<<<< **EQ** >>>>>

EQ Assignment Mode: (EQ)

Press **EQ** to open (or add) the **Cubase EQ**. **EQ Assignment Mode** can only edit a standard **Cubase EQ**. Press **Flip** to control EQ with the faders, and **Channel** up/down to browse parameters. Edit multiple EQ bands at once for the selected channel. Press a **Freq** knob to change to adjusting Q and press a **Gain** knob to toggle bypass.

Band 1 Frequency

Band 2 Frequency

Band 1 Gain

Band 2 Gain

Band 3 Frequency

Band 4 Frequency

Band 3 Gain

Band 4 Gain

Advanced EQ Assignment Mode: (Shift + EQ)

Band 1 Gain

Band 2 Gain

Band 1 Frequency

Band 2 Frequency

Band 3 Gain

Band 4 Gain

Band 3 Frequency

Band 4 Frequency

Band 1 Q-Factor

Band 2 Q-Factor

Band 1 Bypass

Band 2 Bypass

Band 3 Q-Factor

Band 4 Q-Factor

Band 3 Bypass

Band 4 Bypass

<<<<< **FX Aux** >>>>>

FX Aux Assignment Mode:

In **FX Aux Assignment Mode**, edit settings for **Channel Strip Rack** modules. Browse parameters with **Channel** up/down.

<<<<< **Instrument** >>>>>

Instrument Assignment Mode:

Press **Instrument** to open and edit instrument plug-ins on the selected channel. Assign plug-ins on Page 01, and edit on Page 02. Press **Channel** up/down to browse pages. Plug-In parameters appear on the LCD display and are assigned across the **Encoder Knobs**.

To quickly load and edit an instrument, press **Instrument**, then turn **Encoder Knob 3**, press **Channel** down and then edit parameters on all Encoder Knobs.

Page 01

Instrument Slot#

Instrument Bypass

Select Instrument

Page02+

Insert parameters appear automatically assigned across the Encoder Knobs

<<<<< **Send** >>>>>

FX Send Assignment Mode: (Page Up, FX Send)

Use the **FX Send Assignment Mode** to adjust send amount, bypass, toggle pre/post fader, and set FX channel insert effects.

To quickly create and edit an FX Send, press **FX Send**, then turn **Encoder Knob 3**, press **Channel** down and then edit parameters on all Encoder Knobs.

Page 01

FX Channel #

Send Bypass

Select Plug-In

Page02+

Insert parameters appear automatically assigned across the Encoder Knobs

Send Focus Mode: (Select a channel - Send - Page Down)

Edit the send parameters of 8 sends at once for the selected channel. Press **Channel** up/down to browse parameters:

Send Amount

Send Bypass

Send Pre/Post Fader

Send Bus Destination

Send Mixer Mode:(Send - Select a channel - Shift+ Page Down)

Edit advanced parameters with the **Encoder Knobs** on their respective channels. Repeatedly press **Shift+ Page Down** to toggle through **FX Send 1-8**. Each **Encoder Knob** is set to a different function. Browse parameters with **Channel** up/down:

Send Amount

Bypass

Pre/Post Fader

Send Panning

Bus Destination

Bypass All Sends

Cue Send Mode: (Shift+ Send)

Access settings for Cue sends with the **Encoder Knobs** on their respective channels. Press **Shift+ Send** to toggle through Cue Send 1-8. Browse parameters with **Channel** up/down:

Send Amount
Bypass
Pre/Post Fader
Send Panning
Bypass All Sends

Cue Send Mixer Mode: (Shift+ Send - Select a channel - Shift+ Page Down)

Edit advanced parameters for multiple channels. Repeatedly press **Shift+ Page Down** to toggle through **FX Send 1-8**. Each **Encoder Knob** is set to a different function. Browse parameters with **Channel** up/down:

Send Amount
Bypass
Pre/Post Fader
Send Panning
Bus Destination
Bypass All Sends

<<<<<Master FX>>>>>

Master FX Assignment Mode: (Master FX)

Use the **Master FX Assignment Mode** to edit and adjust effects loaded in the master insert slots. To quickly create and edit an FX Send, press **Send**, then turn **Encoder Knob 3**, press **Channel** down and then edit parameters on all Encoder Knobs.

Page 01
Master FX Slot # FX Bypass Select Plug-In
Page 02+

Insert parameters appear automatically assigned across the Encoder Knobs

<<<<<Routing>>>>>

Routing Assignment Mode: (Page Down, Routing)

Edit routing parameters with the **Encoder Knobs** on their respective channels. Browse parameters with **Channel** up/down:

Output Bus
Monitor

Input Bus
Input Gain
Input Phase

Direct Routing Assignment Mode: (Shift+ Page Up) *(Nuendo only, not Cubase)*

Edit routing parameters with the **Encoder Knobs** on their respective channels. **Channel** up/down to select direct routing slots 1 to 8. Activate a direct routing slot by turning the corresponding **Encoder Knob**. Enable **Summing Mode** on parameter page 09/09 (reached with the Channel down button)

<<<<<Utilities>>>>>

Project Utilities:

Left= XYZXYZXYZ
Right= XYZXYZXYZ
Shift+ Left= XYZXYZXYZ
Shift+ Right= XYZXYZXYZ

Undo = Cubase **Undo** function
Redo= Cubase **Redo** function
Shift+ Undo = Open Undo History

Save = Save Cubase project
Shift+ Save = Save As: Save project with a new name
Revert= ?????

Marker:

XYZXYZXYZ

Add = XYZXYZXYZ
Prev= XYZXYZXYZ
Next = XYZXYZXYZ
Shift + Add = XYZXYZXYZ
Shift + Prev = XYZXYZXYZ
Shift + Next = XYZXYZXYZ

Punch:

Punch is recording which overwrites existing audio or MIDI within a set punch area. **Tap Punch to XYZXYZXYZXYZXYZXYZ**. This is a key workflow tool because of the time saved by combining channeling and major edits. Without punch, subsequent takes must be individually edited into the final channels. Using **Punch** keeps a production moving forward, which boosts creativity and productivity.

Function Buttons:

The Function buttons, labeled **F1** through **F8**, are to be assigned custom user commands in Cubase -> Device Setup.

Recommended custom user commands:

F1 = Click On/Off
F2 = MagicA
F3 = MagicA
F4 = MagicA
F5 = MagicA
F6 = MagicA
F7 = MagicA
F8 = MagicA

Shift + F1 = MagicA
Shift + F2 = MagicA
Shift + F3 = MagicA
Shift + F4 = MagicA
Shift + F5 = MagicA
Shift + F6 = MagicA
Shift + F7 = MagicA
Shift + F8 = MagicA

Channel Visibility Modes: *(default Platform B+ only)*

Shift + Visibility Modes 1 to 8 view fixed preset channel types. Buttons 1 to 8 alone recall custom channel visibility configurations previously setup in the [MixConsole](#).

Visibility Modes:

Shift + 1 = All Channels
Shift + 2 = Audio Channels
Shift + 3 = Groups
Shift + 4 = FX Channels
Shift + 5 = Instrument Channels
Shift + 6 = MIDI Channels
Shift + 7 = I/O Busses
Shift + 8 = All Channels

Example user visibility modes:

1 = Project channels 1-8
2 = Project channels 9-16
3 = Project channels 17-24
4 = Project channels 25-32
5 = Project channels 33-40
6 = Project channels 41-48
7 = Project channels 49-56
8 = Project channels 57-64

External Controls:

On the units QCon Pro X, QCon Pro G2, and QCon Pro, connect a standard momentary foot switch to User A or User B, and then power on the Icon control surface.

User A = Toggle Play/Stop

<<<<<<<<< Troubleshooting >>>>>>>>

Strange behavior in the DAW, unexpected functions, device not recognized, or freezes:

Disconnect all MIDI-USB devices. In Cubase, delete all control surface configurations (including other MIDI devices) in Controller Assignments and Control Surface Setup and then close Cubase. For testing, connect directly to the computer without a USB hub or USB extension cable. Turn on the Icon control surface and select the MCP Cubase mode.

OSX – Go to Audio-MIDI-Setup, open MIDI Studio, and delete unused configurations and Icon devices. Restart the Icon control surface to automatically reconfigure.

Windows – Open the Device Manager in Windows, select the Icon Control Surface, and delete the device. Now restart the control surface to automatically reconfigure. If there remain issues related to the USB connection, a Windows update can repair some issues.

Windows – If the device does not appear in the Windows Control Panel, you may need to uninstall MIDI devices - you will need a third party utility application to do this easily. Windows has limits on MIDI devices successfully installed in total, and MIDI devices remain installed when disconnected.

Finally, start Cubase and configure the control surface in Devices -> Device Setup. Press “+” and select Mackie Control. Select your device for both Output and Input Port, displayed under “Device: Mackie Control”

Faders are not motorized:

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

Faders make noise or move improperly:

A fader calibration is needed. Please read the section on [Fader Calibration](#) below for details.

I want to control and automate certain parameters:

Access parameters via the [Assignment Modes](#) and use [Automation Modes](#) to begin creating live automation. Press [Flip](#) to control these parameters with the faders. Use [MIDI Learn](#) to additionally assign parameters or key commands to controls.

I want to change the behavior of a function:

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

I want to see custom values on the display:

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Cubase updates.

I want to add a custom function:

To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In Cubase, it is possible to assign **Key Commands** (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

I want to rescale the faders:

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

I want to change the Jog Wheel resolution:

The behavior of the **Jog Wheel** is preset in the DAW implementation of MCP. There is variance between different DAWs. **There may be some adjustment for this, at least by changing grid settings.** Pressing **Scrub** enables fine movement with the **Jog Wheel**.

<<<<<<<<<< Firmware Update >>>>>>>>>>

To accommodate future changes to MCP implementation in new DAW versions plus expand on operational features, Icon provides Firmware updates for current production and legacy control surfaces.

Caution:

Please take extra care to follow the correct procedure when performing a firmware update. When performing a firmware upgrade, always connect directly to the computer without a USB Hub or extension, and only connect one device to the computer during update. Also quit all other software which can access MIDI input/output such as your DAW or utility programs.

Verify the power source is well connected to the control surface. You can check by starting the controller with no USB cable connected. If the device startup proceeds normally, external power appears to be ok.

To Update:

OSX – Install and open the device-specific iMap, use “Connect” to select your device, click Update and follow the directions on screen. (For an XS or EX unit, first switch iMap mode by clicking the QCon icon in iMap)

Windows / Legacy – Install and open the device-specific iMap, use “MIDI Devices” to select your device, click Update. Newer iMap releases automatically download the correct firmware online.

!After Firmware Update, reinstall the device in your DAW by deleting the previous device configuration and repeating the MCP device setup.

!Never attempt to “downgrade” firmware of an Icon control surface.

! Only use the iMap and Firmware versions specific for your hardware version. Also be sure to get the newest iMap on the Icon Pro Audio website.

! Never unpack a .bin firmware file

You can extensively control Logic Pro X with an Icon QCon series control surface or Icon Platform modular control system using standard Mackie Control protocol. Expansion bank units can be added for more hands-on controls: QCon expansion units for the QCon series and the Platform X+ channel bank expansion. Platform B+ button module is necessary to access all functions in this manual with Platform M+, and the D2 display highly recommended. Icon Metal Fader Caps and Icon Metal Knob Caps are available as an aesthetic and haptic upgrade for the best control experience.

The term Mackie Control is used to refer to the control protocol standard to be used with the QCon and Platform series control surfaces, and is abbreviated as MCP. Logic and its terminology belongs to Apple and has no affiliation with Icon Pro Audio

<<<< Table of Contents >>>>

- Setup -
- Getting Started -
- Mix and Transport -
- Group -
- View -
- Encoder Knob Assignment -
- Automation -
- Advanced Encoder Assignment Modes -
- User Assignments -
- Advanced Utilities -
- Advanced Configuration -
- Masterclass -
- Troubleshooting -
- Firmware Update -
- Fader Calibration -
- MCP MIDI Implementation Table -
- Device Diagnostic -

<<<<<<Color Reference Key>>>>>>

Control Surface Function

Control Surface Button

DAW Term

ButtonA + ButtonB =hold Button A and press Button B

Button A - Button B = press Button A and then press Button B

<<<<<<<<< Setup>>>>>>>>>

Before you can use your control surface, you will first need to configure it in Logic Pro X. Once setup, Logic Pro X will remember your settings for future sessions without the need to reconfigure. For maximum stability, first boot the control surface and select the **DAW Mode**, then start your DAW software.

When the control surface is switched on, it will first prompt for a **DAW Mode** selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected **DAW Mode**. If no buttons are pressed, the control surface will select the previously used mode after a few seconds.

In the latest device Firmware version (may require Firmware update):

1: MCP General **2: Logic Pro** 3: Pro Tools HUI 4: User Defined

In Logic Pro X, advanced configuration needs to be enabled. Open Logic Pro X -> Preferences -> General -> Advanced, select Show Advanced Tools, and verify that all additional options are checked. (Audio, Surround, MIDI, Score, Control Surface, Advanced Edit)

To configure your Icon control surface, go to Logic Pro X -> Control Surfaces -> Setup. Delete previous Mackie Control configurations, then go to New -> Install, select Mackie Control, and click Add. Finally choose your device name for both the Output Port and Input Port, displayed under "Device: Mackie Control".

Repeat this process for any expansion modules, then click and drag the console graphics left/right to match the physical configuration of your control surface fader banks. You can now use your Icon control surface for transport, mix, and extended control functions. Next up: An overview of the fundamental elements for controlling Logic Pro X.

Rec (transport) = Begin recording Audio and MIDI input

FastForward= Shuttle forward. Press again to increase forward speed

Rewind =Shuttle reverse. Press again to increase backward speed

Stop - Stop = Playhead jumps to beat 1 bar 1 or active cycle position

Play - Play = Playhead jumps back to the nearest bar or active cycle position

Shift +Play = Pause playback

Channel Strip Buttons:

Rec(channel) = Arms the channel strip for recording

Solo = Engage **Solo** for one or multiple tracks

Mute = Engage **Mute** for one or multiple tracks

Select = Focuses and selects the track, displays the full track name on the LCD display

Shift + Select = Set the channel volume fader to 0 dB

Option + Select =Add **Slave Track**: Extra track with shared channel strip – for tracking/editing

Shift + Option + Select = Create new track (Uses track type of selected track)

Option + Rec (channel strip) = Arm/disarm all channel strips

Option + Solo (channel strip) =Toggle **Solo Scene** for all channel strips:

(Press once to disable Solo, press again to restore all previously soloed tracks)

Option + Mute = Disable **Mute** for all channel strips

Cycle:

The **Cycle** button toggles the playback loop cycle on/off. Hold **Cycle** and turn the **Jog Wheel** to quickly define the cycle area. Hold **Cycle** and turn the **Jog Wheel** backwards to define a skip area.0

Cycle+ Rewind = Set cycle start to the playhead position

Cycle+ FastForward= Set cycle end to the playhead position

Press **Shift+Cycle** to display the cycle edit menu. The **Encoder Knobs** adjust the cycle area:

Press Encoder Knob 2 = Set cycle area to selected regions in **Arrange Window**

Turn Encoder Knob 3 = Move the cycle area by bar

Press Encoder Knob 5 = Set cycle start to the playhead position

Turn Encoder Knob 5 = Move cycle start in bars

Turn Encoder Knob 6 = Move cycle start in beats

Press Encoder Knob 7 = Set cycle end to the playhead position

Turn Encoder Knob 7 = Move cycle end in bars

Turn Encoder Knob 8 = Move cycle end in beats

Fader Lock:

Press **Lock Mix** to disable touch sensitive changes to fader position. Automation remains active. This is useful to secure a finished mix.

Press **Control + Flip** to set all faders to zero and disable all motor fader movement. This is useful to silence the control surface. (*Platform B+ only*)

playback.

Trim Automation:

Trim = Toggle **Trim** behavior on a channel armed with **Touch** or **Latch** automation. When active, **Trim** allows automation to be modified instead of overwritten. Adjusting knobs and faders during playback will make a change relative to existing automation.

Touch + Trim = **T-Touch**: Adjust automation momentarily while parameters are being edited

Latch + Trim = **T-Latch**: Adjust automation continuously by changing a parameter

<<<<<<<<<< **Advanced Encoder Assignment Modes** >>>>>>>>>>

Every Assignment Mode has multiple modes of control. These are specialized control modes advantageous for specific tasks and project styles.

<<<<<<<<<< **Track** >>>>>>>>>>

Track Assignment Shortcuts:

Hold **Track** to display the shortcut menu. Here you can select which parameter will appear on the LCD display and can be edited by the **Encoder Knobs** in **Track Assignment Mode**.

Encoder Knob 1 or **F1** = Volume

Encoder Knob 2 or **F2** = Pan

Encoder Knob 3 or **F3** = Input format (Mono, Stereo, L/R, Surround)

Encoder Knob 4 or **F4** = Input assignment

Encoder Knob 5 or **F5** = Output assignment

Encoder Knob 6 or **F6** = Automation mode

Encoder Knob 7 or **F7** = Custom (Select a channel automation parameter in Logic Pro X)

Encoder Knob 8 or **F8** = Activates **Setup Focus Mode**

Track + Group = Group Assignment

Track Focus Mode: (**Track** - **Track**)

Press **Track** twice. This allows you to edit multiple channel strip parameters for the selected channel. Parameters appear across the LCD display and each **Encoder Knob** is set to a different function. Press a channel **Select** button to choose that track to edit.

Encoder Knob 1 = Volume

Encoder Knob 2 = Pan

Encoder Knob 3 = Software Instrument

Encoder Knob 4 = Edit Plug-In on slot 1. Press **Shift** + Mute 4 to toggle bypass.

Encoder Knob 5 = Edit Plug-In on slot 2. Press **Shift** + Mute 5 to toggle bypass.

Encoder Knob 6 = Level of Send 1. Press **Shift** + Mute 6 to toggle bypass.

Encoder Knob 7 = Level of Send 2. Press **Shift** + Mute 7 to toggle bypass.

Encoder Knob 8 = Level of Send 1. Press **Shift** + Mute 8 to toggle bypass.

Setup Focus Mode:(Track+F8)

Encoder Knob 1 = Channel strip format (Mono, Stereo, L/R, Surround)

Encoder Knob 2 = Spread parameter (Surround channels only)

Encoder Knob 3 = Channel strip input assignment

Encoder Knob 4 = Channel strip output assignment

Encoder Knob 5 = Automation mode

Encoder Knob 6 = Quick-edit group membership. ChooseGroup1 to 32 or Off

<<<<<<<<< Pan >>>>>>>>>

Pan Assignment Shortcuts:

Hold **Pan** to display the shortcut menu. Here you can select which parameter will appear on the LCD display and can be edited by the **Encoder Knobs** in **Pan Assignment Mode**.

Encoder Knob 1 or **F1** = Angle

Encoder Knob 2 or **F2** = Diversity

Encoder Knob 3 or **F3** = LFE Level

Encoder Knob 4 or **F4** = Spread

Encoder Knob 5 or **F5** = -

Encoder Knob 6 or **F6** = Activates **Surround Focus Mode**

Encoder Knob 7 or **F7** = Activates **Angle/Diversity Mixer Mode**

Encoder Knob 8 or **F8** = Activates **X/Y Mixer Mode**

Surround Focus Mode: (Pan - Pan)

Press **Pan** twice to enter **Surround Focus Mode**, and edit multiple surround parameters for the selected channel. Each **Encoder Knob** is set to a different function. Stereo channels are always assigned the parameter **Pan**.

Encoder Knob 1 = Angle

Encoder Knob 2 = Diversity

Encoder Knob 3 = LFE Level

Encoder Knob 4 = Spread

Encoder Knob 5 = Surround X

Encoder Knob 6 = Surround Y

Angle/Diversity Mixer Mode:(Pan + F7)

Create dramatic polar-style surround panning for many tracks at once. This style of surround control is best for creating deep immersive surround and automating smooth circular movements. Turning an **Encoder Knob** changes the surround angle, and the **Faders** edit surround diversity.

Angle and Diversity work together to set the virtual position of a sound. Angle is the position of the sound source relative to the listener in 360 degrees. Diversity is like the distance of the source from the listener, where lower values are farther away.

X/Y Mixer Mode:(Pan + F8)

Create dramatic grid-style surround for many tracks at once. This style of surround control is best for placing sounds on a virtual stage, or for automating sound objects that will move on mostly linear paths relative to the listener. Turning an **Encoder Knob** changes the surround X value, and the **Faders** edit surround Y.

The X/Y parameters are like the coordinates of a sound source relative to the listener, where 0, 0 is centered and coordinates can be set between +/-1000 on the grid.

<<<<<<EQ>>>>>>

EQ Assignment Mode:(EQ)

Press **EQ** to open (or add) the **Logic Channel EQ**. **EQ Assignment Mode** can only edit a standard **Logic Channel EQ** or **Logic Linear Phase EQ**. Press **Shift+Mute** to toggle EQ band bypass. Press **F1p** to control EQ with the faders and toggle band bypass with **Mute**.

EQ Assignment Shortcuts:

Hold **EQ** to display the shortcut menu. Here you can select which parameter will appear on the LCD display and can be edited by the **Encoder Knobs** in **EQ Assignment Mode**.

Encoder Knob 1 or **F1** = Frequency

Encoder Knob 2 or **F2** = Gain

Encoder Knob 3 or **F3** = Q-Factor

Encoder Knob 4 or **F4** = Band Bypass

Encoder Knob 5 or **F5** = --

Encoder Knob 6 or **F6** = Activates **EQ Focus Mode**

Encoder Knob 7 or **F7** = Activates **Freq/Gain Mixer Mode**

Encoder Knob 8 or **F8** = Activates **Freq/Gain Channel Mode**

EQ Focus Mode:(EQ- EQ)

Press **EQ** a second time to open the **Logic Channel EQ** and edit multiple EQ parameters for the selected channel. The left/right **Cursor Arrows** browse pages of EQ bands.

Encoder Knob 1 = Band 1 Frequency

Encoder Knob 2 = Band 1 Gain

Encoder Knob 3 = Band 1 Q-Factor

Encoder Knob 4 = Band 1 Bypass

Encoder Knob 5 = Band 2 Frequency

Encoder Knob 6 = Band 2 Gain

Encoder Knob 7 = Band 2 Q-Factor

Encoder Knob 8 = Band 2 Bypass

Freq/Gain Mixer Mode:(EQ+ F7)

This is the place to efficiently manage frequency separation between instruments for a mixdown. After the rough mix, use this mode to quickly assign tracks appropriate real estate on the sonic stage. The LCD display shows channel strip names and frequency of the selected EQ band. The **Encoder Knobs** change the EQ frequency, and the faders adjust EQ Gain. **Mute** toggles bypass of the selected EQ band. **Cursor Arrows** up/down select the EQ band.

Freq/Gain Focus Mode:(EQ+ F8)

Edit frequency and gain for all 8 EQ bands on the selected channel strip. This offers very quick access to powerfully adjust the frequency content of a track, optimal for rough mix. Turning an **Encoder Knob** changes the EQ frequency, and the faders adjust EQ Gain. Each channel **Mute** toggles bypass of its EQ band. Press channel **Select** to edit the EQ on that track.

<<<<<Send>>>>>

Send Assignment Mode:(Send)

Use the **Send Assignment Mode** to set send destinations and adjust send amounts for the selected channel. **Cursor Arrows** up/down change the selected send slot number. **Cursor Arrows** left/right select a parameter. Press **Shift+Mute** to toggle send bypass. Press **Flip** to control the selected parameters on the faders, and while Flip is engaged, press **Mute** to toggle send bypass. Press **Solo** (channel) to toggle send Pre/Post.

Send Focus Mode:(Send- Send)

Press **Send** twice to enter **Send Focus Mode**, and edit multiple parameters for the selected channel. Each **Encoder Knob** is set to a different function. The left/right **Cursor Arrows** browse pages of send slots. The first page displays send slot 1 & 2, page 2 displays send slot 3 & 4, and so on.

Send 1:

Encoder Knob 1 = Select send destination
Encoder Knob 2 = Adjust send amount
Encoder Knob 3 = Set send pre/post fader
Encoder Knob 4 = Toggle send bypass

Send 2:

Encoder Knob 5 = Select send destination
Encoder Knob 6 = Adjust send amount
Encoder Knob 7 = Set send pre/post fader
Encoder Knob 8 = Toggle send bypass

Send Assignment Shortcuts:

Hold **Send** to display the shortcut menu. Here you can select which parameter will appear on the LCD display and can be edited by the **Encoder Knobs** in **Send Assignment Mode**.

Encoder Knob 1 or **F1** = Send destination
Encoder Knob 2 or **F2** = Send amount
Encoder Knob 3 or **F3** = Send pre/post fader
Encoder Knob 4 or **F4** = Toggle sendbypass
Encoder Knob 5 or **F5** = Activates **Send Focus Mode**
Encoder Knob 6 or **F6** = Activates **Multiple SendFocus Mode**
Encoder Knob 7 or **F7** = Activates **Destination/Level Mixer Mode**
Encoder Knob 8 or **F8** = Activates **Destination/Level Focus Mode**

Multiple Send Focus Mode:(Send+ F6)

This mode is for integrating complex bus routing during the rough mix or production, adjusting both volume balance and complex sends at once.

Encoder Knobs 1 to 8 edit the selected send parameter for sends 1 to 8 on the selected track. The left/right **Cursor Arrows** change the selected parameter:

Send Destination, Send Level, Pre/Post, Bypass

In an analog/digital hybrid setup making use of I/O Utility on busses, manage signals to outboard gear without touching manual routing. Once prepared, turn a knob on the control surface to send a track through your outboard gear. The template tracks using hardware would be set to no output, only reaching output through bus sends. This requires rendering the final mix through the hardware: Logic Pro X -> Bounce -> Mode:select"Realtime"

Example: Tracks have no output and have sends ready with Bus 10 – 12 assigned.

Bus 10 = Dry output to digital sum

Bus 11 = I/O plugin (with latency offset) to hardware 1, DAW output 1-2

Bus 12 = I/O plugin (with latency offset) to hardware 2, DAW output 1-2

Destination/Level Mixer Mode:(Send+ F7)

Use this mode to mix send amount and select busses for multiple tracks. With prepared effect busses, this is the place to create an entire effects mix for mixdown.

The **Encoder Knobs** select a send destination, and the faders adjust the send amount. **Mute** toggles send bypass, and **Solo** toggles pre/post. **Cursor Arrows** up/down select the send slot.

Destination/Level Focus Mode:(Send+ F8)

Use this mode to mix the bus effects balance for single complex tracks. This is the optimal tool for making a deep effects mix on prominent tracks such as main vocals and lead sounds. With this mode plus automation, you can use the faders to paint with an artistic pallet of 8 effects to create color, size, dynamics, and complexity. Edit send destination and send level for 8 send slots on the selected channel strip. The **Encoder Knobs** select a send destination, and the faders adjust the send amount. Each channel **Mute** toggles send bypass. Press channel **Solo** to toggle pre/post.

<<<<Plug-In>>>>

Plug-In Assignment Mode:(Plug-In)

Press **Plug-In** to open and edit plug-ins on any track. To quickly edit an existing plug-in, press the **Encoder Knob** to the corresponding plug-in name visible on the LCD display. Plug-In parameters appear on the LCD display and are assigned across the **Encoder Knobs**. Press **Cursor Arrows** left/right to view and edit further pages of parameters. Press **Plug-In** to exit. Press **Shift + Mute** to bypass the plug-in. Turn an **Encoder Knob** to select a plug-in and press to confirm and edit. The up/down **Cursor Arrows** change the selected slot number.

Plug-In Focus Mode: (Plug-In -Plug-In)

Press **Plug-In** again to view and edit plug-ins in the first 8 slots of the selected track. Press **Shift + Mute** to bypass a plug-in. Turn and press an **Encoder Knob** to select a plug-in for the corresponding slot number. Adjust parameters with the knobs and use the left/right **Cursor Arrows** to view and edit further pages of parameters.

<<<<Instrument>>>>

Instrument Assignment Mode:

Press **Instrument** to open and edit instrument plug-ins on MIDI software instrument tracks. Turn and press an **Encoder Knob** to select an instrument. Parameters appear across the LCD display and can be edited with the **Encoder Knobs**. Use the left/right **Cursor Arrows** to view and edit further pages of parameters. Press **Plug-In** to exit. Press **Shift + Mute** to bypass the plug-in.

<<<<User Assignments>>>>

MIDI Learn is to be used on the **Encoder Knobs** while **User Assignments** are activated. After parameter assignment, press **Flip** to adjust and automate with the motor faders. Any automatable parameter can be mapped to the control surface using **MIDI Learn** in Logic Pro X. Five individual **User Assignment** setups can be used for unique sets of **MIDI Learn** assignments.

Shift + Track = User Assignments 1

Shift + Pan = User Assignments 2

Shift + EQ = User Assignments 3

Shift + Send = User Assignments 4

Shift + Plug-in = User Assignments 5

Shift + Instrument = **Smart Controls**

To create an assignment in one of the User Modes, use **MIDI Learn** in Logic Pro X to map parameters to the Encoder Knobs:

1. Enter a **User Assignment** mode –the LCD display is blank
2. Move the parameter you want to assign with the mouse in Logic Pro X
3. Press the keyboard shortcut “Command + L”, the **Controller Assignments Window** appears.
4. Turn the **Encoder Knob** to assign.
5. Move the next parameter with the mouse in Logic Pro X.
6. Turn the next **Encoder Knob** to assign.
7. Click the Learn button in the **Controller Assignments Window** to finish. Now the **User Assignment** can be used and recalled later.

Parameter names and values set with **MIDI Learn** in **User Assignments** appear on the LCD display. Press **Flip** to access these custom parameters on the faders. This way the motor faders will also follow automation.

<<<<Advanced Utilities>>>>

The Utilities buttons access additional workflow operations, and many button combinations access extended functionality and options.

Click:

Click = Activate/deactivate metronome click (separate for playback and record)

Shift + Click = Activate/deactivate external sync and the transmission of MMC

(MMC is for controlling compatible tape machines from the DAW)

The metronome click is a tempo reference for production and recording.

There are options and settings in Logic Pro X for the click:

File ->Project Settings -> Metronome

Solo:

Solo (transport) = Activate Solo Regions: selected regions in the Arrange Window are solo

Shift + Solo = SetSolo Lock: selected regions solo, regardless of subsequent selections

Solo Regions is a useful evaluation tool for production, plus aids in audio editing. This allows efficient techniques exclusive to a digital setup. Use the Solo (channel) buttons to solo by track in the more traditional method.

Marker:

UseMarker to manage markers in the Arrange Window. Press Marker +Nudge to create a marker at the playhead. Use Rewind or FastForwardto move the playhead and the cycle to the previous/next existing marker.

Press Shift + Marker to displaythe marker menu, or just hold Marker. The Encoder Knobs have the following commands:

Encoder Knob 1 = Jump to marker 1

Encoder Knob 2 = Jump to marker 2

Encoder Knob 3 = Jump to marker 3

Encoder Knob 4 = Jump to marker 4

Encoder Knob 5 = Jump to marker 5

Encoder Knob 6 = Create marker at the playhead

Encoder Knob 7 = Create marker at the nearest bar

Encoder Knob 8 = Deletes marker at the playhead

Markershortcuts:

Marker+ F1 = Jump to marker 1

Marker+ F2 = Jump to marker 2

Marker+ F3 = Jump to marker 3

Marker+ F4 = Jump to marker 4

Marker+ F5 = Jump to marker 5

Marker+ F6= Jump to marker 6

Marker+ F7= Jump to marker 7

Marker+ F8= Jump to marker 8

Nudge:

Press Nudge to move audio or MIDI regions and events. With nudgeactive, the left/right Cursor Arrowsselect regions. Press Rewind or FastForwardto nudge the selected region. Use nudge to adjust timing, or select multiple regions and organize the arrangement.

Press **Shift +Nudge** to display the nudge menu, or just hold **Nudge**. Each **Encoder Knob** has a different nudge command for the selected region:

Encoder Knob 1 = Set nudge amount for **Rewind** and **FastForward**

Encoder Knob 2 = Move to the playhead

Encoder Knob 3 = Move by bar

Encoder Knob 4 = Move by beat

Encoder Knob 5 = Move by divisions

Encoder Knob 6 = Move by ticks

Encoder Knob 7 = Move by 1 frame

Encoder Knob 8 = Move by ½ frame

Nudge settings for **Rewind** and **FastForward**:

Nudge + F1 = Ticks

Nudge + F2 = Divisions

Nudge + F3 = Beats

Nudge + F4 = Bars

Nudge + F5 = Frames

Nudge + F6 = Half Frames

Drop – Autopunch:

Drop toggles **Autopunch**. Autopunch is recording which overwrites existing audio or MIDI within a set punch area. This is a key workflow tool because of the time saved by combining tracking and major edits. Without Autopunch, subsequent takes must be individually edited into the final tracks. Using **Drop** keeps a production moving forward, which boosts creativity and productivity.

Hold **Drop** and turn the **Jog Wheel** to quickly define the punch area.

Drop + Rewind = Set punch-in location to the playhead position

Drop + FastForward = Set punch-out location to the playhead position

Press **Shift+Drop** to display the punch edit menu. The **Encoder Knobs** adjust the punch area:

Turn Encoder Knob 3 = Move the selected punch area by bar

Press Encoder Knob 5 = Set punch-in locator to the playhead position

Turn Encoder Knob 5 = Move punch-in locator in bars

Turn Encoder Knob 6 = Move punch-in locator in beats

Press Encoder Knob 7 = Set punch-out locator to the playhead position

Turn Encoder Knob 7 = Move punch-out locator in bars

Turn Encoder Knob 8 = Move punch-out locator in beats

Replace:

Press **Replace** to enable overwriting recordings, like recording on tape. **Replace** is not destructive, but it does inspire productivity through simplicity and maintain a clean project **Arrange Window**.

When **Replace** is disabled, recording over existing regions creates a take folder. If enabled, new overlapping audio recordings cut existing regions.

Settings for Replace are in Logic Pro X -> Preferences -> Recording -> Replace:
Region Erase = Cut MIDI and audio regions when recording
Region Punch = Cut MIDI and audio regions when recording with input
Content Erase = Overwrites MIDI and audio inside regions when recording
Content Punch = Overwrites MIDI and audio inside regions when recording with input

Region Operations:

Use **Cmd + Function** buttons to manage audio and MIDI regions in the **Arrange Window**.

Cmd + F1 = Cut

Cmd + F2 = Copy

Cmd + F3 = Paste

Cmd + F4 = Clear

Cmd + F5 = Select All

Cmd + F6 = Select All Following

Cmd + F7 = Select Similar Regions/Events

Cmd + F8 = Select Inside Locators

Settings Mode: (Cmd + Name/Value)

Encoder Knob 5 = Toggle track number on the main LCD display = **Option + Name/Value**

Encoder Knob 6 = Engages **Channel Focus Lock**: in **Focus Modes**, the selected track remains on the encoder knobs even after subsequent channel selections.

Encoder Knob 7 = Toggle the main LCD display style = **Name/Value**

Encoder Knob 8 = Toggle the digital time display = **SMPTE/Beats**

Additional Functions: (default QCon Pro X, Platform B+ only)

Save = Save Logic Pro X project

Option + Save = Save As: Save project with a new name

Cancel = Cancel preselection, Close track folder

Enter = Execute, OK, Open selected track folder

Undo = Logic Pro X **Undo** function

Shift + Undo = Redo

Option + Undo = Open Undo History

External Controls:

On the units QCon Pro X, QCon Pro G2, and QCon Pro, connect a standard momentary foot switch to User A or User B, and then power on the Icon control surface.

User A = Toggle Play/Stop

User B = Record

<<<<<<<<< **Advanced Configuration** >>>>>>>>

After successful control surface setup with your Icon control surface and expansion banks, go to Logic Pro X ->Control Surfaces -> Setup for manual configuration.

Touch Fader to Select Track:

Check “activate touch faders activates track” to enable instant track selection when touching a fader. By default this feature is off, and the **Select** buttons are used to select a channel.

Fader Touch Sensitivity:

In the setup window under “Mackie Control” is a setting for fader touch sensitivity. 0 makes the faders slightly less responsive and 5 is the maximum sensitivity.

Control Surface Group Parameters:

These settings impact all fader banks. This is the recommended default setup:

Flip Mode: Off (*“Mute” disables motor faders. Press Flip to restore*)

Display Mode: Value

Clock Display: SMPTE

Channel Strip View Mode: Arrange

Fader Bank for Tracks View: 0

Fader Bank for All View: 0

Channel Strip Parameter: Automation

Surround Parameter: Angle

EQ Band: 3

EQ Parameter: Gain

All EQs Parameter Page: 0

Send Slot: 1

Send Parameter: Destination

All Sends Parameter Page: 0

Split: no. of upper parameters: 0

Instrument Parameter Page: 0

Inst Param Page (Split Lower): 0

Insert Type: Audio (*“MIDI” changes Plug-In Assignment to instead access MIDI FX*)

Insert Slot: 1

Insert Type (Split Lower): Audio

Plug-in Parameter Page: 0

Channel Strip Track: 262145

Channel Strip Track (Split Lower): 262145

Track Lock: (No)

Track Name Format: Name

Parameter Page Shift Mode: By Page (“By Parameter” changes Cursor Arrows menu style)

Relative Change Mode: Coarse (“Full”, “Fine” changes Encoder Knobs edit style)

Mix Group: 1

Group Parameter Page: 0

Strange behavior in the DAW, unexpected functions, device not recognized, or freezes:

Disconnect all MIDI-USB devices. In Logic, delete all control surface configurations and zones (including other MIDI devices) in Controller Assignments and Control Surface Setup and then close Logic. For testing, connect directly to the computer without a USB hub or USB extension cable. Turn on the Icon control surface and select the MCP Logic Pro X mode.

OSX – Go to Audio-MIDI-Setup, open MIDI Studio, and delete unused configurations and all Icon devices. Restart the Icon control surface to automatically reconfigure.

Finally, start Logic Pro X and configure the control surface in Control Surfaces -> Setup. Go to New -> Install – select Mackie Control – click Add. Select your device for both Output and Input Port, displayed under “Device: Mackie Control”

Faders are not motorized:

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

Faders make noise or move improperly:

A fader calibration is needed. Please read the section on [Fader Calibration](#) below for details.

I want to control and automate certain parameters:

Use the [User Assignments](#) 1-5 and [MIDI Learn](#) to assign parameters to controls. Press [Shift + Track](#) to activate [User Assignment 1](#), and use [MIDI Learn](#) in Logic Pro X to map parameters to the [Encoder Knobs](#). Now, press [Flip](#) to control these parameters with the faders.

Scrub plays no Audio:

In Logic Pro X, by default scrub does not play audio. To enable audio scrub go to Preferences -> Audio -> Editing, and select “Scrubbing with audio...”

I want to change the behavior of a function:

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

I want to see custom values on the display:

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Logic Pro X updates.

Control Surface Functionality Manual

Pro Tools HUI

QCon Pro X, QCon Pro XS, QCon Pro G2, QCon EX G2 Platform M+, Platform B+, Platform D2, Platform X+, Platform Nano

Revision v1.00

This is a master manual. Specific device manuals can be built from this material.

Congratulations on owning an Icon control surface! This manual documents the full range of potential functions when the device is installed in Pro Tools.

You can extensively control Pro Tools with an Icon QCon series control surface or Icon Platform modular control system using standard Mackie Control protocol. Expansion bank units can be added for more hands-on controls: QCon expansion units for the QCon series and the Platform X+ channel bank expansion. Platform B+ button module is necessary to access all functions in this manual with Platform M+, and the D2 display highly recommended. Icon Metal Fader Caps and Icon Metal Knob Caps are available as an aesthetic and haptic upgrade for the best control experience.

The terms Mackie Control and HUI are used to refer to the control protocol standard to be used with the QCon and Platform series control surfaces. Pro Tools and all DAW-specific terminology belong to their copyright holders and has no affiliation with Icon Pro Audio.

<<<< Table of Contents >>>>

Setup	-
Getting Started	-
Mix and Transport	-
View	-
Encoder Knob Assignment	-
Utilities	-
User Functions	-
Troubleshooting	-
Firmware Update	-
Fader Calibration	-
MIDI Implementation Table	-
Renamed Buttons	-

<<<<<<Color Reference Key>>>>>>

Control Surface Function

Control Surface Button

DAW Term

ButtonA + ButtonB =hold Button A and press Button B

Button A - Button B = press Button A and then press Button B

<<<<<<<<< Setup>>>>>>>>>

Before you can use your control surface, you will first need to configure it in Pro Tools. Once setup, Pro Tools will remember your settings for future sessions without the need to reconfigure. For maximum stability, first boot the control surface and select the **DAW Mode**, then start your DAW software.

When your control surface is switched on, it will first prompt for a **DAW Mode** selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected **DAW Mode**. If no buttons are pressed, the control surface will select the previously used mode after a few seconds.

In the latest device Firmware version (may require Firmware update):

1: MCP General 2: Logic Pro **3: Pro Tools HUI** 4: User Defined

In Pro Tools, go to Setup ->Peripherals ->MIDI Controllers. In row #1, select Type:HUI, and choose your device name for both Receive From and Send To, and select # Ch's: 8.

In addition, go to Setup -> MIDI, Input Devices. Set a check mark next to the Icon control surface and click OK.

<<<<<<<<< Getting Started >>>>>>>>>

When first opening a blank project in Pro Tools, we are looking at the **Edit Window**. Add Tracks to your project here, and you will see the motor faders jump into position. Each Icon control surface has one physical bank consisting of 8 channel strip controls. Each channel strip corresponds to controls for one track in your DAW. The track name appears on the display above each channel strip. Touch a fader and adjust the track's volume. Change a track's volume in Pro Tools and the corresponding motor fader will adjust itself. You can balance the volume of multiple faders on the control surface simultaneously – already a huge mixing advantage of using a control surface. Press the **Bank up / down** buttons to scroll through further tracks in the project in fixed blocks of 8. The **Channel up / down** buttons step the focus of the current bank one track at a time.

Controllers.

Faders are not motorized:

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

Faders make noise or move improperly:

A fader calibration is needed. Please read the section on [Fader Calibration](#) below for details.

I want to control and automate certain parameters:

Access parameters via the [Assignment Modes](#) and use [Automation Modes](#) to begin creating live automation. Press [Flip](#) to control these parameters with the faders.

I want to change the behavior of a function:

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

I want to see custom values on the display:

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Pro Tools updates.

I want to add a custom function:

To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In some DAWs, it is possible to assign [Key Commands](#) (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

I want to rescale the faders:

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

I want to change the Jog Wheel resolution:

The behavior of the [Jog Wheel](#) is preset in the DAW implementation of MCP. There is variance between different DAWs. [There may be some adjustment for this, at least by changing grid settings](#). Pressing [Scrub](#) enables fine movement with the [Jog Wheel](#).

<<<<< Table of Contents >>>>>

Setup	-
Getting Started	-
Mix and Transport	-
Group	-
View	-
Encoder Knob Assignment	-
Utilities	-
UserFunctions	-
Troubleshooting	-
Firmware Update	-
Fader Calibration	-
MCP MIDI Implementation Table	-
Renamed Buttons	-

<<<<<Color Reference Key>>>>>

Control Surface Function

Control Surface Button

DAW Term

ButtonA + ButtonB =hold Button A and press Button B

Button A - Button B = press Button A and then press Button B

<<<<<<<< Setup>>>>>>>>>

Before you can use your control surface, you will first need to configure it in Ableton Live. Once setup,Ableton Live will remember your settings for future sessions without the need to

reconfigure. For maximum stability, first boot the control surface and select the DAW Mode, then start your DAW software.

When your control surface is switched on, it will first prompt for a **DAW Mode** selection. Select the corresponding mode with the illuminated navigation buttons and confirm selection with the highlighted DAW mode button. On Platform M+, the small channel indicator will light to show the currently selected **DAW Mode**. If no buttons are pressed, the control surface will select the previously used mode after a few seconds.

In the latest device Firmware version (may require Firmware update):

1: MCP General 2: Logic Pro 3: Pro Tools HUI 4: User Defined

In Ableton Live, advanced configuration needs to be enabled. Open Ableton Live -> Preferences -> General -> Advanced, select Show Advanced Tools, and verify that all additional options are checked. (Audio, Surround, MIDI, Score, Control Surface, Advanced Edit)

To configure your Icon control surface, go to Ableton Live -> Control Surfaces -> Setup. Delete previous Mackie Control configurations, then go to New -> Install, select Mackie Control, and click Add. Finally choose your device name for both the Output Port and Input Port, displayed under "Device: Mackie Control".

Repeat this process for any expansion modules but us Mackie Control XT. You can now use your Icon control surface for transport, mix, and extended control functions. Next up: An overview of the fundamental elements for controlling Ableton Live.

<<<<<<<<< **Getting Started** >>>>>>>>>

When first opening a blank project in Ableton Live, we are looking at the **Session View**. Add tracks to your project here, and you will see the motor faders jump into position. Each Icon control surface has one physical bank consisting of 8 channel strip controls. Each channel strip corresponds to controls for one track in your DAW. The track name appears on the display above each channel. Touch a fader and adjust the track's volume. Change a channel's volume in Ableton Live and the corresponding motor fader will adjust itself. You can balance the volume of multiple faders on the control surface simultaneously – already a huge mixing advantage of using a control surface. Press the **Bank** up / down buttons to scroll through further channels in the project in fixed blocks of 8. The **Channel** up / down buttons step the focus of the current bank one channel at a time.

The 9th fader on your control surface is the **Master Fader** and always commands the master level, which engages after the output stage of the project, so after any plugins used on the output sum. This is advantageous for several classic mixing techniques and effectively regulates your monitor volume.

The **Encoder Knobs** edit parameters according to the current **Assignment Mode**. Turn them

Follow = Activate Follow Mode to auto-scroll during playback in Arrangement View

Zoom & Cursor Arrows:

The **Cursor Arrows** (left, right, up, down) change selections or modify zoom in the **Arrangement View**. In **Assignment Modes** they change the **Encoder Knob** parameter selection and scroll through pages of parameters when editing plug-ins.

Press **Zoom** to activate zoom controls using the **Cursor Arrows**. Zoom controls only work in the **Arrangement View**. When the Zoom button is illuminated, press **Option + Cursor Arrows** to adjust individual track zoom.

(On Platform M+, Zoom is managed by toggling the Zoom buttons and turning the jog wheel.)

Show Return Tracks: (**Returns**)

Activate showing **Return Tracks** to display and control return tracks on the channel strips.

*(On QCon Pro G2: **Shift + F8**)*

<<<<< <<<< **Encoder Knob Assignment** >>>> >>>>>

Press one of the Assignment buttons to select the category of parameters currently assigned to the Encoder Knobs. Turn the Encoder Knobs to edit parameters, and press to toggle selection from a list. Pressing a knob when editing a parameter restores the default value. Use Previous / Next to browse pages of parameters.

Assignment Mode s:

I/O = Activates **Routing Assignment**, view and edit routing for each track. Press **I/O** to toggle viewing Input Type, Input Channel, Output Type, Output Channel

Send = Activates **Send Assignment**, adjust multiple send levels for the selected track

Pan = Activates **Pan Assignment**, edit stereo pan for each track

Rack = Activates **Rack Assignment**, create and adjust plug-in effects and instruments: Press **Rack** to display devices for the currently selected track. Use **Page** up/down to browse pages of devices and press an **Encoder Knobs** to select a device. Parameters appear across the LCD display over the **Encoder Knobs** to be edited.

Fader Flip :

Press **Flip** to access the current **Encoder Knob** parameters on the touch sensitive motor faders. Channel volume can then be adjusted using the **Encoder Knobs**. This is great for precise parameter adjustments and managing automation.

<<<<< <<<< **Utilities** >>>> >>>>>

Use **Marker** to create a locator at the play position. Press **Stop**, then **Marker** to delete a currently selected locator. Press **Next / Previous** to jump between set locators.

Press **Draw Mode** to create automation in **Arrangement View**. Use the **Faders** to automate volume and the **Encoder Knobs** to automate the parameters currently assigned to.

Undo = Ableton Live **Undo** function

Redo = Ableton Live **Redo** function

Shift + Session/Arrange = Set focus to **Arrangement View** or **Session View**

Shift + Track/Clip = Set focus to **Track View** or **Clip View**

Shift + Browser = Set focus to **Browser**

<<<<<<<<<< **User Functions** >>>>>>>>>>

The eight **Function** buttons, **F1** through **F8**, are to be assigned custom user commands using **MIDI map mode** in Ableton Live. MIDI mappings are saved in projects and your favorite setup should best be saved in your template project.

Recommended custom user commands:

F1 = Play all clips in Scene 1 (Master, **Session View**)

F2 = Play all clips in Scene 2

F3 = Play all clips in Scene 3

F4 = Play all clips in Scene 4

F5 = Play all clips in Scene 5

F6 = Play all clips in Scene 6

F7 = Play all clips in Scene 7

F8 = Play all clips in Scene 8

In Ableton Live, assigning MIDI mappings overrides control surface functions. This allows that in addition to the **Function** buttons, other buttons can be assigned useful functions as well. MIDI mappings are saved in projects and your favorite setup should best be saved in your template project.

Additional recommended user commands:

G2 and Pro X

(Name/Value) = Tap Tempo- Press repeatedly to set project BPM
(DAWmode1) = Punch In- start recording at the loop start position
(DAWmode2) = Punch Out - stop recording at the loop end position
(DAWmode3) = Capture- Create a clip from the last given MIDI input
(2ndBot-Left) = Metronome-(On/Off)

Additional for Pro X

(AssignmentRight) = MIDI Arrangement Overdub- Recording MIDI adds to existing clips
(MarkerFarRight1) = NEW - Opens new scene for all record armed tracks
(MarkerFarRight2) = Automation Arm - enables automation recording
Shift + F1 to F8 = User Functions F9 to F16(Verify in new firmware)

External Controls:

On the units QCon Pro X, QCon Pro G2, and QCon Pro, connect a standard momentary foot switch to User A or User B, and then power on the Icon control surface.

User A and User B = Can be assigned a function with MIDI Mapping

<<<<<<<<< Troubleshooting >>>>>>>>>

Strange behavior in the DAW, unexpected functions, device not recognized, or freezes:

Disconnect all MIDI-USB devices. In Logic, delete all control surface configurations and zones (including other MIDI devices) in Controller Assignments and Control Surface Setup and then close Logic. For testing, connect directly to the computer without a USB hub or USB extension cable. Turn on the Icon control surface and select the MCP Ableton Live mode.

First check that the specified USB cable is in good condition and well connected. For testing, connect directly to the computer without a USB hub or USB extension cable.

OSX – Go to Audio-MIDI-Setup, open MIDI Studio, and delete unused configurations and Icon devices. Restart the Icon control surface to automatically reconfigure.

Windows – Open the Device Manager in Windows, select the Icon Control Surface, and delete the device. Now restart the control surface to automatically reconfigure. If there remain issues related to the USB connection, a Windows update can repair some issues.

Windows – If the device does not appear in the Windows Control Panel, you may need to uninstall MIDI devices - you will need a third party utility application to do this easily. Windows has limits on MIDI devices successfully installed in total, and MIDI devices remain installed when disconnected.

Finally, start Ableton Live and configure the control surface in Control Surfaces -> Setup.

Go to New -> Install – select Mackie Control – click Add

Select your device for both Output and Input Port, displayed under “Device: Mackie Control”

Repeat the process for extensions, but instead select Mackie Control XT.

Faders are not motorized:

The power source is not connected. Verify the power source by disconnecting USB and turning the control surface on. If power is well connected, it will start up normally.

Faders make noise or move improperly:

A fader calibration is needed. Please read the section on [Fader Calibration](#) below for details.

I want to control and automate certain parameters:

Access parameters via the [Assignment Modes](#) and use [Automation Modes](#) to begin creating live automation. Press Flipto control these parameters with the faders. Additionally, use [MIDI Learn](#) to assign parameters to free user controls.

I want to change the behavior of a function:

Icon control surfaces with MCP offer deep and complex control options, just please remember that the control surface only sends/receives MIDI messages. The functionality happens in your DAW. The style and components of a function is fixed based on the DAW MCP implementation, and can't be changed unless specifically otherwise stated. The behavior is different in every DAW and can change with DAW version updates.

I want to see custom values on the display:

The messages and values on the display are generated from values sent by the DAW as return MIDI. Display readouts in return MIDI are controlled by the MCP implementation in your DAW, so they are not customizable unless specifically otherwise stated. The rate at which the screen updates certain parameters is controlled by the frequency of the corresponding MIDI messages in the DAW. These update rates have changed with various Ableton Live updates.

I want to add a custom function:

To alter and customize controls beyond standard MCP, please review the DAW developer support on customizing controller assignments in expert view. In some DAWs, it is possible to assign [Key Commands](#) (instead of MCP functions) to MIDI Input generated from buttons on Icon control surfaces. In the typical style of MCP implementation, device-specific MIDI input used by the DAW for MCP is blocked from other uses.

I want to rescale the faders:

The fader volume curve, zero dB position and value range are preset in the DAW implementation of MCP, and can't be adjusted. There is variance between different DAWs.

I want to change the Jog Wheel resolution:

The behavior of the [Jog Wheel](#) is preset in the DAW implementation of MCP. There is variance between different DAWs. **There may be some adjustment for this, at least by changing grid settings.** Pressing [Scrub](#) enables fine movement with the [Jog Wheel](#).

<<<<<<<<<< Firmware Update >>>>>>>>>>

To accommodate future changes to MCP implementation in new DAW versions plus expand on operational features, Icon provides Firmware updates for current production and legacy control surfaces.

Press and hold the Encoder Knob on channel one and start the device. Turn Encoder Knob 8 to adjust the total fader response. It is also possible to adjust a single fader by now holding down Rec on channel three while adjusting the encoder of each channel. A higher value results in smoother, quieter response. A lower value results in faster movement speed. To save the new changes and exit, press Encoder Knob 8.

I recommend starting with a slower movement, test in your DAW and evaluate, then adjust individually to personal preference.

Appendix B

Cubase

<<<<<<<< MCP MIDI Implementation >>>>>>>>

This is a list of standard MCP functions in Cubase and their MIDI CC control values.

MIDI Ch1	Functionl	nfo	Functionl	nfo
	<u>Cubase</u>		<u>Cubase</u>	
C1	Select 1	<i>Channel Select</i>	G#1	Encoder 1 <i>Press Encoder</i>
C#1	Select 2	<i>Channel Select</i>	A1	Encoder 2 <i>Press Encoder</i>
D1	Select 3	<i>Channel Select</i>	A#1	Encoder 3 <i>Press Encoder</i>
D#1	Select 4	<i>Channel Select</i>	B1	Encoder 4 <i>Press Encoder</i>
E1	Select 5	<i>Channel Select</i>	C2	Encoder 5 <i>Press Encoder</i>
F1	Select 6	<i>Channel Select</i>	C#2	Encoder 6 <i>Press Encoder</i>
F#1	Select 7	<i>Channel Select</i>	D2	Encoder 7 <i>Press Encoder</i>
G1	Select 8	<i>Channel Select</i>	D#2	Encoder 8 <i>Press Encoder</i>
C-1	Rec 1	<i>Channel Rec</i>	E2	Page Up
C#-1	Rec 2	<i>Channel Rec</i>	F2	Page Down
D-1	Rec 3	<i>Channel Rec</i>	F#2	Pan <i>Assignment</i>
D#-1	Rec 4	<i>Channel Rec</i>	G2	Plugin <i>Assignment</i>
E-1	Rec 5	<i>Channel Rec</i>	G#2	EQ <i>Assignment</i>
F-1	Rec 6	<i>Channel Rec</i>	A2	FX Send <i>Assignment</i>
F#-1	Rec 7	<i>Channel Rec</i>	A#2	Bank Up <i>Bank 8 Channels</i>
G-1	Rec 8	<i>Channel Rec</i>	B2	Bank Down <i>Bank 8 Channels</i>
G#-1	Solo 1	<i>Channel Solo</i>	C3	Channel Up <i>Bank One Channel</i>
A-1	Solo 2	<i>Channel Solo</i>	C#3	Channel Down <i>Bank One Channel</i>
A#-1	Solo 3	<i>Channel Solo</i>	D3	Flip <i>Fader Flip Mode</i>
B-1	Solo 4	<i>Channel Solo</i>	D#3-	
C0	Solo 5	<i>Channel Solo</i>	A#4	Undo
C#0	Solo 6	<i>Channel Solo</i>	B4	Redo
D0	Solo 7	<i>Channel Solo</i>	C5	Save
D#0	Solo 8	<i>Channel Solo</i>	C#5-	
E0	Mute 1	<i>Channel Mute</i>	C6	Left
F0	Mute 2	<i>Channel Mute</i>	C#6	Right
F#0	Mute 3	<i>Channel Mute</i>	D6	Loop

MIDI Ch1	Functionl	nfo	Functionl	nfo
	Cubase		Ch1 Cubase	
G0	Mute 4	<i>Channel Mute</i>	D#6-	
G#0	Mute 5	<i>Channel Mute</i>	E6	<i>Previous (Layer 2)</i>
A0	Mute 6	<i>Channel Mute</i>	F6	<i>Add (Layer 2)</i>
A#0	Mute 7	<i>Channel Mute</i>	F#6	<i>Next (Layer 2)</i>
B0	Mute 8	<i>Channel Mute</i>	F7	<i>Scrub</i>
A6	Stop		D5	<i>Read Automation</i>
A#6	Play		D#5	<i>Write Automation</i>
B6	Record	<i>Main record</i>	E5	<i>Sends Automation</i>
C7	Cursor Up	^	F5	<i>Project Automation</i>
D7	Cursor Left	<	F#5	<i>Mixer Automation</i>
E7	Zoom		G5	<i>Motors</i>
D#7	Cursor Right	>	E3	<i>Name/Value Display</i>
C#7	Cursor Down	∨	F3	<i>SMPTE/Beats Display</i>
G6	Rewind	<<	F#3	<i>F1 Function</i>
G#6	FastForward	>>	G3	<i>F2 Function</i>
G#5	Instrument		G#3	<i>F3 Function</i>
A5	Master		A3	<i>F4 Function</i>
A#5	Solo Defeat		A#3	<i>F5 Function</i>
B5	Write		B3	<i>F6 Function</i>
			C4	<i>F7 Function</i>
			C#4	<i>F8 Function</i>
D4	Group 1	<i>Layer 2 (Fader Groups)</i>	F#4	<i>Group 5 Layer 2 (Fader Groups)</i>
D#4	Group 2	<i>Layer 2 (Fader Groups)</i>	G4	<i>Group 6 Layer 2 (Fader Groups)</i>
E4	Group 3	<i>Layer 2 (Fader Groups)</i>	G#4	<i>Group 7 Layer 2 (Fader Groups)</i>
F4	Group 4	<i>Layer 2 (Fader Groups)</i>	A4	<i>Group 8 Layer 2 (Fader Groups)</i>

Logic Pro X

<<<<<<<<<< MCP MIDI Implementation >>>>>>>>>

This is a list of supported standard MCP functions in Logic Pro X and their MIDI CC control values. Each CC triggers the indicated function when the device is configured as an MCP device in the DAW. Buttons can be assigned a custom CC value using iMap software.

MIDI Ch1	Functionl	nfoM	MIDI Ch1	Functionl	nfo
	Logic Pro X			Logic Pro X	
C1	Select 1	<i>Channel Select</i>	G#1	Encoder 1	<i>Press Encoder</i>
C#1	Select 2	<i>Channel Select</i>	A1	Encoder 2	<i>Press Encoder</i>
D1	Select 3	<i>Channel Select</i>	A#1	Encoder 3	<i>Press Encoder</i>
D#1	Select 4	<i>Channel Select</i>	B1	Encoder 4	<i>Press Encoder</i>
E1	Select 5	<i>Channel Select</i>	C2	Encoder 5	<i>Press Encoder</i>
F1	Select 6	<i>Channel Select</i>	C#2	Encoder 6	<i>Press Encoder</i>

MIDI Ch1	Functionl Logic Pro X	nfoM	MIDI Ch1	Functionl Logic Pro X	nfo
F#-1	Rec 7	<i>Channel Rec</i>	A#2	Bank Up	<i>Bank 8 Channels</i>
G-1	Rec 8	<i>Channel Rec</i>	B2	Bank Down	<i>Bank 8 Channels</i>
G#-1	Solo 1	<i>Channel Solo</i>	C3	Channel Up	<i>Bank One Channel</i>
A-1	Solo 2	<i>Channel Solo</i>	C#3	Channel Down	<i>Bank One Channel</i>
A#-1	Solo 3	<i>Channel Solo</i>	D3	Flip	<i>Fader Flip Mode</i>
B-1	Solo 4	<i>Channel Solo</i>	D#3	Global View	
C0	Solo 5	<i>Channel Solo</i>	A#4	Shift	
C#0	Solo 6	<i>Channel Solo</i>	B4	Option	
D0	Solo 7	<i>Channel Solo</i>	C5	Control	<i>B+ Only</i>
D#0	Solo 8	<i>Channel Solo</i>	C#5	Cmd	<i>DAW Mode</i>
E0	Mute 1	<i>Channel Mute</i>	C6	Marker	
F0	Mute 2	<i>Channel Mute</i>	C#6	Nudge	
F#0	Mute 3	<i>Channel Mute</i>	D6	Cycle	
G0	Mute 4	<i>Channel Mute</i>	D#6	Drop	
G#0	Mute 5	<i>Channel Mute</i>	E6	Replace	
A0	Mute 6	<i>Channel Mute</i>	F6	Click	
A#0	Mute 7	<i>Channel Mute</i>	F#6	Solo	<i>Region Solo Mode</i>
B0	Mute 8	<i>Channel Mute</i>	D7	Scrub	
A6	Stop		D5	Read	<i>Automation</i>
A#6	Play		D#5	Write	<i>Automation</i>
B6	Record	<i>Main record</i>	E5	Trim	<i>Automation</i>
C7	Cursor Up	^	F5	Touch	<i>Automation</i>
C#7	Cursor Left	<	F#5	Latch	<i>Automation</i>
D#7	Zoom		G5	Group	
E7	Cursor Right	>	E3	Name/Value	<i>Display</i>
F7	Cursor Down	√	F3	SMPTE/Beats	<i>Display</i>
G6	Rewind	<<	F#3	F1	<i>Function</i>
G#6	Fast Forward	>>	G3	F2	<i>Function</i>
G#5	Save	<i>QCon Pro X, B+ only</i>	G#3	F3	<i>Function</i>
A5	Undo	<i>QCon Pro X, B+ only</i>	A3	F4	<i>Function</i>
A#5	Cancel	<i>QCon Pro X, B+ only</i>	A#3	F5	<i>Function</i>
B5	Enter	<i>QCon Pro X, B+ only</i>	B3	F6	<i>Function</i>
			C4	F7	<i>Function</i>
			C#4	F8	<i>Function</i>
D4	Global Tracks	<i>! Not mapped</i>	F#4	Global Aux	<i>! Not mapped</i>
D#4	Global Inputs	<i>! Not mapped</i>	G4	Global Bus	<i>! Not mapped</i>
E4	Global Audio	<i>! Not mapped</i>	G#4	Global Output	<i>! Not mapped</i>
F4	Global Instrument	<i>! Not mapped</i>	A4	Global User	<i>! Not mapped</i>

Pro Tools HUI

<<<<<<<< MCP MIDI Implementation >>>>>>>>

This is a list of supported standard MCP functions in Pro Tools and their MIDI CC control values. Each CC triggers the indicated function when the device is configured as an MCP device in the DAW. Buttons can be assigned a custom CC value using iMap software.

MIDI Functionl	nfoM	MIDI Functionl	nfo
Ch1 Pro Tools		Ch1 Pro Tools	
C1 Select 1	<i>Channel Select</i>	G#1 Encoder 1	<i>Press Encoder</i>
C#1 Select 2	<i>Channel Select</i>	A1 Encoder 2	<i>Press Encoder</i>
D1 Select 3	<i>Channel Select</i>	A#1 Encoder 3	<i>Press Encoder</i>
D#1 Select 4	<i>Channel Select</i>	B1 Encoder 4	<i>Press Encoder</i>
E1 Select 5	<i>Channel Select</i>	C2 Encoder 5	<i>Press Encoder</i>
F1 Select 6	<i>Channel Select</i>	C#2 Encoder 6	<i>Press Encoder</i>
F#1 Select 7	<i>Channel Select</i>	D2 Encoder 7	<i>Press Encoder</i>
G1 Select 8	<i>Channel Select</i>	D#2 Encoder 8	<i>Press Encoder</i>
C-1 Rec 1	<i>Channel Rec</i>	E2 Pan	<i>Assignment</i>
C#-1 Rec 2	<i>Channel Rec</i>	F2 Plugin	<i>Assignment</i>
D-1 Rec 3	<i>Channel Rec</i>	F#2 Assign	<i>Assignment</i>
D#-1 Rec 4	<i>Channel Rec</i>	G2 Send	<i>Assignment</i>
E-1 Rec 5	<i>Channel Rec</i>	G#2 Input	
F-1 Rec 6	<i>Channel Rec</i>	A2 Output	
F#-1 Rec 7	<i>Channel Rec</i>	A#2 Bank Up	<i>Bank 8 Channels</i>
G-1 Rec 8	<i>Channel Rec</i>	B2 Bank Down	<i>Bank 8 Channels</i>
G#-1 Solo 1	<i>Channel Solo</i>	C3 Channel Up	<i>Bank One Channel</i>
A-1 Solo 2	<i>Channel Solo</i>	C#3 Channel Down	<i>Bank One Channel</i>
A#-1 Solo 3	<i>Channel Solo</i>	D3 V-sel	
B-1 Solo 4	<i>Channel Solo</i>	D#3 Insert	
C0 Solo 5	<i>Channel Solo</i>	A#4 Shift	<i>Add</i>
C#0 Solo 6	<i>Channel Solo</i>	B4 Option	<i>All</i>
D0 Solo 7	<i>Channel Solo</i>	C5 Control	<i>Clutch</i>
D#0 Solo 8	<i>Channel Solo</i>	C#5 Cmd	<i>Alt</i>
E0 Mute 1	<i>Channel Mute</i>	C6 In	<i>RTZ</i>
F0 Mute 2	<i>Channel Mute</i>	C#6 Out	<i>End</i>
F#0 Mute 3	<i>Channel Mute</i>	D6 Cycle	<i>Pre</i>
G0 Mute 4	<i>Channel Mute</i>	D#6 Online	<i>Post</i>
G#0 Mute 5	<i>Channel Mute</i>	E6 QPunch	
A0 Mute 6	<i>Channel Mute</i>	F6 Cue	<i>Mgr</i>
A#0 Mute 7	<i>Channel Mute</i>	F#6 Suspend	
B0 Mute 8	<i>Channel Mute</i>	D7 Scrub	
A6 Stop		F#3 F1	<i>Function</i>
A#6 Play		G3 F2	<i>Function</i>
B6 Record	<i>Main record</i>	G#3 F3	<i>Function</i>
C7 Cursor Up	<i>^</i>	A3 F4	<i>Function</i>

MIDI Functionl		nfoM	MIDI Functionl	nfo
Ch1 Pro Tools			Ch1 Pro Tools	
D7	Cursor Left	<	A#3	F5 <i>Function</i>
E7	Zoom		B3	F6 <i>Function</i>
D#7	Cursor Right	>	C4	F7 <i>Function</i>
C#7	Cursor Down	√	C#4	F8 <i>Function</i>
D4	Read	<i>Send A</i>	G6	Rewind <<
D#4	Write	<i>Send B</i>	G#6	FastForward >>
E4	Touch	<i>Send C</i>	G#5	Save
F4	Latch	<i>Send D</i>	A5	Undo
F#4	Trim	<i>Send E</i>	A#5	Escape <i>Cancel</i>
G4	Off	<i>Shift</i>	B5	Enter
E3	Name/Value	<i>Display</i>	F#5	Auto Enable <i>Send</i>
F3	SMPTE/Beats	<i>Display</i>	G5	Auto Enable <i>Send Mute</i>
D5	Auto Enable	<i>Fader</i>	G#4	Blank <i>Mute</i>
D#5	Auto Enable	<i>Mute</i>	A4	Default <i>Bypass</i>
E5	Auto Enable	<i>Plugin</i>		
F5	Auto Enable	<i>Pan</i>		

Ableton Live 10

<<<<<<<<< MCP MIDI Implementation >>>>>>>>

This is a list of supported standard MCP functions in Ableton Live and their MIDI CC control values. Each CC triggers the indicated function when the device is configured as an MCP device in the DAW. Buttons can be assigned a custom CC value using iMap software.

MIDI Function		Info	MIDI Function	Info
Ch1 Ableton			Ch1 Ableton	
C1	Select 1	<i>Channel Select</i>	G#1	Encoder 1 <i>Press Encoder</i>
C#1	Select 2	<i>Channel Select</i>	A1	Encoder 2 <i>Press Encoder</i>
D1	Select 3	<i>Channel Select</i>	A#1	Encoder 3 <i>Press Encoder</i>
D#1	Select 4	<i>Channel Select</i>	B1	Encoder 4 <i>Press Encoder</i>
E1	Select 5	<i>Channel Select</i>	C2	Encoder 5 <i>Press Encoder</i>
F1	Select 6	<i>Channel Select</i>	C#2	Encoder 6 <i>Press Encoder</i>
F#1	Select 7	<i>Channel Select</i>	D2	Encoder 7 <i>Press Encoder</i>
G1	Select 8	<i>Channel Select</i>	D#2	Encoder 8 <i>Press Encoder</i>
C-1	Rec 1	<i>Channel Rec</i>	E2	I/O <i>Assignment</i>
C#-1	Rec 2	<i>Channel Rec</i>	F2	Send <i>Assignment</i>
D-1	Rec 3	<i>Channel Rec</i>	F#2	Pan <i>Assignment</i>
D#-1	Rec 4	<i>Channel Rec</i>	G2	Plugin <i>Assignment</i>
E-1	Rec 5	<i>Channel Rec</i>	G#2	Page Up <i>Assignment</i>
F-1	Rec 6	<i>Channel Rec</i>	A2	Page Down <i>Assignment</i>
F#-1	Rec 7	<i>Channel Rec</i>	A#2	Bank Up <i>Bank 8 Channels</i>

MIDI	Function	Info	MIDI	Function	Info
Ch1	Ableton		Ch1	Ableton	
G-1	Rec 8	<i>Channel Rec</i>	B2	Bank Down	<i>Bank 8 Channels</i>
G#-1	Solo 1	<i>Channel Solo</i>	C3	Channel Up	<i>Bank One Channel</i>
A-1	Solo 2	<i>Channel Solo</i>	C#3	Channel Down	<i>Bank One Channel</i>
A#-1	Solo 3	<i>Channel Solo</i>	D3	Flip	<i>Fader Flip Mode</i>
B-1	Solo 4	<i>Channel Solo</i>	D#3	Returns	
C0	Solo 5	<i>Channel Solo</i>	A#4	Shift	
C#0	Solo 6	<i>Channel Solo</i>	B4	-	<i>Option</i>
D0	Solo 7	<i>Channel Solo</i>	C5	-	<i>Control</i>
D#0	Solo 8	<i>Channel Solo</i>	C#5	-	<i>Alt</i>
E0	Mute 1	<i>Channel Mute</i>	C6	Previous	<i>Marker</i>
F0	Mute 2	<i>Channel Mute</i>	C#6	Next	<i>Marker</i>
F#0	Mute 3	<i>Channel Mute</i>	D6	Cycle	
G0	Mute 4	<i>Channel Mute</i>	D#6	Punch In	
G#0	Mute 5	<i>Channel Mute</i>	E6	Punch Out	
A0	Mute 6	<i>Channel Mute</i>	F6	Start	
A#0	Mute 7	<i>Channel Mute</i>	F#6	End	
B0	Mute 8	<i>Channel Mute</i>	F7	Scrub	
A6	Stop		F#3	F1	<i>User Function</i>
A#6	Play		G3	F2	<i>User Function</i>
B6	Record	<i>Main record</i>	G#3	F3	<i>User Function</i>
C7	Cursor Up	^	A3	F4	<i>User Function</i>
D7	Cursor Left	<	A#3	F5	<i>User Function</i>
E7	Zoom		B3	F6	<i>User Function</i>
D#7	Cursor Right	>	C4	F7	<i>User Function</i>
C#7	Cursor Down	v	C#4	F8	<i>User Function</i>
D5	Session/Arrange	<i>Automation</i>	G6	Rewind	<<
D#5	Track/Clip	<i>Automation</i>	G#6	FastForward	>>
E5	Undo	<i>Automation</i>	G#5	Back To Arrange	<i>Automation</i>
F5	Browser	<i>Automation</i>	A5	Draw	<i>Automation</i>
F#5	Clip Detail	<i>Automation</i>	A#5	Marker	
G5	Redo		B5	Follow	
E3	Meter	<i>Display</i>			
F3	SMPTE/Beats	<i>Display</i>			
D4	F9	<i>Layer 2 (Function)</i>	F#4	F13	<i>Layer 2 (Function)</i>
D#4	F10	<i>Layer 2 (Function)</i>	G4	F14	<i>Layer 2 (Function)</i>
E4	F11	<i>Layer 2 (Function)</i>	G#4	F15	<i>Layer 2 (Function)</i>
F4	F12	<i>Layer 2 (Function)</i>	A4	F16	<i>Layer 2 (Function)</i>

AppendixC

Cubase

Mackie Control mode function table (Nuendo/Cubase - PVC Overlay)

Controller	Function
Channel Strip	
Encoder 1 - 8 (Rotate) Use with button Pan, EQ, Inserts, Master, FX Sen & Por drive III	Adjust parameters of channel 1-8 according to selected function (Pan, EQ, Inserts, Master, FX Send & Por drive III) Press the desired function and rotate the channel knob
Encoder 1 - 8 (Enter) Use with button Pan, EQ, Inserts, Master, FX Sen & Por drive III	Adjust parameters of channel 1-8 according to selected function (Pan, EQ, Inserts, Master, FX Sen & Por drive III) Press the desired function and press the channel knob
Fader 1-8	Adjusting correspondance channel volume
Fader M	Adjusting Master channel volume
Button "(Explorer)" 1-8	Select track correspondently
Button "M" 1-8	Activate/inactivate "Mute" function of the correspondance track
Button "S" 1-8	Activate/inactivate "Solo" function of the correspondance track
Button "(dot)" 1-8	Activate/inactivate "Record" function of the correspondance track
Channel and fader control	
Button "Motor"	
Button "Lock"	Lock all the faders
Button "Flip"	Swap the control for the faders and the rotary encoder knobs
Button "Track <"	Shift one channel up for all the faders except the master fader
Button "Track >"	Shift one channel down for all the faders except the master fader
Button "Bank <"	Shift eight channel up for all the faders except the master fader
Button "Bank >"	Shift eight channel down for all the faders except the master fader
Transport	
Button "(Loop)"	Activate the loop function
Button "<<"	Activate the rewind function
Button ">>"	Activate the fast forward function
Button "(Stop)"	Activate the stop function
Button "(Play)"	Activate the play function
Button "(Rec)"	Activate the record function
User define function	
Button "Shift" (Use with F1-F8 buttons)	Press to use F1-F8 buttons as F9-F16 correspondently
Button "F1-F8"	Self define function
Assignment	
Button "Pan" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "EQ" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "Inserts" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "Master" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "FX Send" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"
Button "Por drive III i" (Use with 1-8 encoders)	Please refer to "Encoder 1-8 (Rotate & Enter)"

Button "Page Up <<"	Flip page backward for the above functions
Button "Page Down >>"	Flip page forward for the above functions
Window control	
Button "Mixer"	Switch to mixer window
Utilities	
Button "Edit"	Activate the edit function to edit the track
Button "Undo"	Activate the undo function to undo the last command
Button "Redo"	Activate the redo function to redo the last command
Button "Save"	Activate the save function
Button "Punch"	Activate the punch function
Button "Left"	Jump to the left most of a loop
Button "Right"	Jump to the far right of a loop
Marker controls	
Button "Prev."	Jump to previous marker point from the current position
Button "Add"	Add a marker point at the current position
Button "Next"	Jump to next marker point from the current position
Automation	
Button "Read"	Activate the read function for automation
Button "Write"	Activate the write function to write a automation track
Navigation	
Jog wheel (Rotate)	Scrolling the play-line forward & backward
Button L/R	Selecting between tracks
Button Up/Down	Selecting track vertically
Buttons "Zoom" + "L/R"	Zoom in/out track horizontally
Buttons "Zoom" + "Up/Down"	Zoom in/out track vertically

Logic Pro X

Mackie Control mode function table (Logic Pro)

Controller	Function
Channel Strip	
"Encoder 1 - 8 (Rotate) Use with button Track, Pan/Surround, EQ, Send, Plug-in & Inst."	Adjust parameters of channel 1-8 according to selected function (Track, Pan/Surround, EQ, Send, Plug-in & Inst)
"Encoder 1 - 8 (Enter) Use with button Track, Pan/Surround, EQ, Send, Plug-in & Inst."	Adjust parameters of channel 1-8 according to selected function (Track, Pan/Surround, EQ, Send, Plug-in & Inst)
Fader 1-8	Adjusting correspondance channel volume
Fader M	Adjusting Master channel volume
Button "(Explorer)" 1-8	Select track correspondently
Button "M" 1-8	Activate/inactivate "Mute" function of the correspondance track
Button "S" 1-8	Activate/inactivate "Solo" function of the correspondance track
Button "(dot)" 1-8	Activate/inactivate "Record" function of the correspondance track
Channel and fader control	
Button "Lock"	Lock all the faders
Button "Flip"	Swap the control for the faders and the rotary encoder knobs
Button "Track <"	Shift one channel up for all the faders except the master fader
Button "Track >"	Shift one channel down for all the faders except the master fader

Button "Bank <"	Shift eight channel up for all the faders except the master fader
Button "Bank >"	Shift eight channel down for all the faders except the master fader
Transport	
Button "(Loop)"	Activate the loop function of the DAW
Button "<<"	Activate the rewind function of the DAW
Button ">>"	Activate the fast forward function of the DAW
Button "(Stop)"	Activate the stop function of the DAW
Button "(Play)"	Activate the play function of the DAW
Button "(Rec)"	Activate the record function of the DAW
User define function	
Button "Shift"	Additional function for different controls
Button "F1-F8"	Self define functions at Logic
View controls	
Button "Global View"	Activate to enter into Global View mode. Use in conjunction with the below 8 different views buttons to switch between different window views
Button "MIDI Tracks"	Press to launch the MIDI tracks window view
Button "Inputs"	Press to launch the Inputs window view
Button "Audio Tracks"	Press to launch the Audio tracks window view
Button "Audio Inst"	Press to launch the Audio Inst window view
Button "Aux"	Press to launch the Aux window view
Button "Busses"	Press to launch the Busses window view
Button "Outputs"	Press to launch the Outputs window view
Button "User"	Press to launch the User window view
Effect/Channel control	
Button "Track"	Activate the "Track" function and use in conjunction with all the knobs
Button "Pan/Surround"	"Press button: Activate Pan/Surround function Rotate knob: Adjust pan/surround parameters Press knob (enter): Center value"
Button "EQ"	"Press button: Launch selected channel's EQ function panel Rotate knob: Adjust EQ parameters Press knob (enter): Reset to default value"
Button "Send"	"Press button: Activate Send function Rotate knob: Adjust sending bus Press knob (enter): Confirm selected bus "
Button "Plug-in"	"Press button: Launch selected channel's Plug-in function panel Rotate knob: Adjust plug-in parameters Press knob (enter): Reset to default value"
Button "Instrument"	"Press button: Launch selected channel's Instrument function panel Rotate knob: Adjust Instrument parameters Press knob (enter): Reset to default value"
Automation	
Button "Group"	Activate the group function of the selected channel
Button "Read/Off"	Activate the read function of the selected channel
Button "Write"	Activate the write function of the selected channel
Button "Touch"	Activate the touch function of the selected channel
Button "Latch"	Activate the latch function of the selected channel

Button "Trim"	Activate the trim function of the selected channel
Utilities	
Button "Marker"	Make a marker point along a project
Button "Nudge"	Activate the nudge function
Button "Click"	Activate the metronome click sound
Button "Drop"	Activate the drop function
Button "Replace"	Activate the replace mode (A type of overwrite recording mode where the existing audio regions in a section of the Tracks area are replaced by a new recording)
Button "Solo"	Activate the solo tool that allow you to play a region or event in isolation
Button "Save"	Activate the save function to save your project
Button "Undo"	Activate the undo function to undo the last command
Button "Cancel"	Activate the cancel function to cancel the current command
Button "Enter"	Activate the enter function
Navigation	
Jog wheel (Rotate)	Scrolling the play-line forward & backward
Button L/R	Selecting between tracks
Button Up/Down	Selecting track vertically
Zoom + Button Up/Down	Zoom in and out of the track

ProTools HUI

HUI mode function table (Pro Tool - PVC Overlay)

Function	Control sequency [xxxx] = Button (xxxx) = Knob
Navigation	
Page up (Shift 8 channels up)	Press [Bank <<8 Ⓜ]
Page down (Shift 8 channel down)	Press [Bank 8>> Ⓜ]
Track up (Shift one channel up)	Press [Channel < Ⓜ]
Track up (Shift one channel down)	Press [Channel > Ⓜ]
Assign a Send	
Assign Send A (e.g. Send A on channel 1)	Press [Assign Ⓜ] - Press [Send A Ⓜ] - Rotate (Channel 1 Knob)
Assign Send B (e.g. Send B on channel 2)	Press [Assign Ⓜ] - Press [Send B Ⓜ] - Rotate (Channel 2 Knob)
Assign Send C (e.g. Send C on channel 3)	Press [Assign Ⓜ] - Press [Send C Ⓜ] - Rotate [Channel 3 Knob]
Assign Send D (e.g. Send D on channel 4)	Press [Assign Ⓜ] - Press [Send D Ⓜ] - Rotate [Channel 4 Knob]
Assign Send E (e.g. Send E on channel 5)	Press [Assign Ⓜ] - Press [Send E Ⓜ] - Rotate [Channel 5 Knob]
Adjust the send level (e.g. Send A level on Ch. 1)	Press [Assign Ⓜ] - Press [Send A Ⓜ] - Rotate (Channel 1 Knob) to adjust the level
Assign Plug-in	
Adding a plug-in to a track's slot1-4 (e.g. xx to Ch.1 / Plug-in slot 1)	Press [Sel] on Ch.1 - Press [Plug-in Ⓜ] - Press (Knob 1-4) to select the slot 1-4 - Press [Plug-in Assign] - Rotate (Knob) to select plug-in - Press [Plug-in Assign] to exit {Tip: Press (Knob 5) to exit in any state}

Adding a plug-in to a track's slot 5 (e.g. to Ch.1 / Plug-in slot 5)	Press [Sel] on Ch.1 - Press [Plug-inⓉ] - Rotate (the 5th Knob) to turn page - Press (Knob 1-4) to select the slot 1-4 - Press [Plug-in Assign] - Rotate (Knob) to select plug-in - Press [Plug-in Assign] to exit {Tip: Press (Knob 5) to exit in any state}
Edit a plug-in (e.g. Plug-in on Ch. 1 / Plug-in slot 2)	Press [Sel] on Ch.1 - Press [Plug-inⓉ] - Press (Knob 2) - Rotate (Knob) to adjust parameters - Press (Knob 5) to exit
Automation	
Activate the Read function of the automation on the selected channel (e.g. Ch.1 Read function)	Press and hold [Read⑦] - Press (Channel 1 Knob)
Activate the Write function of the automation on the selected channel (e.g. Ch.1 Write function)	Press and hold [Write⑧] - Press (Channel 1 Knob)
Activate the Touch function of the automation on the selected channel (e.g. Ch.1 Touch function)	Press and hold [Touch⑨] - Press (Channel 1 Knob)
Activate the Latch function of the automation on the selected channel (e.g. Ch.1 Latch function)	Press and hold [WriteⓉ] - Press (Channel 1 Knob)
Activate the Trim function of the automation on the selected channel (e.g. Ch.1 Trim function)	Press and hold [TrimⓉ] - Press (Channel 1 Knob)
Turn Off the automation of the selected channel (e.g. Ch.1 Latch function)	Press and hold [OffⓉ] - Press (Channel 1 Knob)
Suspend the automation of the selected channel (e.g. Ch.1 Suspend function)	Press and hold [OffⓉ] - Press (Channel 1 Knob)
Channel Strip	
Activate the Channel Rec function	Press [Channel Rec] of the selected channel
Activate the Channel Solo function	Press [Channel Solo] of the selected channel
Activate the Channel Mute function	Press [Channel Mute] of the selected channel
Select a Channel	Press [Channel Sel] or touch the (Channel Fader cap)
Control buttons	
Channel Pan (Mono track)	Press [PanⓉ], it light - Rotate the correspondance channel (Knob 1-8)
Channel Pan (Stereo track)	Press [PanⓉ] twice, it flashes - Rotate the correspondance channel (Knob 1-8)
Windows buttons	
Opens or Closes the Edit window	Press [EditⓉ]
Opens or Closes the Mix window	Press [MixⓉ]
Modifiers	
Extends the edit selection's region boundary (Zoom mode off)	Press [Shift②] - Press [←④] or [→④]
Extends the selection to the previous or next track	Press [Shift②] - Press [Ⓣ] or [④]
Centers the left or right side of the on-screen waveform selection in the Edit window	Press [Option④] - Press [←④] or [→④]
Removes the selection from the topmost or bottommost track	Press [Option④] - Press [Ⓣ] or [④]

Disengage a fader from any Mix group. Release the button and the fader obeys group behavior again. Used to offset a fader's level within a group	Press [Ctrl ③]
Scrolls the frontmost window to the left or right	Press [Cmd ①] - Press [◀④①] or [▶④③]
Scrolls the frontmost window upward or downward	Press [Cmd ①] - Press [⬆④②] or [⬇④④]
Utilities	
Save the project	Press [Save ⑤③] twice
Undo the last edit operation	Press [Undo ⑤④]
Abort or exit a process	Press [Esc ④③]
Defines a memory location or marker during playback or recording	Press [Enter ⑤⑤]
Transport buttons	
Set Edit selection "In" point to the current locator position	Press [IN ②⑦]
Set Edit selection "Out" point to the current locator position	Press [Out ②⑧]
Activate the Rewind function	Press [Rewind ⑤⑥]
Activate the Loop function	Press [Loop ⑤⑦]
Activate the Fastforward function	Press [Fastforward ⑤⑧]
Activate the Record function	Press [Rec ⑤⑨]
Activate the Play function	Press [Play ⑤⑦]
Activate the Stop function	Press [Stop ⑤⑧]
Jog Wheel & Scrub button	
Switching the Jog wheel function from Scrub to Shuttle	Press [Scrub ⑤⑨] (Toggles squency: Scrub - Shuttle - Off)
Scrubs or Shuttles forward	Rotate (Jog wheel) clockwise
Scrubs or Shuttles backward	Rotate (Jog wheel) anti-clockwise
Zoom & Navigation buttons	
<i>Navigation mode (Zoom/42 button is off)</i>	
Navigation arrow	Rotate (Jog Wheel)
Moves the edit cursor to the previous region boundary or sync point	Press [◀④①]
Moves the edit cursor to the next region boundary or sync point	Press [▶④③]
Mark-in & mark-out controls	Press [⬆④②] & [⬇④④] or [IN ②⑦] & [Out ②⑧]
<i>Zoom mode (Press Zoom/42 once to enter: light)</i>	
Decreases the horizontal zoom	Press [◀④①]
Increases the horizontal zoom	Press [▶④③]
Decreases the vertical zoom	Press [⬆④②]
Increases the vertical zoom	Press [⬇④④]
<i>Selection mode (Press Zoom/42 twice to enter: Flash)</i>	
Adjust the selection "In" point for making a selection	Press & hold [◀④①] - Rotate the (Jog wheel)
Adjust the selection "Out" point for making a selection	Press & hold [▶④③] - Rotate the (Jog wheel)
Positions the cursor at the current selection's left edge	Press twice [◀④①]

Positions the cursor at the current selection's right edge	Press twice [\gg] [43]
Moves the selection to the previous track	Press [40]
Moves the selection to the next track	Press [42]

Ableton Live 10

Mackie Control mode function table (Ableton Live - PVC Overlay)

Controller	Function
Channel Strip	
Encoder 1 - 8 (Rotate)	Channel 1-8 pan
Encoder 1 - 8 (Enter)	Only use in conjunction with some functions
Fader 1-8	Adjusting correspondance channel volume
Fader M	Adjusting Master channel volume
Button "(Explorer)" 1-8	Select track correspondently
Button "M" 1-8	Activate/inactivate "Mute" function of the correspondance track
Button "S" 1-8	Activate/inactivate "Solo" function of the correspondance track
Button "(dot)" 1-8	Activate/inactivate "Record" function of the correspondance track
Fader controls	
Button "Lock"	Lock all the faders
Button "Flip"	Swap the control for the faders and the rotary encoder knobs
Button "Track <"	Shift one channel up for all the faders except the master fader
Button "Track >"	Shift one channel down for all the faders except the master fader
Button "Bank <"	Shift eight channel up for all the faders except the master fader
Button "Bank >"	Shift eight channel down for all the faders except the master fader
Transport	
Button "(Loop)"	Activate the loop function
Button "<<"	Activate the rewind function
Button ">>"	Activate the fast forward function
Button "(Stop)"	Activate the stop function
Button "(Play)"	Activate the play function
Button "(Rec)"	Activate the record function
Controls / Functions	
Button "View Selector"	Press to switch between "Session view" and "Arrangement view"
Button "Track/Clip view"	Press to switch between "Track view" and "Clip view"
Button "Show/Hide browser"	Press to show or hide the left browser section
Button "Show/Clip detail"	Press to expand the Clip view area by hiding the effect section
Marker controls	
Button "Prev."	Jump to previous marker point from the current position
Button "Add"	Add a marker point at the current position
Button "Next"	Jump to next marker point from the current position
Assignment	
Button "I/O"	Press to activate the "I/O" fuction, use in conjunction with the channel knobs to adjust the audio destination for the "Audio To" setting
Button "Pan"	Press to activate the "Pan" function, use in conjunction with the channel knobs to adjust each channel pan value

Button "Send"	Press to activate the "Send" function and rotate the correspondance channel knob to adjust the Send A and Send B value
Button "Instrument Rack"	Only effect on "Instructment track". Press the Instructment Rack button and then the first channel knob to enter to adjsutment setting. Rotate channel knobs 1-8 to adjust the Marco1-8 values
Button "Return Track"	Activate to control the Return tracks
Navigation	
Jog wheel (Rotate)	"Session view: Scrolling through the clips up and down Arrangement view: Scrolling the play-line forward & backward"
Buttons "Zoom" + "L/R"	"Session view: Zoom button could not be activtaed Arrangement view: Zoom in/out track horizontally"
Buttons "Zoom" + "Up/Down"	"Session view: Zoom button could not be activtaed Arrangement view: Zoom in/out track horizontally"



<p>天猫官方旗舰店</p>  <p>天猫店iconproaudio旗舰店</p>	<p>抖音号</p>  <p>抖音iCON艾肯</p>	<p>哔哩哔哩</p>  <p>B站iCONProAudio 中国地区用户</p>	<p>微信公众号</p>  <p>微信号iCON-PRO</p>	<p>官方售后QQ</p>  <p>4006311312.114.qq.com</p>
--	--	--	---	--

<p>Twitter</p>  <p>www.twitter.com/iconproaudio</p>	<p>Instagram</p>  <p>www.instagram.com/iconproaudio</p>	<p>Facebook</p>  <p>www.facebook.com/iconproaudio</p>	<p>Youtube</p>  <p>www.youtube.com/iconproaudio</p>
--	--	---	--

<p>Website</p>  <p>www.iconproaudio.com</p>	<p>Support</p>  <p>support.iconproaudio.com</p>	<p>Dashboard</p>  <p>iconproaudio.com/dashboard/</p>
---	---	---

www.iconproaudio.com